Non Handed Door Closer - Adjustable Hold Open Arm **Regular** Arm Top Jamb Mount


Installation Instructions

WARNING

Parallel Arm

This product can expose you to lead which is known to the state of For more information go to www.P65warnings.ca.gov.

Ce produit peut vous exposer au plomb qui, dans l'état de la Californie, California to cause cancer and birth defects or other reproductive harm. est reconnu pour causer le cancer, des anomalies congénitales ou d'autres problèmes de reproduction. Pour plus d'informations, visitez: www.P65warnings.ca.gov.

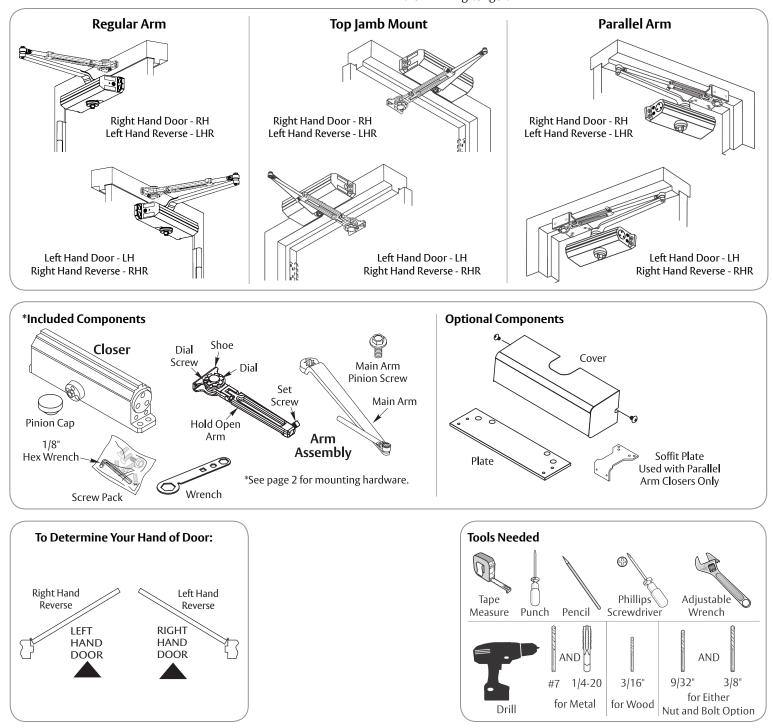

Before You Begin

ATTENTION:


An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These installation instructions should be followed to avoid the possibility of misapplication or misadjustment.


- For special applications, a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.
- Doors should be hung on ball bearing or anti-friction hinges.
- A separate door stop is recommended.

- Always consult door/frame manufacturer for fastener compatibility.
- Door and frame must be properly reinforced.
- Adjust closing time speed between 3 and 7 seconds from 90° to 0°.
- These door closers should NOT be installed on exposed side (weather side) of exterior doors.
- Dimensions are given in inches (millimeters).

Mounting Hardware		Door or Frame	Drill	
	Closer, H/O Shoe or Optional PA Bracket: 1/4-14 x 1-1/2 Oval Flat Head Mach. Screw	Wood	3/16" (4.76mm)	
Tunnu	Closer, H/O Shoe or Optional PA Bracket: 1/4-20 x 3/4 Oval Flat Head Mach. Screw	Metal	Drill #7 (.201 dia. or 5.10mm) Tap 1/4-20	
(Danam)	H/O Shoe to Optional PA Bracket: 1/4-20 x 1/2 Oval Flat Head Mach. Screw	Metal		
	Closer: Sleeve Nut and Bolt (SNB) (optional)	Hollow Metal	9/32" (7.00mm) thru 3/8" (9.50mm) door face opposite to closer	
		Aluminum or Wood	3/8" (9.50mm) thru	
	Closer: Thru Bolt and Grommet Nut (TBGN) (optional)	All	9/32" (7.00mm) thru 3/8" (9.50mm) dia. x 3/8" (9.500mm) deep, door face opposite to closer	

Closer Adjustments

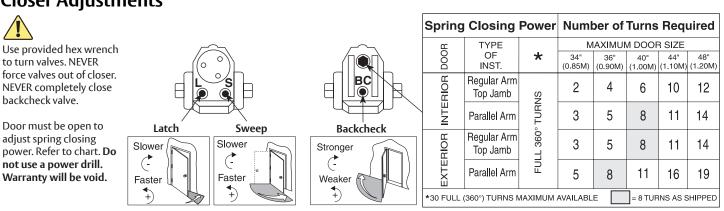


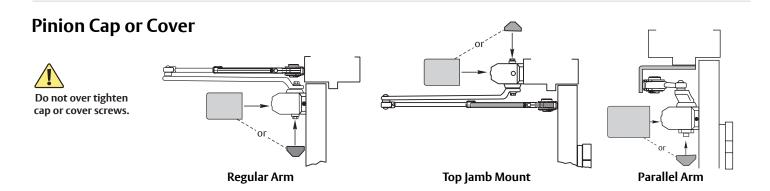

80-9316-3002-000 Rev 1 05/19

Regular Arm Installation (Right Hand Shown)


1. Prepare door and frame.

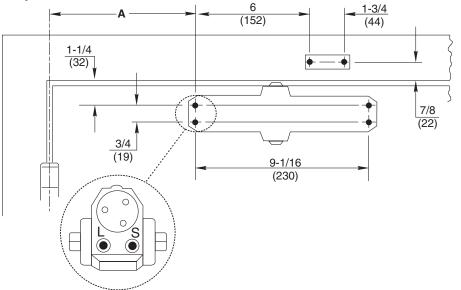

Opening	Dimension "A"	
To 100°	7 (178)	
101° to 120°	<u>6</u> (152)	
*121° to 180°	<u>3-1/2</u> (89)	

* Door/Wall/Hardware/Jamb conditions permitting


2. Mount closer to door.

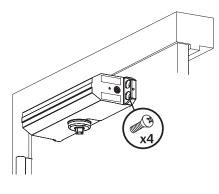

3a. Remove dial from Hold Open arm.



3b. Install separate arms.

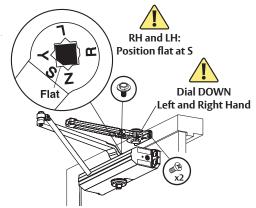

4. Connect arms, preload spring and tighten set screw.

02.0

5. Set Hold Open.

1st


3rd

(i) Rotating arm preloads closer

spring power.

3rd

Keep door open in position until dial screw secures dial.

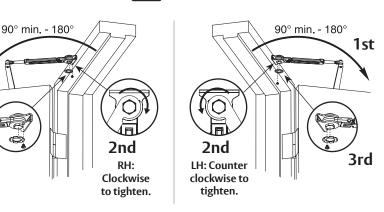

You've installed Hold Open Closer - Regular Arm.

Go to page 2 for closer adjustments and decorative cap or cover installation.

2nd


Rotate elbow until

Hold Open arm is perpendicular to frame.

1st

Top Jamb Mount Installation (Right Hand Shown)

1. Prepare door and frame.

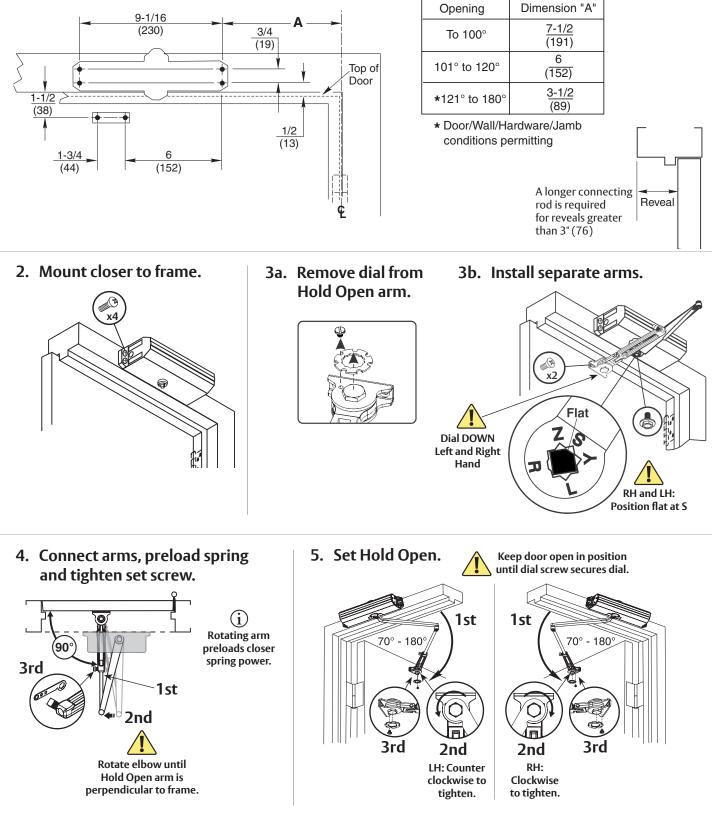


You've now installed Hold Open Closer - Top Jamb Mount.

• Go to page 2 for closer adjustments and decorative cap or cover installation.

Parallel Arm Installation (Right Hand Shown)


1. Prepare door and frame.

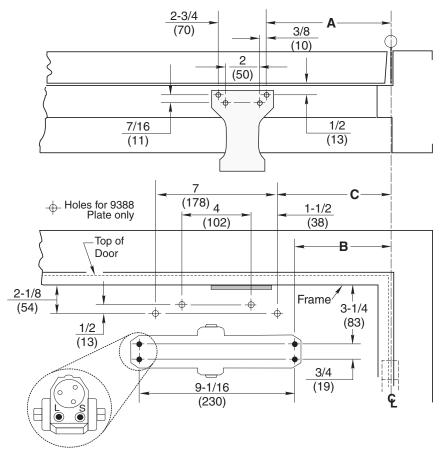


Door Opening	A	в-ф-	сф
To 100°	<u>9-1/4</u>	<u>7-5/8</u>	<u>8-5/8</u>
	(235)	(194)	(219)
101° to 130°	<u>7-3/4</u>	<u>6-1/8</u>	<u>7-1/8</u>
	(197)	(156)	(181)
* 131° to 180°	<u>5-3/4</u>	<u>4-1/8</u>	<u>5-1/8</u>
	(146)	(105)	(130)

^{*} Door/Wall/Hardware/Jamb conditions permitting


2. Close latch and sweep valves.

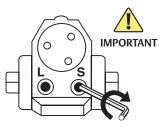


3. Remove dial from Hold Open arm.

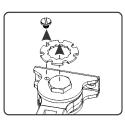


4. Install soffit plate and mount closer.

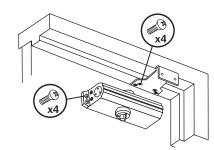


5. Install Hold Open arm to plate.

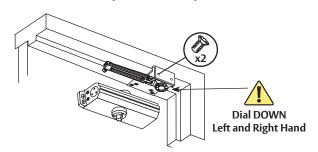


6. Place main arm on closer spindle and rotate.

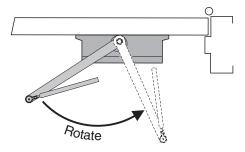

7. Remove arm and attach as shown.

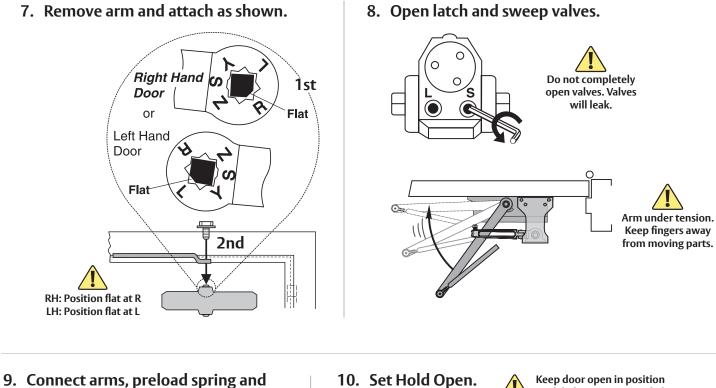

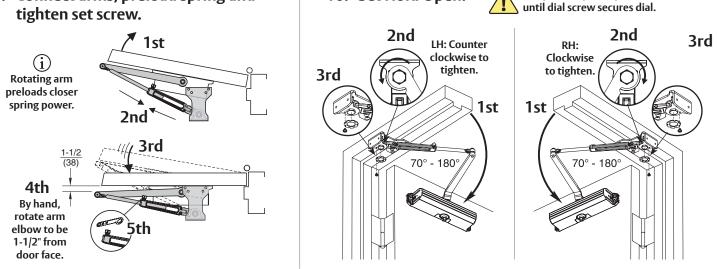

You've now installed Hold Open Closer - Parallel Arm.

Go to page 2 for closer adjustments and decorative cap or cover installation.