

- With or without "DL" suffix, delayed action closing feature.
- With or without "M" suffix, Metal Cover.

Non Hold Open Models

Note:

For Special Applications a separate door and frame preparation template is packed with these instructions. Use this sheet for installation sequence and closer adjustments only.

CAUTION

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadjustment.

- Sized Door Closers 440 have 50% power increase capability. Closer size 2 has the weakest power, closer size 6 has the strongest power.
- Multi-Sized Closer 4440 can be adjusted from size 1 thru 6.



For Use on Doors with 41/2" or 5" Wide Butt Hinges

- Maximum pull side frame reveal is 1/8" (3mm).
- Minimum frame face for pull side is 1-1/8" (26.6mm).
- All components are non handed.
- The use of ball bearing hinges is recommended for the door on which the closer will be installed. Door must swing freely.
- Where severe or abusive conditions are expected a separate door stop, supplied by others, is recommended to assist in preventing damage to the door closer, closer arm; or to the door, frame or adjacent walls.
- Door and frame must be properly reinforced, or the use of special fasteners employed, to prevent door collapse or the mounting screws from pulling out.
- All dimensions are given in inches with corresponding metric dimensions (millimeters) in parentheses.

Template

Pull Side Installation



Installation Sequence Pull or Push Side Mount

- Determine hand of door and type of installation from illustrations on page 1.
- Use template dimensions to locate fastener holes on door and frame. See "Preparation for Fasteners" chart below.
- Frame: Prepare the frame for mounting track. Drill and tap holes for 1/4-20 machine screws or #14 wood screws..
- **Door:** Prepare the door for mounting closer. Drill and tap (4) holes for 1/4-20 machine screws, #14 wood screws, 3/8 diameter sex-nuts, or through bolts and grommet-nuts.
- **Note:** If drop plate is used, prepare holes for 486 drop plate instead of closer. Secure drop plate before mounting closer.
- Fasten closer to door or drop plate. Position spring tube away from hinge. See arm indexing illustrations (above right) for valve positioning (up or down). Secure mounting screws.
- Assemble Slide Arm. Insert flat arm rod into arm tube with the counterbore screw hole facing up. Align counterbore with the 3rd hole in the arm tube and secure with 8-32 x 1/4 long hex socket cap screw. See illustration on page 2 or 4.
- Install arm on closer pinion see arm indexing illustrations (above right). Position slide arm with counterbore facing up and align with pinion flat as illustrated. Install onto pinion. Secure with washer and flat head phillips drive arm screw with thread lock.

Preparation for Fasteners $\bullet \bullet$			
Fasteners	Door or Frame	e Drill Sizes	
#14 type "A" S.M. screw Arm: 1-1/4" (32mm) Closer: 2-3/4" (70mm)	Wood	7/32" (5.56mm)	
1/4" -20 machine screw	Metal	drill: #7 (.201") tap: 1/4" -20	
Sex-nuts and bolts	Hollow Metal	9/32" (7.00mm) through 3/8" (9.50mm) door-face opposite to closer	
	Aluminum or Wood	3/8" (9.50mm) through	
Through-bolts and grommet-nuts (Optional)	All	9/32" (7.00mm) through; 3/8" (9.50mm) dia. x 3/8" (10mm) deep door- face opposite to closer	

Track Assembly

Remove slider assembly parts from box # 40-7940-0050-000 and insert into channel in the order shown. See illustration on page 2 or 4.

Use of a hold open device or assembly will void the UL® listing for this product.

Insert end caps into ends of track prior to installing.

- Install track to frame. Place the assembled slide track against frame with the open side down, stop and cushion blocks toward the hinge. Move the slider to the opposite end of the slide track. Secure slide track with 1/4-20 flat head phillips drive mounting screws.
- Connect arm to track. Open door approximately 5"(127mm), rotate arm to slider and place end on stud. Push down on arm and tap gently to seat (to prevent stud from turning during assembly). Secure with 1/4-20 x 5/8" long truss (rounded) head phillips drive screw with thread lock. CAUTION: Closer arm is under spring tension and may be difficult to rotate.
- Set door stop angle. Open door to the angle you want the door to stop. With the door held at that location, slide stop with cushion block against slider. Tighten the stop position screw (large set screw) with 3/16" hex wrench (from screw pack) until secure. Release door.
- Adjust closer (see page 5) before installing cover.
- Install Cover. Slide insert into cover slot (see illustration). Fasten cover to closer with (2) 8-32 x 1/4" long round head phillips drive screws.

Template

Push Side Installation

Closer Adjustments

Closing Power

440 Models come in five different sizes (2 through 6); each power size can be increased by 50%. Adjust as required. **See Figure 1.**

4440 Models are fully adjustable. For proper sizing see **Power Adjustment Chart.** To adjust closer power, **see Figure 1.** Increase or decrease power as necessary.

Closing Cycle (see illustrations above).

- Valve "L" controls door speed in Latch Range. Valve "S" (optional) Delayed Action Closer only. Controls door speed in Sweep Range.
- Valve "SD" controls door speed in Sweep Range for Standard Closer or Delay Range for Delayed Action Closer

Use 1/8" hex-key furnished and adjust all valves as shown in **Figure 2.**

Attention: Adjust closing speed to between 4 to 7 seconds from 90°. Use of door by handicapped, elderly or small children may require greater closing time.

Opening Cycle (see illustration above).

- Valve "B" cushions (slows) door opening in the Backcheck Range.
 - NOTE: Never close this valve completely or damage to closer may occur.
 - Valve **"P"** allows "backcheck" to begin later in the opening cycle when required.

Yale ® is a registered trademark of Yale Security Inc., an ASSA ABLOY Group company. Copyright © 1997, 2009, Yale Security Inc., an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Yale Security Inc. is prohibited.

4440ST/P4440ST Models

Power Adjustment Chart				
Door Size Inches (mm)	Full Clockwise Turns of Closer Power Adjustment Nut			
	Interior Door	Exterior Door		
<u>30</u> (762)	4	6		
<u>34</u> (863.6)	5	8		
<u>36</u> (914.4)	7	11		
<u>42</u> (1066.8)	9	13		
48 (1219.2	11	15		
<u>54</u> (1371.6)	13	16		

NOTE: Maximum of 16 turns (360°) of Power Adjustment Nut. Closer is shipped set at midpoint power setting.

