
Bar Cutoff Instruction:


- 1.Remove push bar.
- 2. Tap mounting cap off hinge end of bar using a mallet or punch.
- 3.Re-install push bar, collapse, and tape down in area of cut-off.
- 4. Mark cut length on tape, see cutting guide on website for calculation.
- 5. Saw off excess, remove tape and deburr.
- 6. Tap mounting cap into bar using a soft mallet to protect finish.
- 7. Continue to installation instructions.

NOTE: Roll pin connection is optional; if desired, drill 1/8" holes thru bar using mounting cap as a guide, then install 1/8"ø X 3/8"L

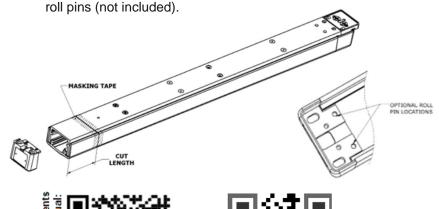


SEPARATING PUSH BAR AND MOUNTING BAR PROCEDURE

- 1. REMOVE BOTH END CAPS. THE RETAINER IS ATTACHED TO THE NOSE END CAP
- 2. SLIDE PUSH BAR TOWARD HINGE SIDE OF DOOR.
- 3. CONTINUE TO SLIDE THE PUSH BAR PAST THE PIVOT PLATE THAT RIDES IN PUSH BAR TRACK.

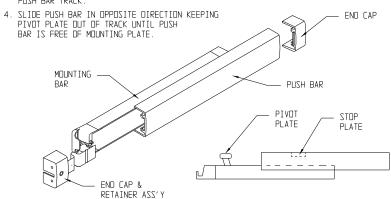

INSTALLING PUSH BAR TO MOUNTING BAR

1. WITH PUSH BAR IN HAND AND MOUNTING BAR ATTACHED TO DOOR, FIND STOP PLATE STAKED INTO PUSH BAR. (THIS PLATE IS ON THE LATCH END OF ASSEMBLED UNIT). SLIDE THE PIVOT PLATE NEAREST HINGE INTO TRACK OF PUSH BAR UNTIL SECOND PIVOT PLATE IS EXPOSED. INSERT PIVOT PLATE INTO TRACK ON PUSH BAR AND SLIDE IN OPPOSITE DIRECTION UNTIL PUSH BAR AND MOUNTING BAR ALIGN.

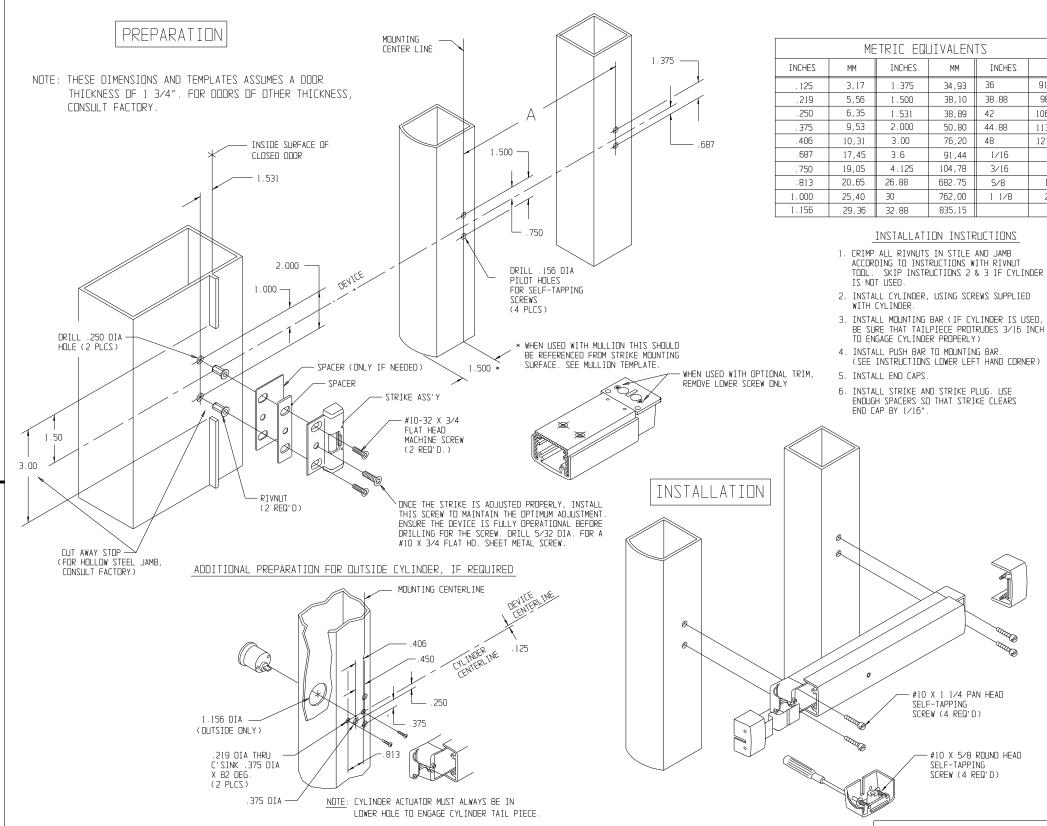



800-872-3267 Fax: 866-582-4641 Rev. **15** 800-232-7329

80-0180-41

8800 RIM EXIT DEVICE FOR ALUMINUM DOOR

INSTALLATION INSTRUCTIONS

INCHES

1.375

1.500

1.531

2.000

3.00

3.6

26.88

32.88

30

4.125

MM

34,93

38,10

91,44

104,78

682.75

762,00

#10 X 1 1/4 PAN HEAD SCREW (4 REQ'D)

- #10 X 5/8 ROUND HEAD SELF-TAPPING

PRODUCT MUST BE INSTALLED

ACCORDING TO ALL APPLICABLE

BUILDING AND LIFE SAFETY CODES

SCREW (4 REQ'D)

835,15

INSTALLATION INSTRUCTIONS

38.89 42

76,20 48

50,80 44.88

INCHES

38.88

1/16

3/16

5/8

1 1/8

MM

914,40

987,55

1066,80

1139.95

1219,20

1,59

4,75

15,88

28,58

Page 1 of 1