

# This operation guide describes the basic functions of your GT Series Tenant Station

For a complete operation manual (3.2 MB), scan QR code or use link to download it from the manufacturer's website: [www.aiphone.com/gt-1d\\_op-man](http://www.aiphone.com/gt-1d_op-man)



## T-Mode Hearing Aid Compatible

This tenant station emits an electromagnetic field, producing clear audio for T-Mode compatible hearing aids.

## Power Source


This tenant station is powered by the system and will always remain on. Contact the building manager if the tenant station in this residence is not working.

## Handset

Pick up the handset to answer an incoming call. Hang up the handset to end a call.

## Chime Volume Control

Use the switch to adjust the chime volume (off, medium, or high). The tone off indicator light blinks slowly when the chime is muted.

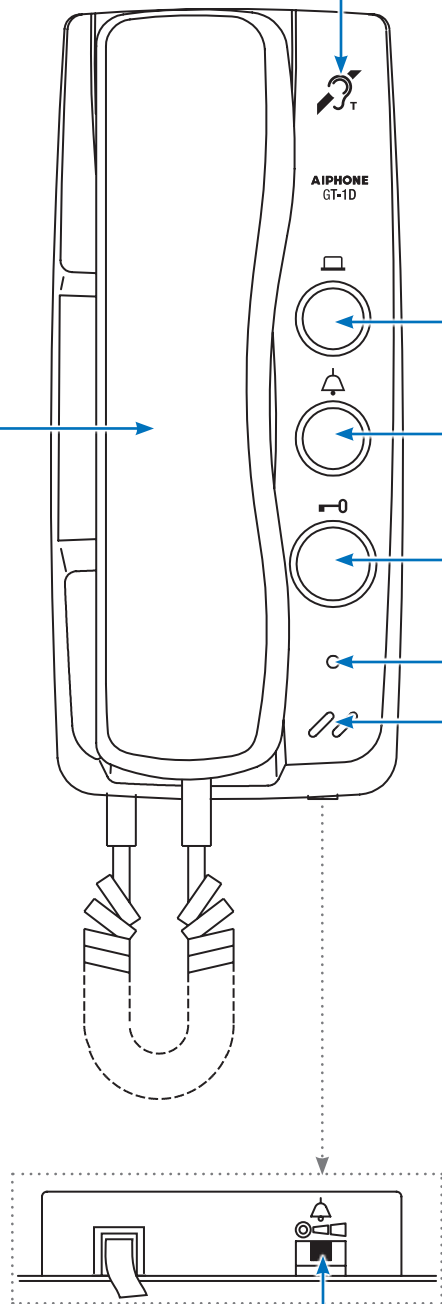

## Option Button

Push the option button to activate an external device (if included).

## Guard Button

Push the guard button to call all guard and concierge stations connected to the system (if included).

## Door Release Button

Push the door release button to unlock the entrance during a call.

## Tone Off Indicator Light

## Chime Speaker