MODEL ZP-8AN REMOTE ANNUNCIATOR PLATE



MODEL ZP-8AN REMOTE PLATE ALLOWS THE REMOTE DISPLAY OF ZONE ANNUNCIATOR STATUS AND THE CAPABILITY OF REMOTE ZONE RESET

SPECIFICATIONS

- EIGHT RED LEDS, REMOTE RESET SWITCH AND BUZZER
- MOUNTED ON SINGLE GANG STAINLESS STEEL WALPLATE



19 BRANDYWINE DRIVE P.O. BOX 280
DEER PARK, NY 11729
1 631 586-4220 1 800 645-5538
WWW.ALARMCONTROLS.COM EMAIL INFO@ALARMCONTROLS.COM

ZP-8AN WIRING INSTRUCTIONS

THE ZP-8AN REMOTE ANNUNCIATOR PLATE PLUGS INTO A MALE CONNECTOR LABELED *REMOTE PLATE* ON THE ZA-8N ZONE ANNUNCIATOR.

CUT THE 12 COLORED LEADS 4" FROM THE CONNECTOR.

CONNECT ADDITIONAL FIELD WIRES TO THE ZP-8AN AND THE ZA-8N AS REQUIRED. BE SURE THAT THE COLORS OF THE FIELD WIRES MATCH THE CONNECTIONS ON BOTH ENDS.

PLUG THE FEMALE CONNECTOR FROM THE ZP-8AN INTO THE CONNECTOR ON THE ZA-8AN.

THE BROWN WIRE ON THE CONNECTOR MUST BE ON THE LEFT!

