

Dealer Keypad Programming. To access Dealer Program Mode, connect jumper between Terminals 3 and 6. Hold down Key (8) until all LEDs light. Keypad now functions as follows:

- Key (1): Advances character in display (1-9, 0, b, C, d, E, and F).
- Key (2): Clears display.
- Key (3): Advances display to next section of a multisection location.
- Keys (*) and (#): Exits Program Mode (with jumper removed from Terminals 3 & 6).

NOTE: DO NOT remove power while in the Program Mode.

Access feature to be programmed by entering its address (see Keypad Programming Sheet). A beep will sound, indicating that feature is ready to be programmed. Enter required data using Key (1). If number displayed is wrong, press Key (2) to clear display. Use Key (3) to advance to next digit of a multi-digit address. After programming is completed, remove jumper between Terminals 3 and 6, then press Keys (*) and (#) to exit the Program Mode. (Caution: Pressing them again -- after the lights go out -- will activate Panic!)

Example: Program Zones 1-6 to Report on Alarm.

Referring to Keypad Programming Sheet, Report on Alarm is at B20, a two-section location. Circle respective data values for Zones 1-6 (1,2,4,8 for section 1; 1, 2 for section 2) on programming sheet (part of which is reproduced below). Add up each section to obtain entries to be programmed ("15" for section 1; "3" for section 2).

FEATURE	ZONE						NO	LOW	CLO	
	1	2	3	4	5	6	AC	BAT	OPN	
REPORT ON ALARM	B29						B45			
	(1)	(2)	(4)	(8)	(1)	(2)	2	4	8	
	← Sect. 1 →				← Sect. 2 →					

NOTE: The programmed entry can be only one character, thus two-digit data totals (such as "15" above) must be converted to a single character. From the following conversion chart, note that "15" is displayed and programmed as an "F".

Entry Total	10	11	12	13	14	15
Display	0	b	C	d	E	F

To program data entries obtained ("F" for section 1; "3" for section 2), install jumper between Terminals 3 and 6. Hold down Key (8) until all LEDs light (Program Mode). Press Keys (8), (2), then Key (8) to access location B29 (Report on Alarm). Press Key (1) repeatedly until "F" (entry for section 1) is displayed. Press Key (3) to advance display to next section. Press Key (1) repeatedly until "3" (entry for section 2) is displayed.

This completes programming for location B29. Either (a) access another location to continue programming or (b) remove jumper between Terminals 3 and 6 and press Keys (*) and (#) to exit Program Mode.