



**ALARM LOCK**

345 Bayview Avenue  
Amityville, New York 11701  
For Sales and Repairs 1-800-ALA-LOCK  
For Technical Service 1-800-645-9440

Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2012


# DL-WINDOWS™ V4.1.x QUICK START GUIDE

WI1152B 3/12


1. To open DL Windows, click the DL Windows icon on the desktop. The Log On screen appears (below). The User Name is "Default"; a password is not required, therefore click **OK** to begin.




Existing accounts appear in the "white area" on the left side of the screen.

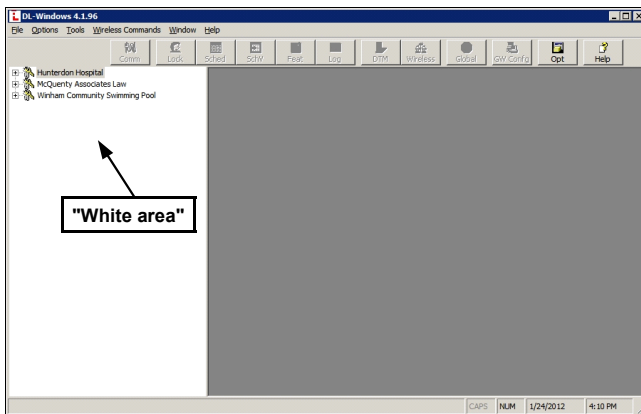


2. To create a new Account, right-click in the white area. From the pop-up window, click **New Account**.

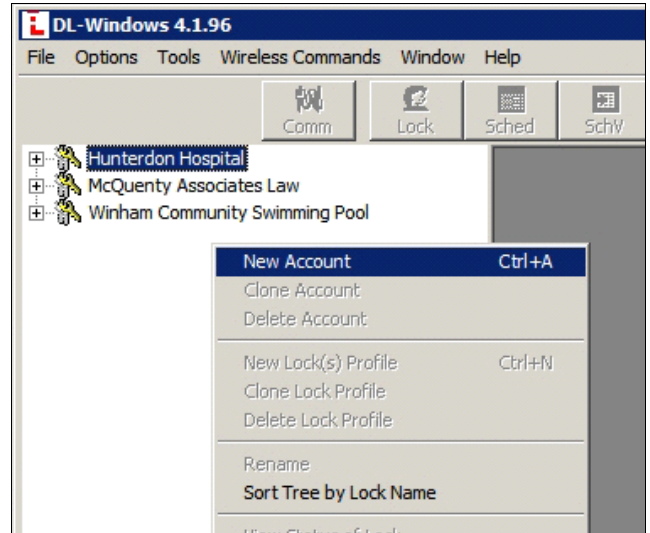


3. In the **New Account** dialog, type a description in the **Enter New Account Description** field, and click **OK**.

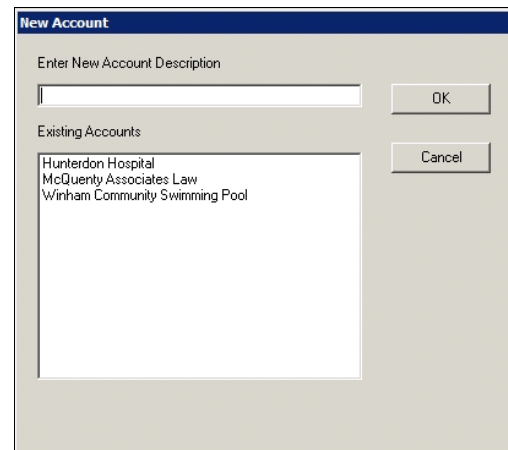


4. **Create Locks.** Click **Yes** when asked to create new lock profiles.

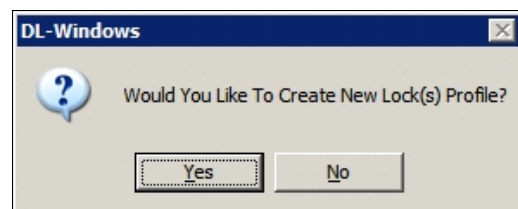


In the **New Lock Profile** dialog (shown below), type a new lock profile description, choose your Lock Type (using the Alarm Lock model numbers) and the number of locks you want to create. When finished, click **OK**.

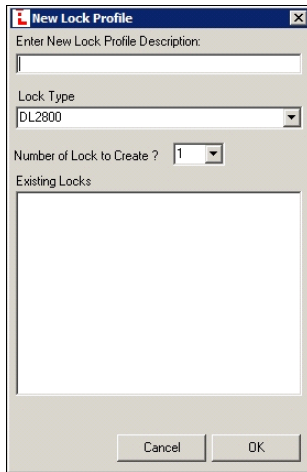


Please note that for each lock created, each rectangle will turn white (no longer grayed-out) in the **Global Users Screen** "Locks Listed by Lock ID" chart (located at the upper right). Up to 2000 locks may be created within each Account, and a maximum of 100 Accounts are allowed within each DL Windows Software installation.

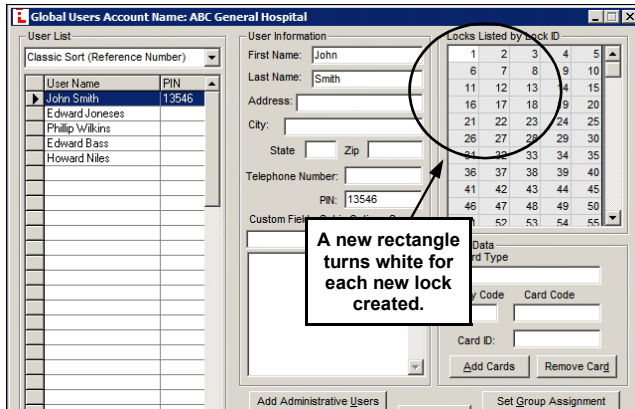


5. To open your newly created Account or an existing Account, click the Account name in the Account list (on the left side of the screen). The **Global** button illuminates.

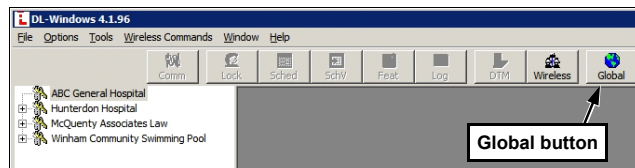


6. Click the **Global** button to open the **Global Users Screen**, and click the **Add Administrative Users** button to set the User Codes for the *Master, Installers, Managers, DTM, PC Download, etc.*

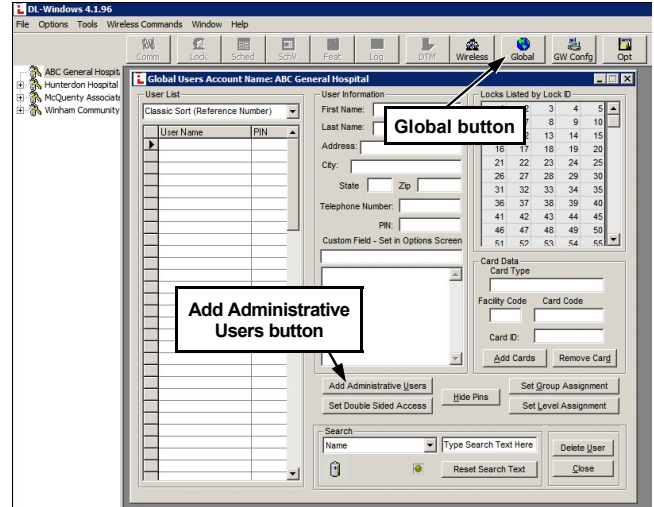


7. Determine your pin and/or Prox codes for the Administrative users. When finished, click the **Accept** button.

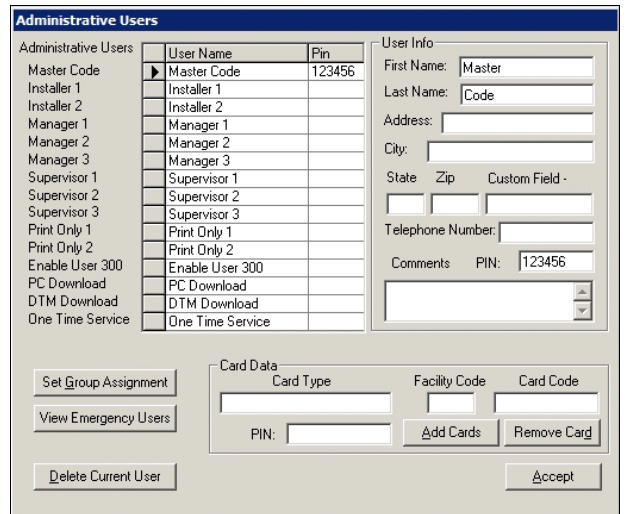

8. Add "Basic Users" to the **Global Users Screen** (add all names first, then go back and add pin codes and/or proximity cards).

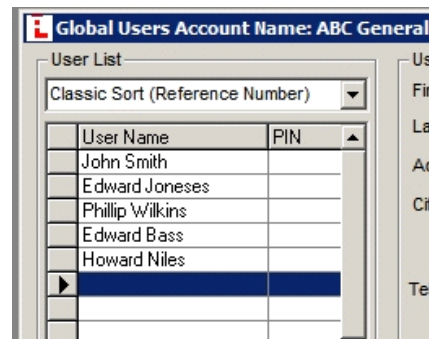


- Add Pin codes** one at a time by either:
  - highlighting individual names and typing each code individually (see image below), or
  - highlight and right-click a name, then have the software create a 4 to 6-digit random code from the pop-up window (see next step).

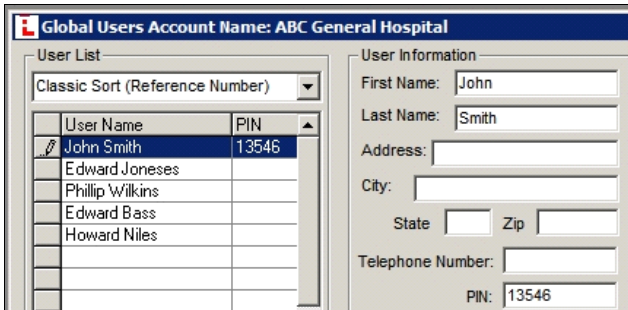


The software can "auto-generate" 4 to 6-digit random codes for multiple users at one time:


- Click to highlight the first User Name;
- Press and hold the keyboard **Shift** key;
- Click to highlight the last User Name;
- Right-click the highlighted area;
- Click **Generate Selected New Codes**.

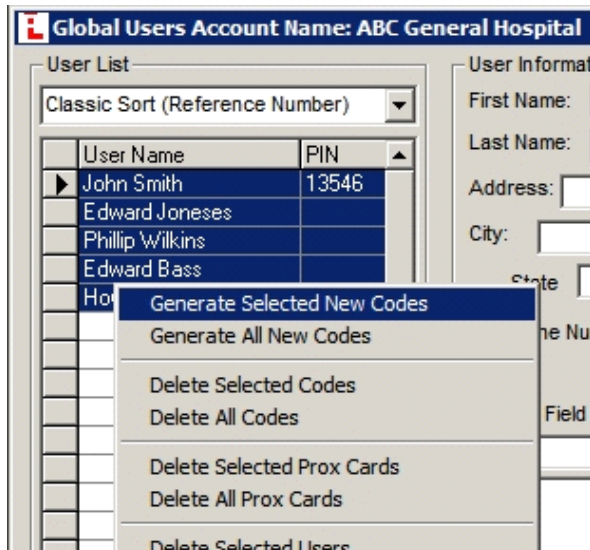


Click **Yes** to the confirmation popup, and select the number of digits in the **Code Length** popup (click a number).

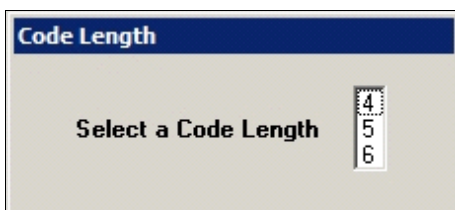

- Add proximity cards to users.** Select a user, click the **Add Cards** button and choose the correct **Card Type** and type the **Card Code** and **Facility Code**. When using HID Prox cards from Alarm Lock, choose "Nap 36bit" as the **Card Type**, "19" for the **Facility Code**, and simply type the **Card Code** which is the number printed on the card itself. When finished, click the **Build Card Data** button. The selected User Name is highlighted when Card Data is successfully added.

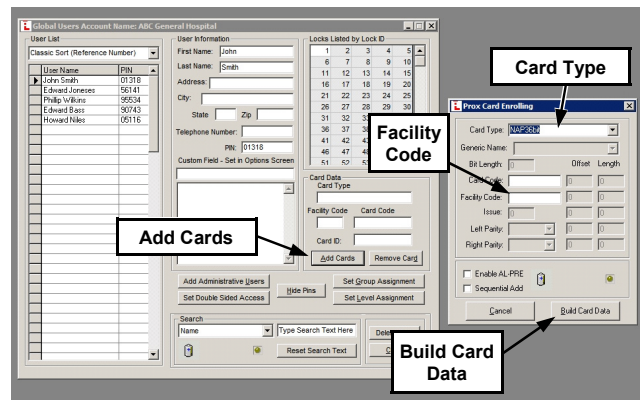



- Add Users to Locks.** In the **Global Users Screen**, simply highlight a User Name in the User List, then double-click the desired lock(s) in the "Locks Listed by Lock ID" chart (located at the upper right). When the Lock ID rectangle turns green, the highlighted user (the user's associated PIN) is added to the lock profile.

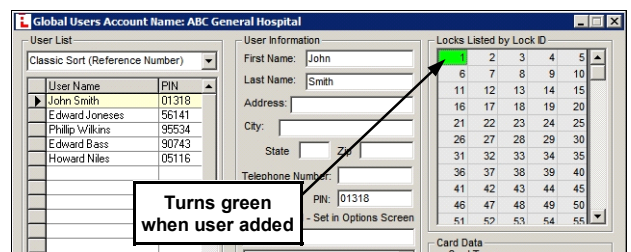


You may also add multiple users to a specific lock –or– to ALL locks in your Account:

- Click to highlight the first User Name;
- Press and hold the **Shift** key;
- Click to highlight the last User Name;
- Right-click the highlighted area;
- Click **Add Selected Users to All Locks**


–or– **Add Selected Users to a Lock** (circled in image below).

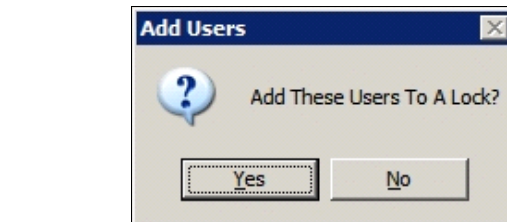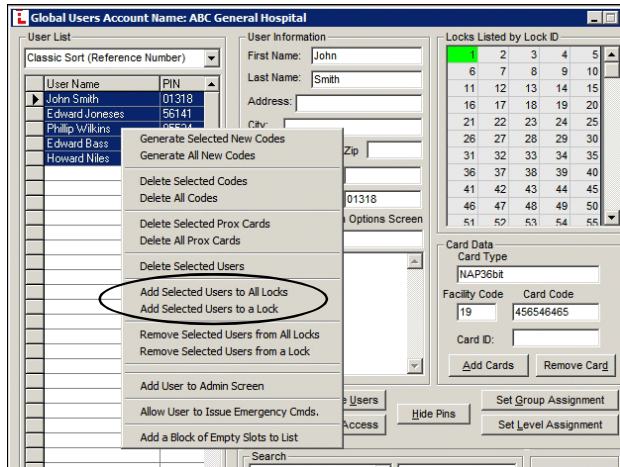


...then select the specific lock in the **Select Door Number** pop-up.

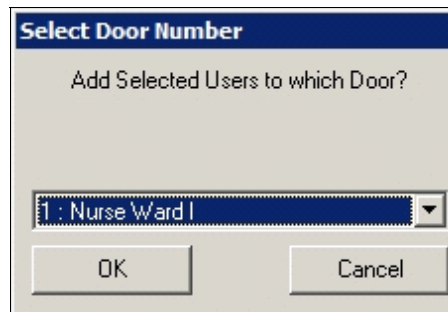

Click **Yes** in the confirmation popup:

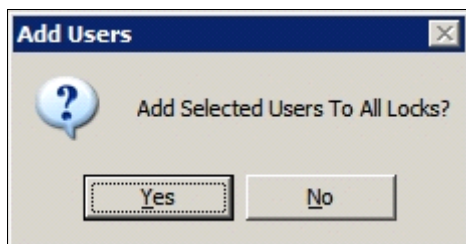


As shown in the image below, specific users have been added to a specific lock. A green Lock ID rectangle indicates the user is added to the lock.

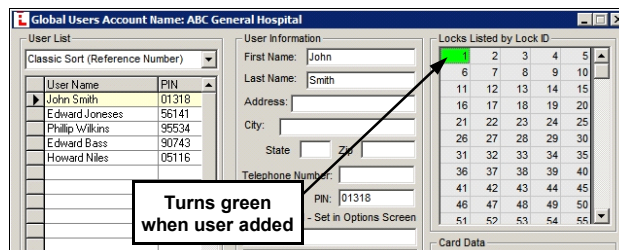

Again, when the Lock ID rectangle turns green, the user is added to the lock.

To add specific users to a specific lock, click the individual User Name while pressing and holding the **Ctrl** keyboard key; this will highlight only those individual users you wish to be added.

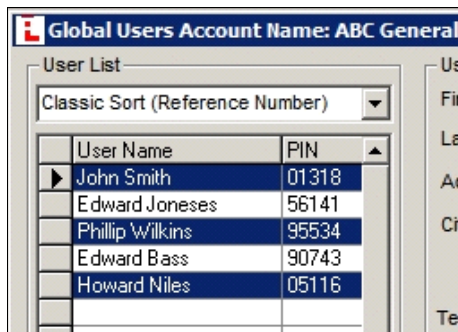


Right-click one of the highlighted areas. Click **Add Selected Users to a Lock**.

Click **Yes** in the **Add Users** pop-up...

## 12. Send program to locks using your laptop:

- In the "white area" on the left side of the screen, double-click the lock you wish to program; The **Lock Data** screen for the selected lock opens.
- Click the **Send/Receive** button;
- Click **Send to Lock**; in the **Send to Lock** dialog, check **All**, then click **Start**;
- If your laptop is connected to the lock with an AL-PCI cable, enter the PC Download code you previously used in the Admin Screen. If the locks are wireless Network system locks and your laptop is connected to the network, the programming will proceed wirelessly.

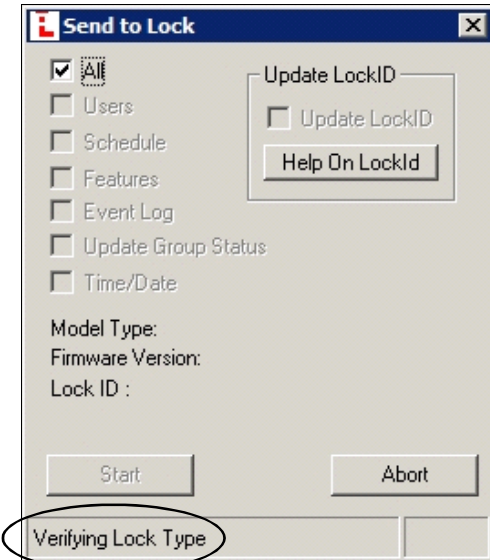

While transmitting, look for the words "Verifying Lock Type" and then rolling numbers at the bottom of the **Send to Lock** screen. When finished, the message reads **Transmission Complete**.

### Comm Button

You can also initiate communications by clicking the **Comm** button on the DL-Windows main screen. When using the Gateway to communicate, click **Communicate with current Network lock**.



The **DL-Windows Network Lock Comm Screen** opens.





This screen includes the name of the lock Pro-

file in the **Lock Name** field, and lists the specific elements of the lock Profile to be transmitted. Note that checking the individual elements will take less time to transmit than compared with checking "**Send/Receive All**".

For new installations, check "**All**" and click the **Start Communication** button. The status bar at the bottom of the window will indicate the communication progress. When communication is complete, a popup will appear. Click **OK** to close the popup, then click **Close** to close the **DL-Windows Network Lock Comm Screen**.

### Using your DTM-III to program the lock:

- Double-click the **DTM** button to open the **DTM 3 Support** screen. A DTM 3 Help Screen appears, detailing the support parameters of the AL-DTM-III data transfer module.

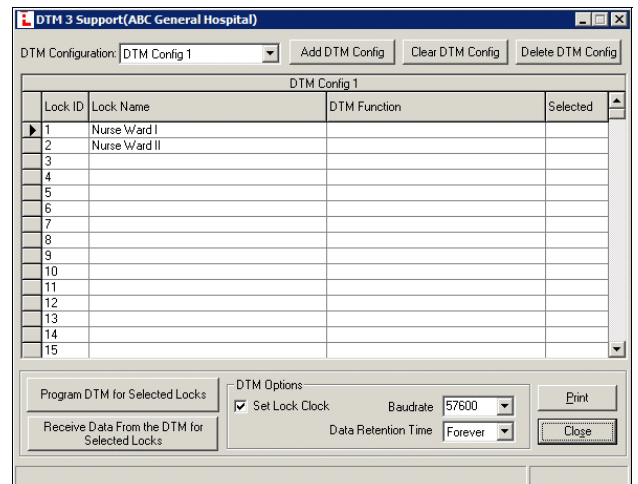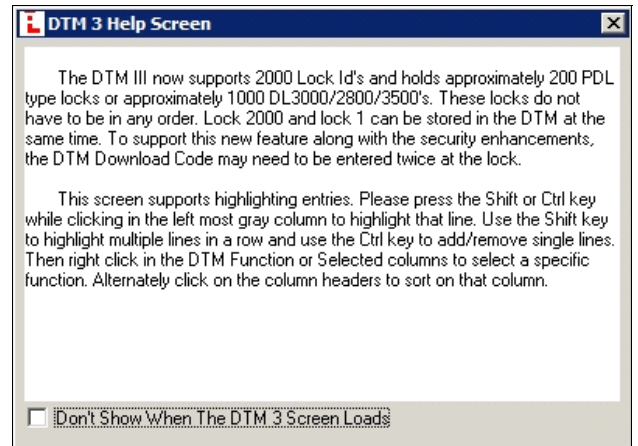

- Under the **DTM Function** column, click the

row for the lock you wish to program and a pull-down list appears. Select **Send Program to Lock**.

- Under the **Selected** column, double-click the row(s) for the lock(s) you wish to program. The check mark (✓) appears for each lock selected (the DTM-III can program up to 2000 lock ID's at one time).
- Click the **Program DTM for Selected Locks** button to start the transmission. As before, rolling numbers at the bottom of the screen indicate the software and DTM-III are transmitting the data.

**This page intentionally left blank**



**ALARM  
LOCK**

345 Bayview Avenue  
Amityville, New York 11701  
For Sales and Repairs 1-800-ALA-LOCK  
For Technical Service 1-800-645-9440  
Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2012