

NAPCO SECURITY GROUP, INC. 333 Bayview Avenue, Amityville, New York, U.S.A. 11701 800-645-9445 (631) 842-9400 FAX (631) 842-9137 Note: Technical Service is for alarm professionals only

Alarm Lock SQA Engineering

TECHNICAL ADVISORY



Date: Monday, December 15, 2014

Subject: Adding Additional Users to the Alarm Lock SQL Database

Models: DL-Windows V5 and greater, Microsoft[®] SQL Server[®] 2008 Express

When using the supplied Alarm Lock instance of Microsoft[®] SQL Server[®] 2008 Express during the DL-Windows installation, the Windows user that is logged in at the time of installation is, by default, set as the *only* SQL user for that database. In cases where Workstations are **NOT** used and multiple Windows users require access to the same DL-Windows database residing on one PC, follow the procedure below. For more information about installing Servers and Workstations, refer to OI382.

Note: If an existing instance of SQL (i.e. SQL 2008 R2) is being used, additional users must be added only through the **SQL Management Studio** software.

1. Open the **Database Configuration** utility and change the **Authentication** to **SQL Authentication** (see image below):

2			Data S
	r	Microsoft	SQL S
Database Server Name			
ENGSQEGALVARADO\ALSQLEXP	RESS	•	
Add Server IP\SQL Name Ex	. 192.168.1.2 ALSQLExpress		
Authentication			
Windows Authentication		-	
SQL Server Authentication			
Password			
Cathar Connect Connect Database			
Enable Database Configuration	Continue (Database Admin On	(k)	
Create New Database	Copuerto (Destabulos Marinin en		
Create New Database and I	import Data from the Previous V	lersion	
<u></u>			
Cancel	Previous	Next	Einish

IMPORTANT TIP: When multiple Windows users must have access to a single DL-Windows installation on a single PC, during the installation of DL-Windows be sure the "Everyone" radio button is selected, as shown in the image below: 🗑 DL-Windows 5 Select Installation Folder The installer will install DL-Windows 5.2.3 to the following folde To install in this folder, click "Next". To install to a different folder, enter it below or click "Browse" C:\Program Files\AlarmLock\DL-Windows 5.2.3 Browse.. Disk Cost Install DL-Windows 5.2.3 for yourself, or for anyone who uses this compute Everyone O Just me Cancel <<u>B</u>ack <u>N</u>ext>



NAPCO SECURITY GROUP, INC. 333 Bayview Avenue, Amityville, New York, U.S.A. 11701 800-645-9445 (631) 842-9400 FAX (631) 842-9137 Note: Technical Service is for alarm professionals only

2. In the **User Name** field, type "sa", and in the **Password** field, type "alarmlock@2012" (quotation marks omitted).

DL-Windows	wiw.akimlock.com 💼 💼 🗮
5.2.3	Data Source Microsoft SQL Server
Database Server Name	
ENGSQEGALVARADO\AL	QLEXPRESS *
Add Server IP\SQL Na Authentication	me Ex. 192.168.1.2\ALSQLExpress
SQL Server Authenticatio	n 👻
User Name	
sa	
Password	
••••••	
Setup/Connect Server Enable Database Conf Create New Databa Create New Databa	Database guration Options <i>(Database Admin Only)</i> es and Import Data from the Previous Version
	Cancel Previous Next Finish

In addition, ensure the **Setup/Connect Server Database** radio button is selected. Click **Next** to continue.

3. In the screen that appears, shown below left, as "Server Mode" is not required, click **Next** to continue to the next screen without making any changes.

DL-Windows	www.alarmlock.com	DL-Windows
Use DL-Windows in Server Mode User Name AlernLock Password Confirm Password		Database configured successfully. Please press finish to save your settings.
Cancel Previous Next Finish		Cancel Previous Next Finish

4. When the message "Database configured successfully" appears, click Finish to complete the configuration process.