



ALARM LOCK
 345 Bayview Avenue
 Amityville, New York 11701
 For Sales and Repairs 1-800-ALA-LOCK
 For Technical Service 1-800-645-9440

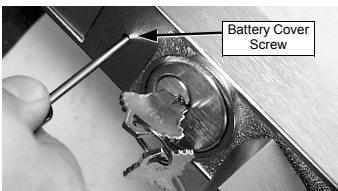
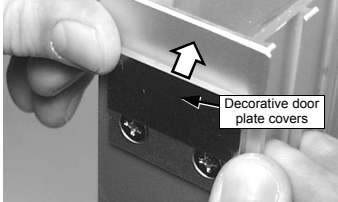
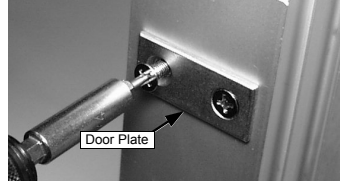

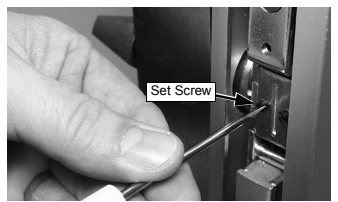

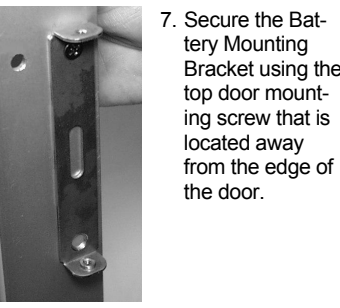
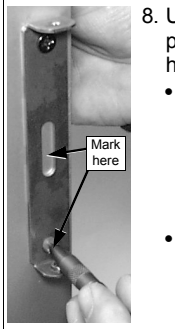
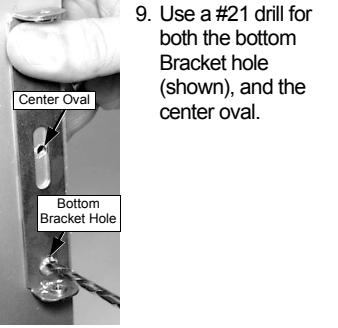
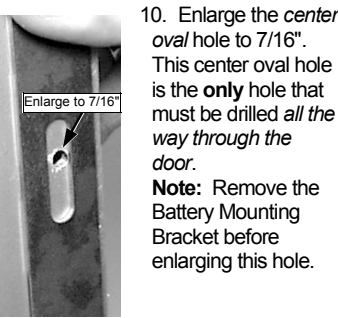
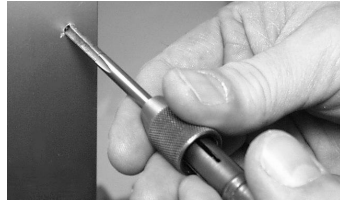
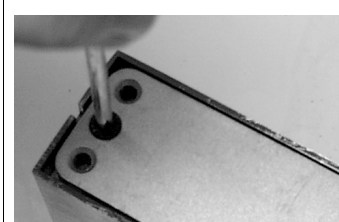
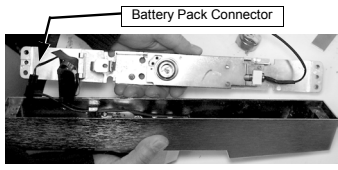
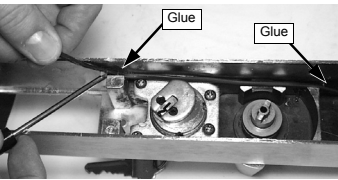
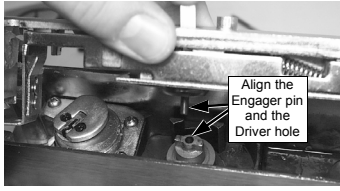
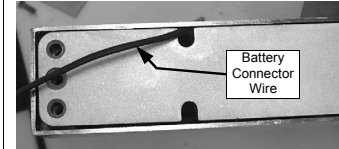
INSIDE BATTERY KIT

 
INSTALLATION INSTRUCTIONS

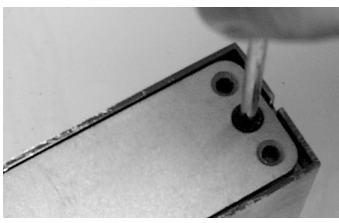
© ALARM LOCK 2006 Publicly traded on NASDAQ Symbol: NSSC www.alarmlock.com

WI1516 2/06

Some installations require the batteries powering the door lock be placed inside the protected premises. The following instructions describe how to install the Inside Battery Kit for your narrow stile door lock.

 <p>1. Loosen the battery cover screw and slide the battery cover off the lock.</p>	 <p>2. Remove the decorative door plate covers by sliding them up from the door plates.</p>	 <p>3. Unscrew four through-door mounting screws (in two door plates) that secure the lock to the door.</p>	 <p>4. Remove Latch Face Plate.</p>
 <p>5. Deadbolt models only: Loosen the interface cylinder set screw (skip this step for springlatch models).</p>	 <p>6. Remove lock from door.</p>	 <p>7. Secure the Battery Mounting Bracket using the top door mounting screw that is located away from the edge of the door.</p>	 <p>8. Using a center-punch, mark two holes for drilling:</p> <ul style="list-style-type: none"> • Mark the bottom Bracket hole for securing the Mounting Bracket (shown) —and— • Mark in the center oval for routing the remote battery wires.
 <p>9. Use a #21 drill for both the bottom Bracket hole (shown), and the center oval.</p>	 <p>10. Enlarge the center oval hole to 7/16". This center oval hole is the only hole that must be drilled <i>all</i> the way through the door.</p> <p>Note: Remove the Battery Mounting Bracket before enlarging this hole.</p>	 <p>11. Tap #10-32 threads into the bottom Bracket hole drilled in step 9. Now the lock's Rear Cover Plate must be removed, as shown in step 12:</p>	 <p>12. Remove the flat-head mounting screws located at both ends of the lock.</p>
 <p>13. With the Rear Cover Plate separated from the lock body, find and disconnect the Battery Pack Connector.</p>	 <p>14. Battery Pack Connector wire is glued in two locations (shown). Carefully lift and remove wire from glue to detach.</p>	 <p>15. Replace the Rear Cover Plate. Route the Battery Connector Wire through the correct hole as shown in step 16.</p>	 <p>16. Make sure the Battery Connector Wire is routed through the correct hole to meet up with the center oval hole drilled in step 10.</p>

continued 



17. Replace all screws removed in step 12, securing the Rear Cover Plate.



18. From outside the door, route the Battery Pack Connector wire through the 7/16" center oval "through hole" drilled in step 10.



19. Use needle-nose pliers (or similar tool) to pull the plug through the 7/16" center oval "through hole" drilled in step 10.



20. Secure the through-door mounting screw (in its door plate), further securing the lock to the door. Install its decorative door plate cover by sliding it over the door plate.



21. Replace the Mounting Bracket and secure with both the through-door mounting screws and the 10-32 screw (provided).

Connect the battery pack plug to the battery wire.



22. Place the battery pack inside the bracket. Be sure the batteries are fresh.



23. Place the battery cover over the Battery Mounting Bracket using the two screws provided.



24. Be sure to use the second bottom screw to secure cover.