



## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701  
For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440  
Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*

# ALARM LOCK Tech Support

## TECH NOTE



**Date:** Thursday, August 28, 2014

**Subject:** Prep interchangeable core (I.C.) Rim Cylinders used with ETDL Series Locks

**Models:** ETDL, ETPDL, ETPL, ETDLN, ETPDLN, ETPLN, ET-BIC, ET-CIC, ET-MIC, ET-ARIC, ET-RIC, ET-SIC, ET-YIC

1. Follow these steps prior to installing the rim cylinder into the Alarm Lock device. Be sure to use the appropriate *cylinder adapter kit* with the tailpiece for your brand of cylinder.

**Typical Rim Cylinder Housing for I.C. Core, with a Standard Tailpiece Installed.**



**The Standard Tailpiece Must Be Completely Removed From the Cylinder.**



2. You must attach the Alarm Lock tailpiece, supplied with the ET adapter kit, on to the I.C. Core. Then install the core into the I.C. cylinder housing.

**Typical I.C. Core with Alarm Lock Tailpiece**



**The Alarm Lock Tailpiece Correctly Installed.**

