
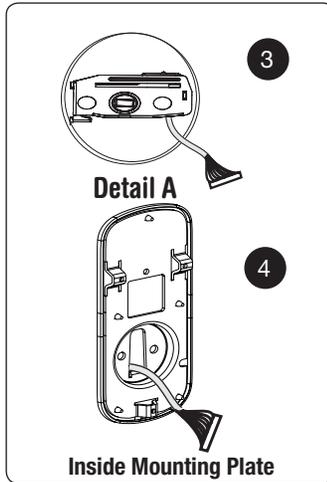


Touchscreen Deadbolt Quickstart Guide

For Technical Assistance call Arrow:
1-800-839-3157

For more information go to: www.arrowlock.com



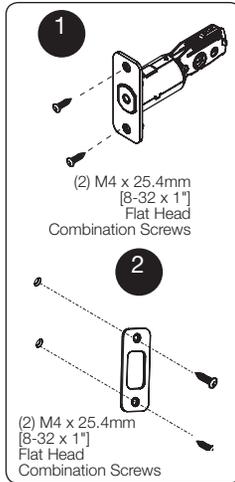


Outside Escutcheon

Inside Mounting Plate

Inside Escutcheon

Battery Cover

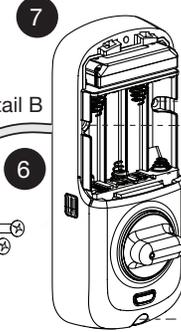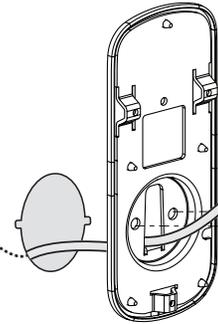
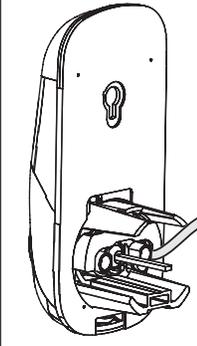


Cable
See Detail B

6



9
(3) M4 x 8mm [8-32 x 5/16"] Pan Head Screws

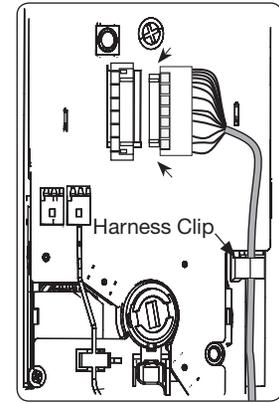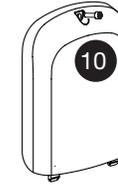

Components

- Quick Start Instructions
- Installation Instructions
- Door Marker
- Outside Escutcheon
- Inside Escutcheon Assembly:
 - Inside Mounting Plate
 - Inside Escutcheon
 - Battery Cover
- 4 AA Alkaline Batteries
- Bolt
- Strike Plate
- Screw Pack (7 screws)
- 2 Keys

Tools Needed

- Phillips #2 screw driver
- 2-1/8" (54mm) hole saw
- 1" (26mm) boring bit
- 7/64" (2.5mm) drill bit
- Chisel & hammer

Directions

1. Install bolt in door.
NOTE: The bolt must be in a retracted position when installing the lockset.
Attach with two (2) M4 x 25.4mm screws supplied.
2. Install strike on the door frame.
3. Route the cable through 2-1/8" diameter hole.
NOTE: Cable must go **under** bolt and through.
See Detail A.
4. Insert outside escutcheon while routing cable through inside mounting plate's 1/2" hole; insert mounting plate "tongue" into bottom slot of outside escutcheon.
5. Secure inside mounting plate to outside escutcheon using two (2) M6 x 59.5mm pan head machine screws. Do not over-tighten.
6. Attach cable connector to inside escutcheon circuit board (See Detail B above). Press firmly with thumbs so that back edge (wires) of connector lines up with arrows on PCB.



CAUTION:



Use care when assembling to ensure that cable lies against the back recessed area of the inside escutcheon.

Position and bend the cable, using the harness clip as shown in Detail B to prevent binding when installing the escutcheon over the mounting plate.

7. Slide inside escutcheon over mounting plate.
8. Install and secure using (3) M4 x 8mm pan head screws through the battery housing into the mounting plate.
9. Insert four (4) AA alkaline batteries. The lock responds, "Welcome to the Arrow Revolution."
Note: Refer to programming instructions prior to completion of step 10.
10. Install battery cover and tighten Phillips head screw.



Programming

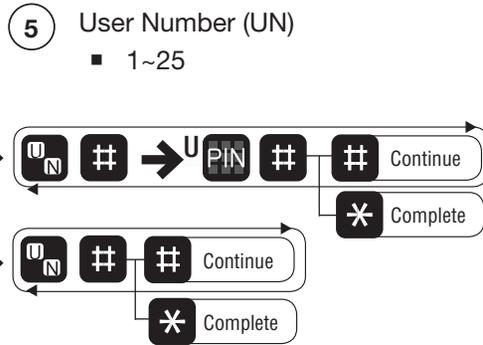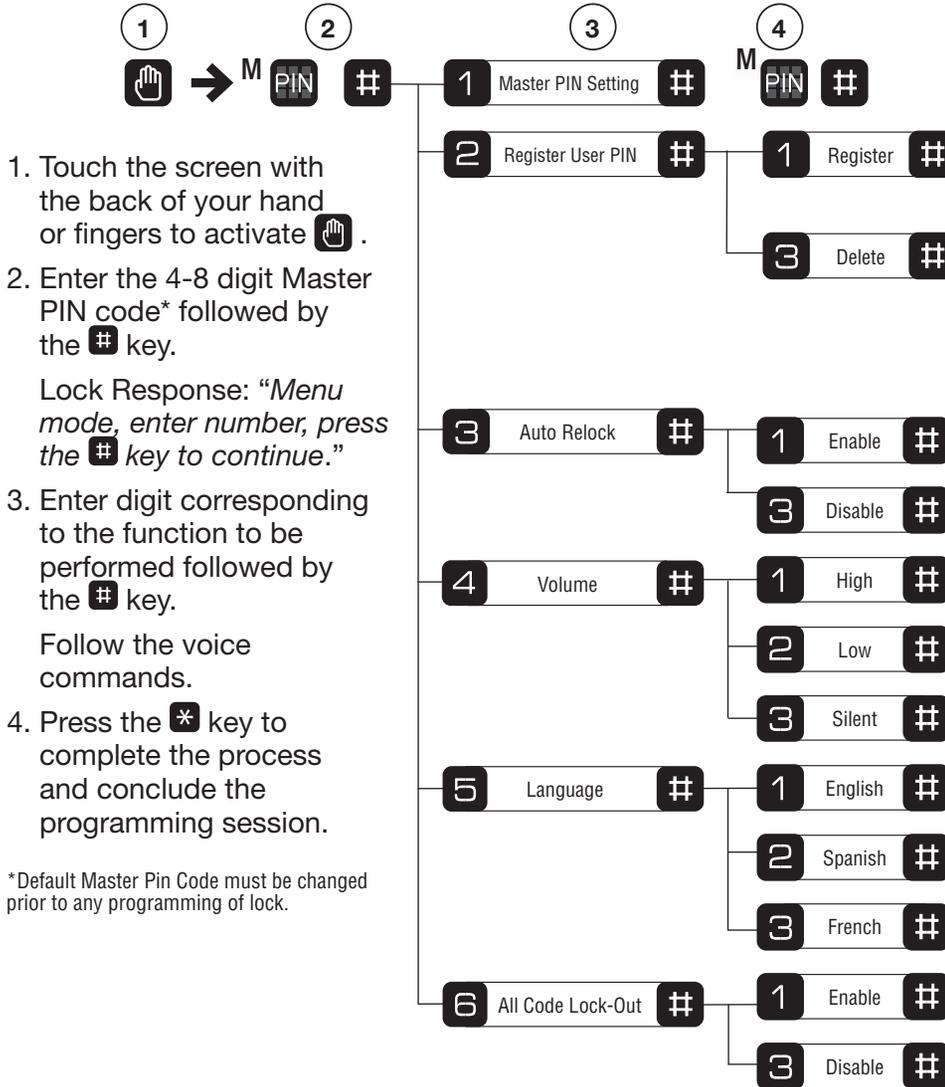

Features

- For proper security, the **Master PIN code*** must be changed prior to programming the lock.
- PIN codes can be 4 to 8 digits in length.
- The ***** key is used to enter or accept an entry, and also to conclude a programming session.
- The **#** key is used either to enter or to continue additional steps in a programming sequence.

*The factory default **Master PIN code** is: 1 2 3 4 5 6 7 8.

For Technical Assistance call Arrow:
1-800-839-3157


For more information go to: www.arrowlock.com

Open Door With PIN Code


1. Touch the screen with the back of your hand or fingers to activate.



2. Enter PIN code.

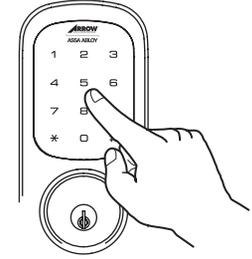

3. Touch the ***** key to confirm the selection.

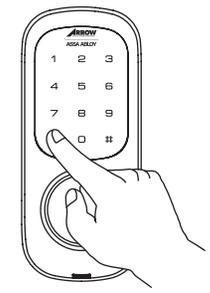

4. Unlock.

