


Wiring Instructions

1. Remove the two screws holding the decorative bezel around switch. Pull off bezel.
2. Mount the switch in desired location. *Do not over-tighten mounting screws!*
3. Connect the wiring as per diagram at right. The N.O. & N.C. termination is at the top of switch. The Common terminal is at the bottom of the switch.
4. Replace decorative bezel.

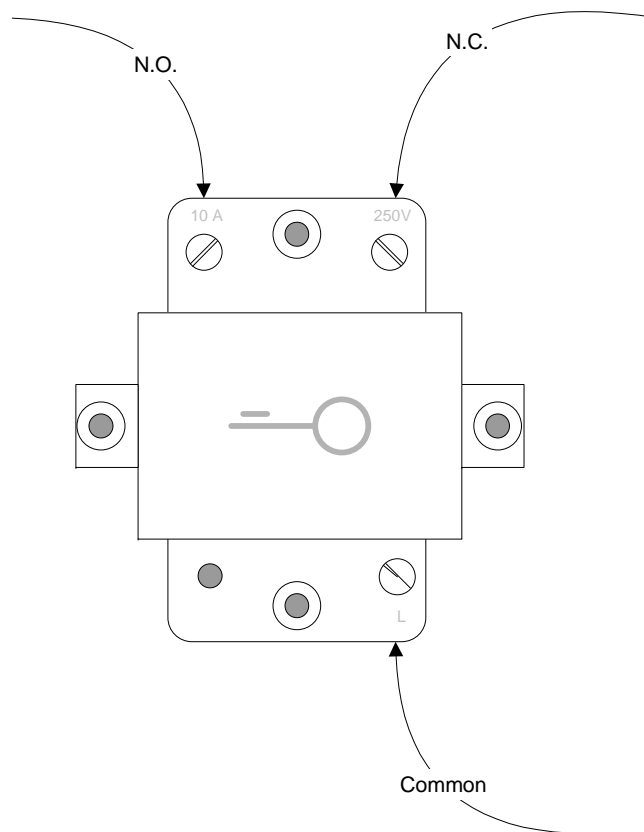

Camden Door Controls

5502 Timberlea Dr.
Mississauga, Ontario
L4W 2T7

SCALE: NONE

DRAWN BY: DGW

DATE: 09/19/07

REVISED:

CM-850 Door Release Switch Wiring Diagram

DRAWING No: DRG-CM-850-0907

FILENAME: CM-850 Wiring Diagram.vsd