


NOTE:

Access to light bulb (or LED) is obtained by first removing Cherry switch from two plastic retaining pins. Squeeze white retainer assembly between finger and thumb, and gently rock back and forth while pulling free of black threaded portion. Then pull out light bulb (or LED) to replace.

		Camden Manufacturing		5502 Timberlea Blvd. Mississauga, Ontario L4W 2T7	
SCALE: NONE	DRAWN BY: DGW	DATE: 02/25/03	REVISED: 03/20/08		
CM-30 Switch Wiring Diagram					
DRAWING No: DRG-CM30-022503			FILENAME: CM-30 Diagram.vsd		