

F-Lock and N-Lock Tailpiece Installation

For proper function of the lock, the tailpiece must be installed correctly.

All F and N locks with standard cylinders must have the tailpiece installed HORIZONTALLY on the cylinder as shown.

NOTE: The cap must be properly adjusted.


If too loose, excessive plug end play will prevent the key from being withdrawn.

If too tight, the plug will drag, making it difficult to rotate the key.



© Allegion 2014 Printed in U.S.A. 030111-000-70 Rev. 10/14-d



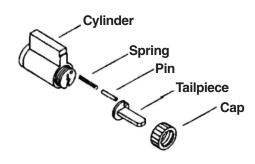

E E O O	_
3.300	_

FRONT	Ī
	4.000

Additional Notes:	
1. None	

Revision History						Revision Description:					
А	В	С	D	E	F	D > Revised artwork					
4600-264	0790	6683									
Material	Material White Paper					Edited By	Approved By	EC Number	Release Date		
						J. Ellis	M. Roberts	xxxxx	10/14		
Notes						Title					
	 printed one side printed black 					F-Lock and N-Lock Tailpiece Installation					
	3. tolerance ± .13					Creation Date	ration Date Number		Revision		
4. printed	4. printed in country may vary					10-28-14	030111-000-70		D		
						Created By J. Ellis	Activity 3899 Hancock Expwy				
						Software: InDesign CS6	Security, CO 80911 © A		Allegion 2014		