

iCLASS SE® Biometric Reader HID Elite™ Key User Guide Addendum

PLT-03452, Rev. A.0



www.hidglobal.com/PLT-03455

- Scan the QR code or visit the link to see the multi-language electronic version of this document.
- Lisez le code QR ou suivez le lien pour consulter la version française de ce document.
- Escanee el código QR o visite el vínculo para consultar la versión en Español de este documento.
- Scannen Sie den QR-Code oder öffnen Sie den Link für die deutsche Version dieses Dokuments.
- Faça a leitura do código QR ou acesse o link da versão em português deste documento.
- Scansiona il codice QR o visita il link della versione Italiana di questo documento.
- Отсканируйте QR-код или пройдите по ссылке, чтобы получить версию этого документа на русском языке.
- 扫描 QR 码或访问此 文档的中文版本的链接。
- この文書の日本語版を表示するには、QR コードをスキャンするか、リンクをクリックします。
- QR 코드를 스캔하거나 링크를 방문하면 이 문서의 한국어 버전을 볼 수 있습니다.

IMPORTANT: Additional Initial Setup Steps Required for this Reader

The following additional steps are **required** before the **Initial Setup - Functional Selections** stage detailed in Section 2 of the *iCLASS SE Biometric Reader User Guide* (PLT-02550).

1. Disconnect power to the reader and then re-power.
2. Within 30 seconds of re-powering the reader, present configuration card **SEC9X-CRD-E-P002 - DOWNGRADE TO STANDARD READER ADMIN KEY** before the Initial Setup stage detailed in Section 2 of the *iCLASS SE Biometric Reader User Guide* (PLT-02550). Hold the card to the reader until the reader stops beeping and the LED is solid red.
3. Complete the steps in Section 2 of the *iCLASS SE Biometric Reader User Guide* (PLT-02550).
4. Disconnect power to reader and then re-power.
5. Within 30 seconds of re-powering reader, present configuration card **SEC9X-CRD-E-P000 - UPGRADE TO ELITE READER ADMIN KEY** (included in reader box). Hold the card to the reader until the reader stops beeping and the LED is solid red. The reader is now ready for Normal use.

Note: If the Initial Setup Reset is required to modify the reader configuration in the future, complete the following in place of the steps detailed in Section 2 of the *iCLASS SE Biometric Reader User Guide* (PLT-02550):

1. Disconnect power to the reader and then re-power.
2. Within 30 seconds of re-powering reader, present configuration card **SE BIO Initial Setup Reset Card 1** (included in reader box). Hold the card to the reader until the reader stops beeping and the LED is solid red.
3. Disconnect power to the reader and then re-power.
4. Within 30 seconds of re-powering the reader, present configuration card **SE BIO Initial Setup Reset Card 2** (included in reader box). Hold the card to the reader until the reader stops beeping and the LED is solid red.
5. Disconnect power to the reader and then re-power.
6. Within 30 seconds of re-powering the reader, present configuration card **SEC9X-CRD-E-P002 - DOWNGRADE TO STANDARD READER ADMIN KEY** (included in reader box). Hold the card to the reader until the reader stops beeping and the LED is solid red.
7. Complete Initial Setup per Section 2 of the *iCLASS SE Biometric Reader User Guide* (PLT-02550).
8. Disconnect power to reader and then re-power.
9. Within 30 seconds of re-powering the reader, present configuration card **SEC9X-CRD-E-P000 - UPGRADE TO ELITE READER ADMIN KEY** (included in reader box). Hold the card to the reader until the reader stops beeping and the LED is solid red. The reader is now ready for Normal use.