



**ALARM LOCK**


345 Bayview Avenue  
Amityville, New York 11701  
For Sales and Repairs 1-800-ALA-LOCK  
For Technical Service 1-800-645-9440  
Publicly traded on NASDAQ Symbol: NSSC

© ALARM LOCK 2006


# ADDENDUM REPOSITION THE PRECISION 1100 RECEPTACLE

W11580 10/06

For the Precision 1100 model to work correctly with the NAPCO Exit Trim models, the 1100 model receptacle must be located at the bottom of the unit. If the 1100 model receptacle is located at the top position (either from pre-existing installations or new installations), the receptacle must be repositioned as shown the image below.

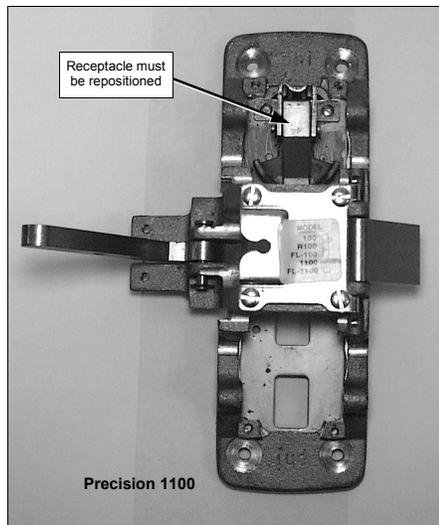


**INCORRECT**

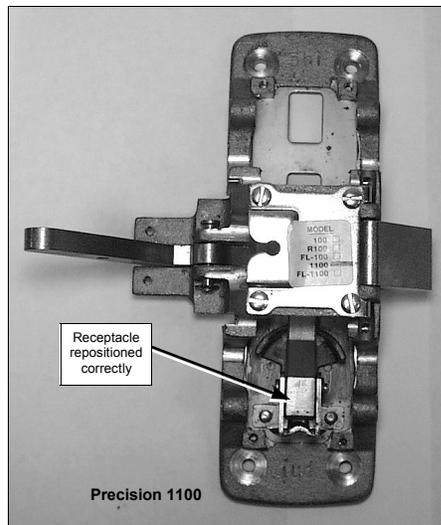


**CORRECT**


## HOW TO REPOSITION THE RECEPTACLE

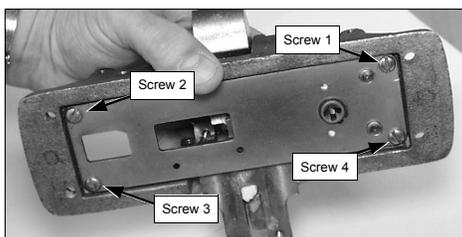


1. The underside of the model 1100 is shown, with four (4) screws that must be removed.

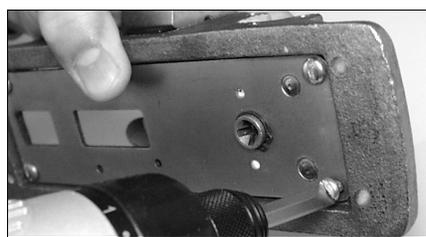

2. Remove all 4 screws with a slotted screwdriver. Place screws aside.

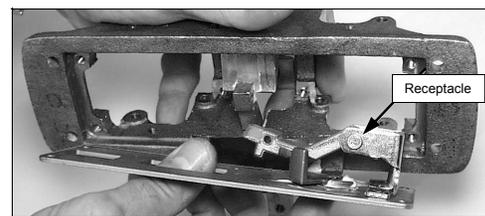


3. With screws removed, the back plate can easily be removed as a modular unit.

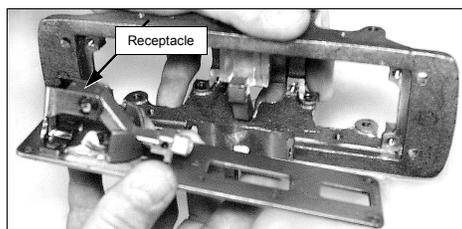

4. Turn back plate 180° so that the receptacle is in the bottom position.



5. Replace all 4 screws that were previously removed in step 2.

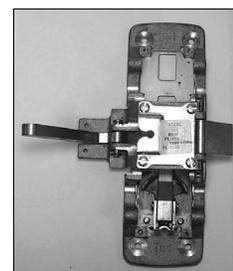

6. Receptacle repositioned correctly.