


# SDC Security Door Controls

801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 •  
www.sdcsecurity.com • E-mail: service@sdsecurity.com

## LRVD1R INSTALLATION INSTRUCTIONS PUSH PAD (REQUEST-TO-EXIT) SWITCH KIT VON DUPRIN 98/99-33 SERIES

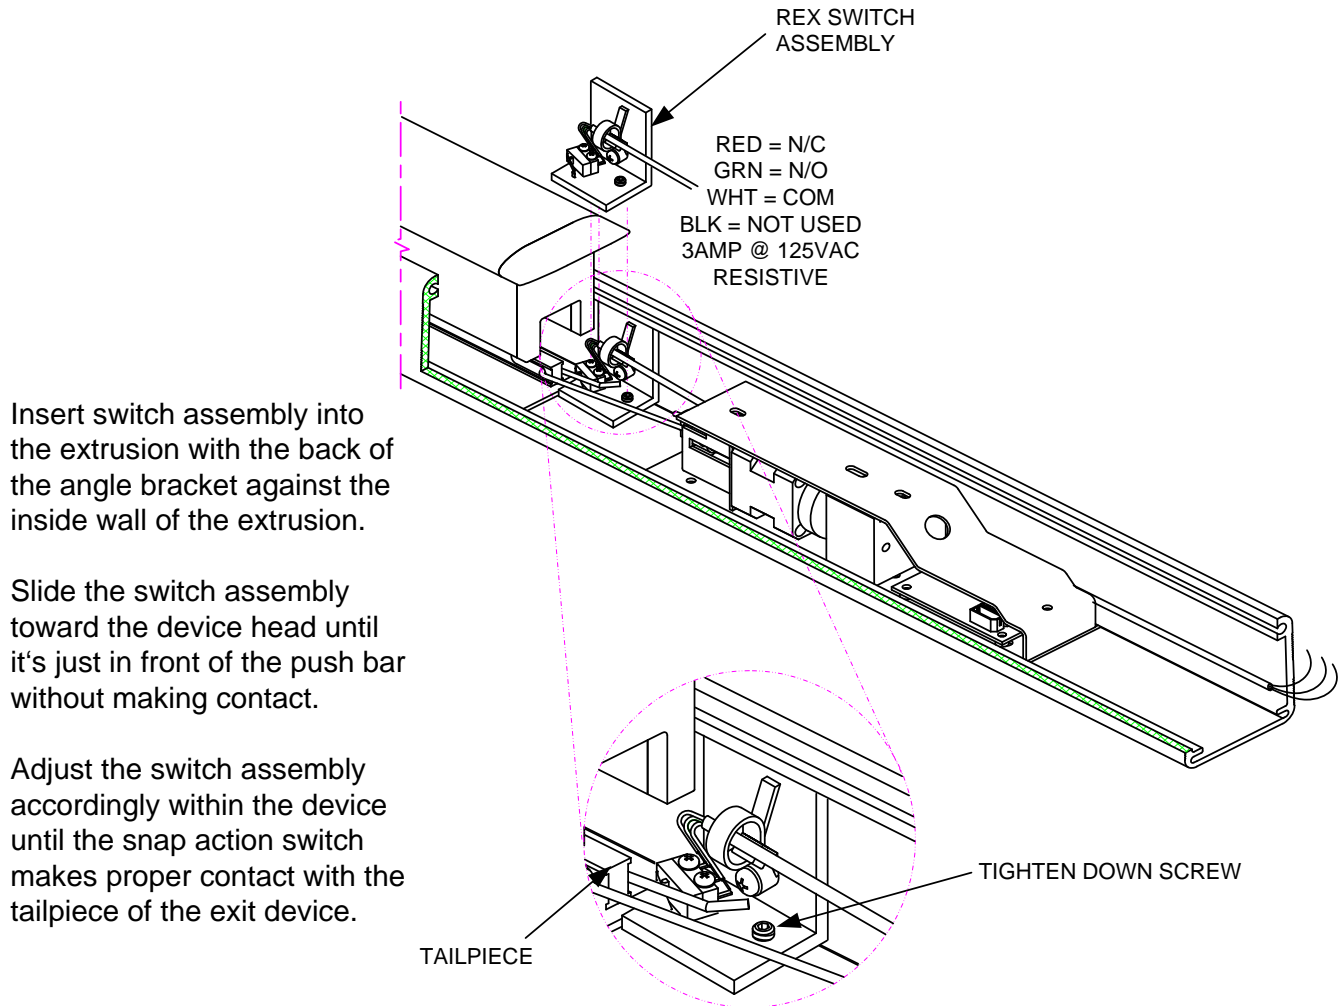

Insert switch assembly into the extrusion with the back of the angle bracket against the inside wall of the extrusion.

Slide the switch assembly toward the device head until it's just in front of the push bar without making contact.

Adjust the switch assembly accordingly within the device until the snap action switch makes proper contact with the tailpiece of the exit device.

Any suggestions or comments to this instruction or product are welcome. Please contact us through our website or email engineer@sdsecurity.com