


801 Avenida Acaso, Camarillo, Ca. 93012 • (805) 494-0622 • www.sdcsecurity.com • E-mail: service@sdcsecurity.com

# ALARM BOARD **INSTALLATION INSTRUCTIONS**

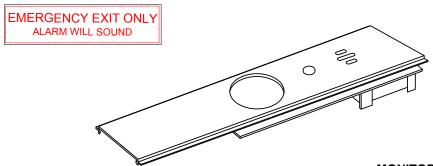

### **FEATURES**

LED (field selectable Active or Off)

Bypass - No LED

Armed – Blinks every 4 seconds (GREEN when armed,

RED when in alarm mode)

Low battery Alert – Siren will beep every 45 seconds

Arming Delay - 15 or 60 second arming delay

Field selectable alarm modes include:

Continuous alarm with manual key reset Alarm automatically rearms 2 minutes after door closes and may be retriggered. May be manually rearmed by key before automatically rearmed.

## **OPTIONS:**

AR6 – 6 or 10 minute alarm with auto rearm and manual key reset. AR20 – 20 minute alarm with auto rearm and manual key reset.

AD1 – 1 second arming delay

B - Hard wire cable with monitoring.

#### **SPECIFICATIONS**

Input Voltage - 12/24vdc @ 20ma.

Alarm output – 1 amp SPDT form "C" relay contact

Remote Inhibit - N/O dry contact

Siren Level db - @90db

# **MONITOR LED OPERATION**

### FLASHING GREEN - Arming Delay Mode The device will arm after the delay on arm

time expires.

#### **BLINKING GREEN** - Armed Mode

The unit is armed. Pressing on the push pad will sound the alarm.

#### **RED SOLID** – Alarm Mode

The alarm has been activated. The alarm will sound.

#### **BLINKING RED - Re-Armed Mode.**


The has been triggered at least once and has automatically reset and has returned to the armed mode. Pressing on the push pad bar will sound the alarm Manually resetting the device will clear this mode.

# **FLASHING ORANGE** Low Battery.

You will also hear an intermittent beep.

#### FACTORY DEFAULT IS SET TO ALL ON POSITION

JUMPER	FUNCTION	JUMPER POSITIONS	
		ON ON	□ □ □ OFF
J1	ALARM TIMER	2 MIN	6 MIN
J2	RESET MODE	MANUAL	AUTO
J3	DELAY ON ARM TIME	15 SEC	60 SEC
J4	MONITOR LED	ACTIVE	NOT ACTIVE

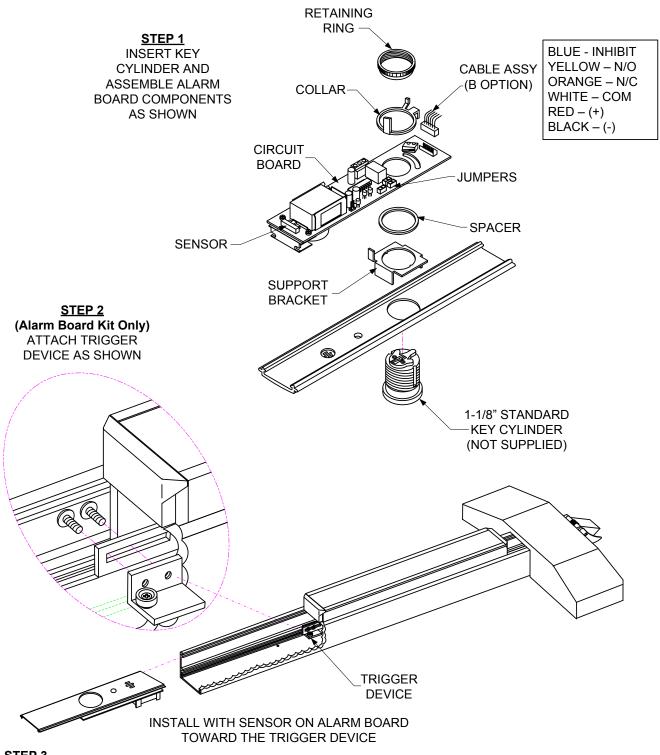

STEP 3 SLIDE ALARM BOARD ASSEMBLY INTO EXIT DEVICE

> STEP 4 MOUNT SIGN ON DOOR

EMERGENCY EXIT ONLY
ALARM WILL SOUND