# 1431 (OD, ODB, HD, HDB) DOUBLE EGRESS PULL SIDE TRACK INSTALLATION INSTRUCTIONS

CAUTION: FAILURE TO INSTALL OR ADJUST PROPERLY MAY RESULT IN INJURY OR DAMAGE

For assistance, contact SARGENT at 800-727-5477 or www.sargentlock.com


NOTE: AN AUXILIARY DOOR STOP IS REQUIRED


## SARGENT

### ASSA ABLOY

ASSA ABLOY, the global leader in door opening solutions


A7421B

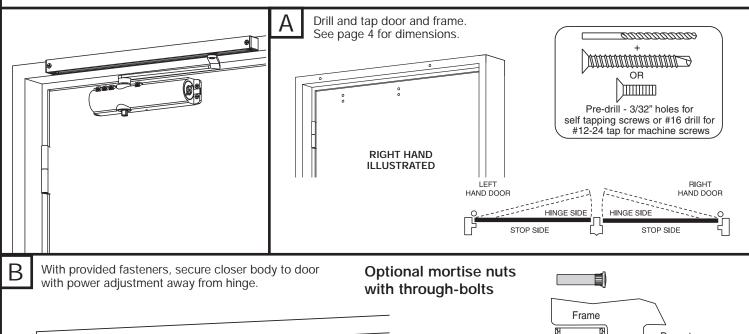

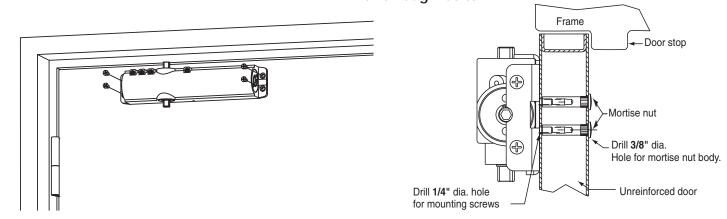


Assemble arm to closer with index mark on end of spindle 45° from axis of arm as illustrated below. Use washer and screw to attach arm. Closer spindle, Closer spindle, washer and screw. washer and screw. Right hand door Left hand door Main Main Position of arm when arm arm assembling to spindle Index mark on spindle Index mark on spindle 45°

Copyright @ 2006, 2008, Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

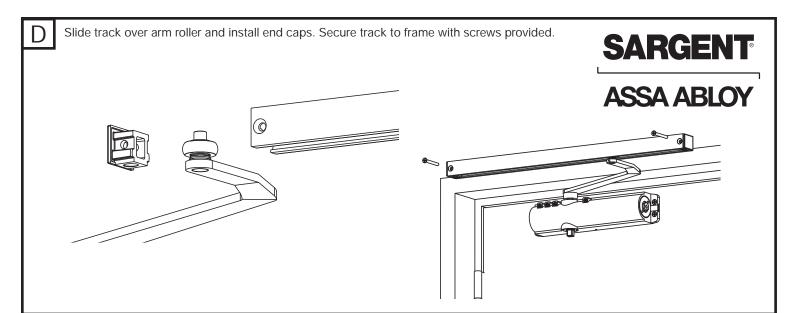

#### FINAL ADJUSTMENT AND REGULATING PROCEDURES

Regulate door speed, latching speed and backcheck. Recommended closing time greater than 6 seconds. If backcheck is required, adjust for slight cushioning effect. \*Auxiliary door stop required. Use 1/8" hex wrench and adjust valves as needed.

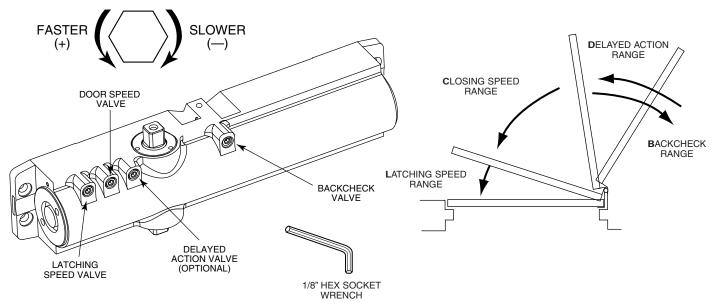


<sup>\*</sup>If adjustments are ineffective, check indexing as shown in step 3 and check templating

Adjust power to minimum required to reliably close and latch door

NUMBER OF TURNS OF SPRING POWER ADJUSTING NUT		
DOOR WIDTH (INCHES)	ADJUSTMENTS	
24-30	Turn nut 1-3	
30-36	Factory Set	
36-42	Turn nut 1-3	
42-48	4-6	

Adjusting door to close due to high draft conditions may exceed ADA standards. Consult local ordinances when fire doors are involved.

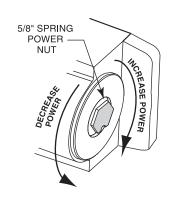

ASSA ABLOY, the global leader in door opening solutions


#### FINAL ADJUSTMENT AND REGULATING PROCEDURES

G

Install cover as shown



**ASSA ABLOY** 

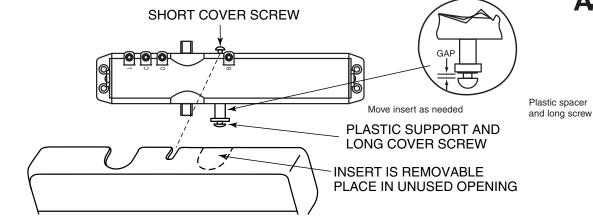


#### Adjustments for "B" and "H" option

#### "B" option


Bumper assists backcheck in cushioning the opening for door. It is not intended to replace an auxiliary door stop. To change bumper stop location: Remove mounting screw and relocate bumper stop at desired position

To change bumper stop location — remove mounting Screw and relocate bumper stop at desired position.

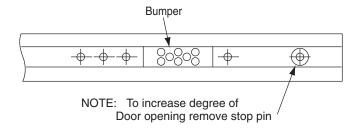


#### "H" option

The **holder** device is set for 95° door holding position at the factory. Tension is set at the lightest setting.

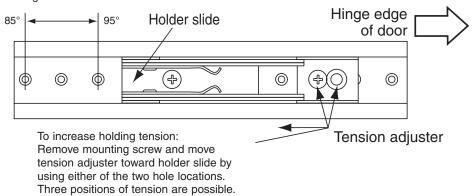

85° TO 120°	160.⊖	120.⊖	HD	HOLDER ARM
$\bigvee$	160.0	120.	OD	REGULAR ARM
HOLD OPEN	HOUT BUMPER	WITH BUMPER	ANM LIFE	DESCRIPTION STAN TITE WITH BUMPER WIT
RANGE OF	WAX I MUM DOOR OPEN ING RANGE OF	MAXIMUM D	אפע דיפר	DESCRIPTION

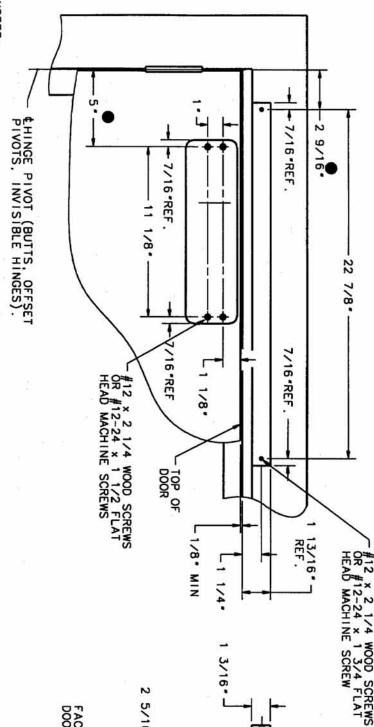

2

5/16.

TOP RAIL REQUIRED

3-4.

5/8\*

FRAME

DOOR

FACE OF DOOR

NOTES:

- RIGHT HAND DOOR SHOWN, LEFT HAND DOOR OPPOSITE.

  12 GAGE MIN. REINFORCEMENT REQUIRED FOR METAL DOORS AND FRAMES.

   THIS DIMENSION IS TAKEN FROM HINGE EDGE OF DOOR FOR INVISIBLE HINGRS.
- TO OPEN DOOR 120 REMOVE BUMPER STOP. IF DOOR AND FRAME CONDITION PERMIT. SPACE REQUIRED TO MOUNT CLOSER ON RAIL.
- USE DATA SHEET A7168 FOR DETAILS. IF SPACE IS LESS THAN SHOWN

DOUBLE EGRESS APMS (OD	DATA SHEET: 1430 SERIES TRACK TYPE APPLICATION	SARCENT MFG. COMPANY
/HD) 10MPLET NO. A7419 A	S JAN 00	NEW HAVEN, COM. 06511

ASSA ABLOY

in door opening solutions ASSA ABLOY, the global leader