


5100 SERIES EXIT ALARMS

INSTALLATION INSTRUCTIONS

FOR 3274 NARROW STILE

MOUNTING PLATE

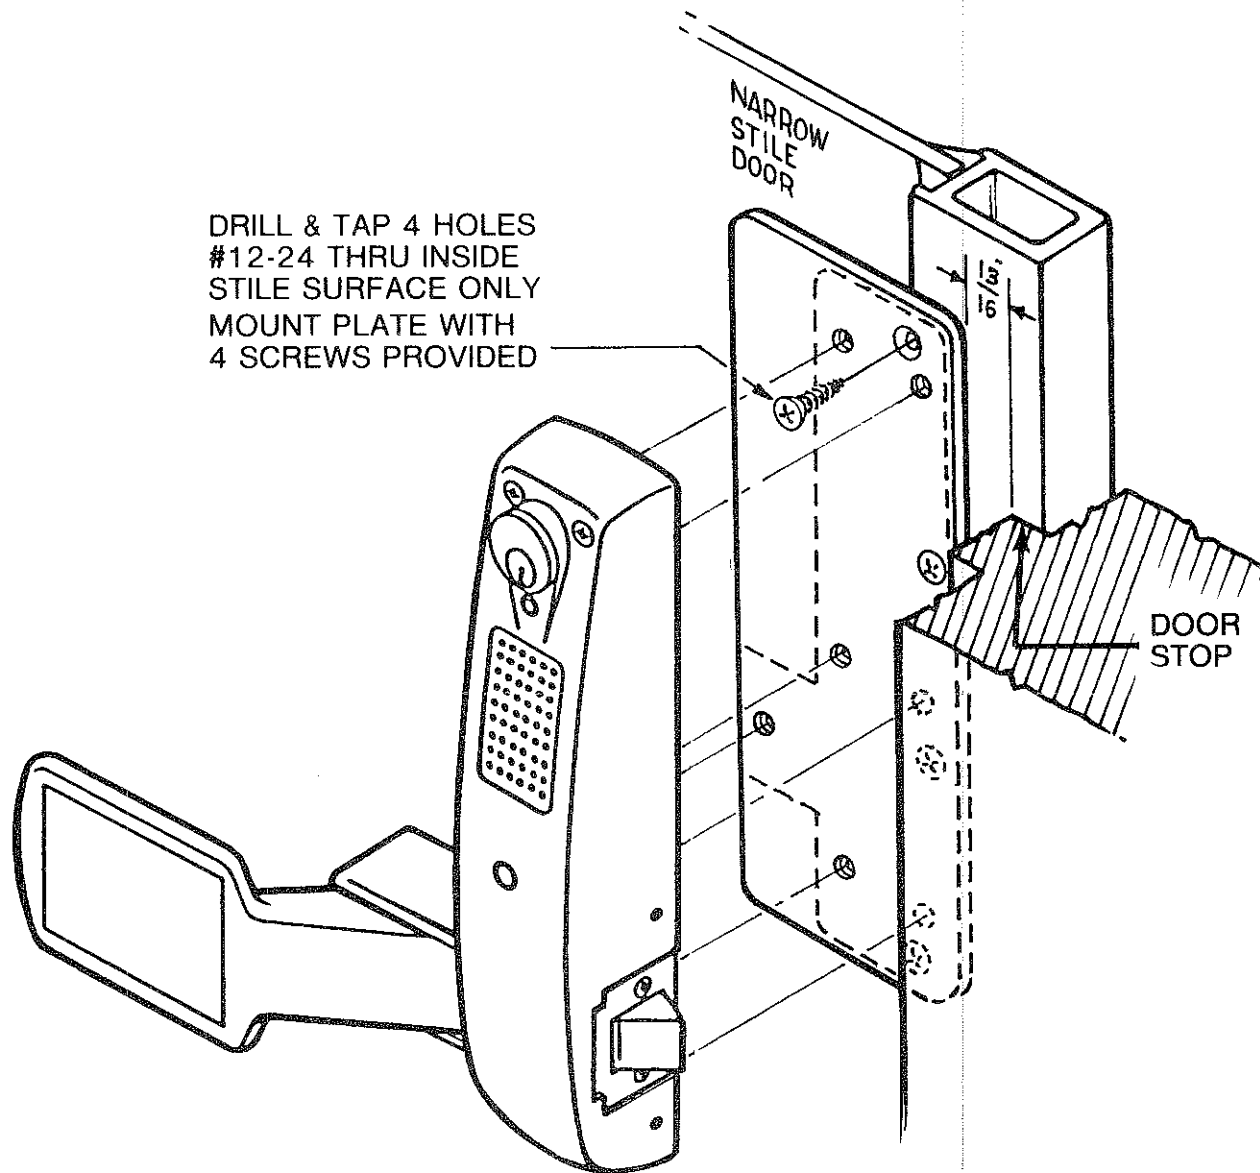

MOUNT UNIT PER
5100 SERIES
INSTRUCTION SHEET

FOR OUT-SWINGING DOORS: locate plate
13/16" back from the door stop surface or locate
the plate to maintain proper spacing between alarm
and surface of strike. (See instructions packed
with 5100 alarm).

SARGENT®

NEW HAVEN, CT 06511

A6853A