
## INSTALLATION INSTRUCTIONS 5800 & 12-5800 Series 04 Function Alarmed Exit Devices For Outside Cylinder Operation / With or Without Outside Pull Trim

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

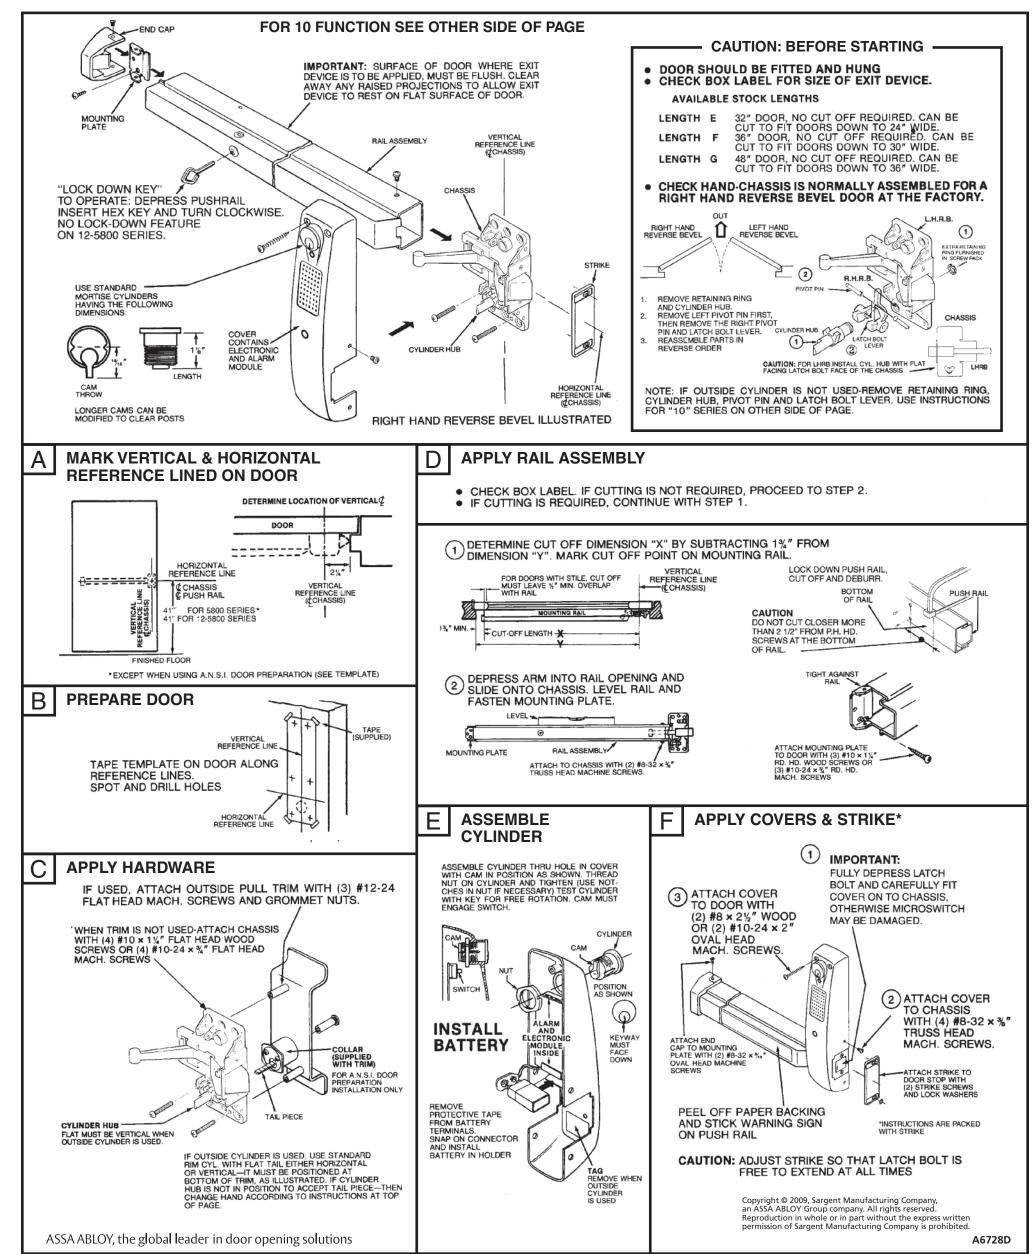

SARGENT

ASSA ABLO

## INSTALLATION INSTRUCTIONS 5800 & 12-5800 Series 10 Function Alarmed Exit Devices Exit Only (No Outside Cylinder) / Non-Handed / With or Without Outside Pull Trim

SARGENT

ASSA ABLO

FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com

