
351 WITH OT, OTB, HT, HTB ARM AND TRACK **INSTALLATION INSTRUCTIONS (PULL SIDE)**

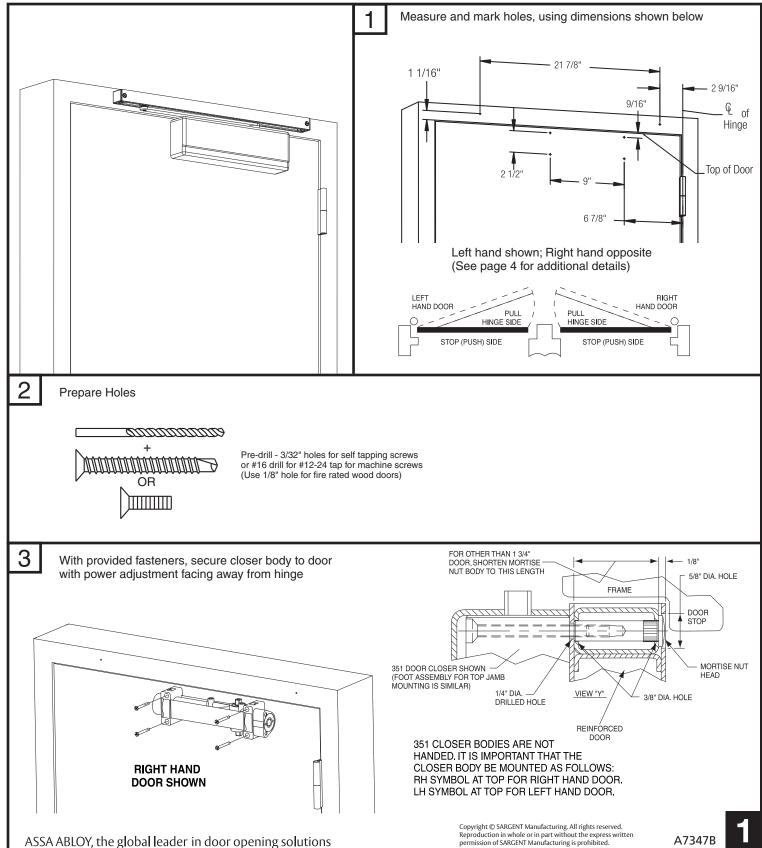

CAUTION: FAILURE TO INSTALL OR ADJUST PROPERLY MAY RESULT IN INJURY OR DAMAGE FOR INSTALLATION ASSISTANCE CALL SARGENT AT 1-800-727-5477 • www.sargentlock.com NOTE: AN AUXILIARY DOOR STOP IS REQUIRED







Assemble arm to closer with index mark on end of spindle 45° from axis of arm as illustrated below. Use washer and screw to retain arm (Right hand door shown).




SARGENT


ASSA ABLOY

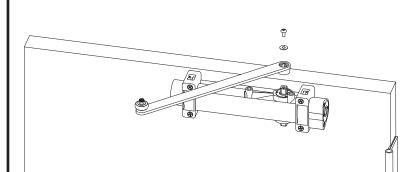

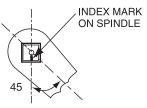

RIGHT HAND DOOR

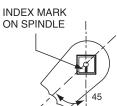


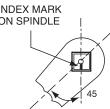


5

Slide track over roller and install end caps. Secure track to frame with screws provided.

Holder/Bumper option end toward hinge

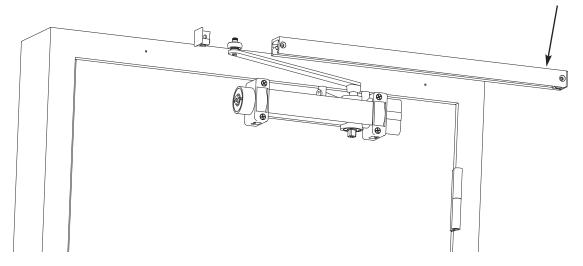

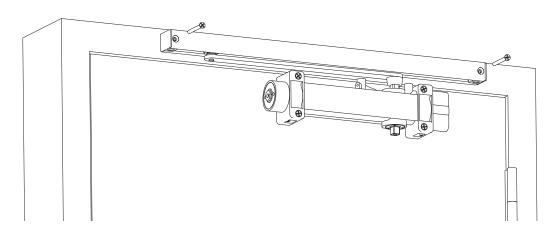

Adjusting Closing Speeds


Adjust Door speed, and Latching speed valves to achieve the desired closing time. Recommend 6 seconds minimum from 90° to the closed position.

SARGENT

ASSA ABLOY

If Backcheck is required, adjust valve to achieve a slight cushioning effect. Auxiliary stop required.

If closer is equipped with **Delayed Action**, regulate valve to achieve the desired delay

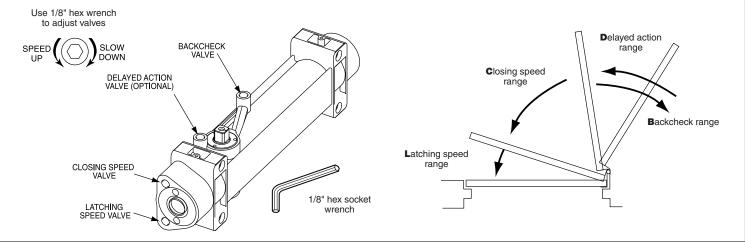



Adjust closing power to the minimum required to reliably close and latch door.

- If door is hard to open, decrease power slightly.
- If door does not latch, increase power as required.
- Use the chart as a starting point.

- Doors adjusted with high closing power to overcome strong draft conditions may exceed ADA standards.

SPRING POWER ADJUSTMENT GUIDELINES		
Door Width (Inches)	Exterior Doors	点Interior Doors
24-30	TURN nut 1-3 (TURN nut 1-3 (
30-36	FACTORY SET	FACTORY SET
36-42	TURN nut 1-4 🎾	TURN nut 1-3)
42-48	TURN nut 7-9)	TURN nut 4-6)

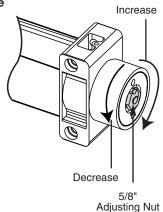

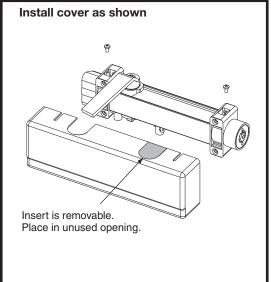

OPTIONS


BUMPER ASSISTS BACKCHECK IN CUSHIONING THE OPENING FOR DOOR, IT IS NOT INTENDED TO REPLACE AN AUXILIARY DOOR STOP.



FOR MODELS HAVING HOLDER TRACKS:

THE HOLDER DEVICE IS SET FOR 95° DOOR HOLDING POSITION AT THE FACTORY AND THE HOLDER TENSION IS SET AT THE LIGHTEST OF THE THREE SETTINGS.

TO INCREASE HOLDING TENSION REMOVE MOUNTING SCREW AND MOVE TENSION ADJUSTER TOWARD HOLDER SLIDE BY USING EITHER OF THE TWO HOLE LOCATIONS. TWO POSITIONS OF TENSION ARE POSSIBLE.

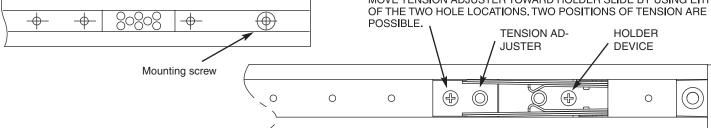

SARGENT ASSA ABLOY

