
HOW TO REMOVE CYLINDER FROM 758 AND 858 PADLOCK

758 KEYING RETAINING PADLOCK WHICH REQUIRES KEY TO LOCK 858 NON KEY RETAINING PADLOCK CAN BE LEFT OPEN AND CLOSED/LOCKED WITHOUT KEY **SARGENT**

ASSA ABLOY


ASSA ABLOY, the global leader in door opening solutions

For installation assistance, contact SARGENT at 800-727-5477 • www.sargentlock.com

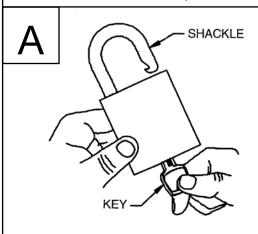

B ALLEN WRENCH-CYLINDER CYLINDER

Insert a 5/64" Allen wrench and remove retainer screw as shown. Cylinder and retainer will drop out together.

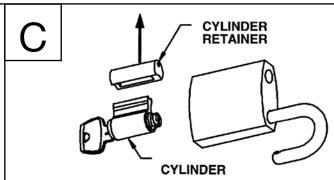


Remove cylinder retainer from cylinder for repining. Reverse steps to reassemble.

Note: Be sure shackle is in the same position and also the key in the position in the cylinder during reassembly as it was disassembled in order to keep padlock "timed".

HOW TO REMOVE LARGE FORMAT CYLINDER FROM 63-758 PADLOCK

HOW TO REMOVE OLD STYLE CORE CYLINDER FROM 51- PADLOCK

 Α




Rotate key to release shackle.

Insert control key and turn counterclockwise until stop is reached.


В

 With key in this position, pull out core.



To remove key - return to vertical position and withdraw.

 
C



Insert control key and turn counterclockwise until stop is reached.

)

 With key in this position, pull out core.



To remove key - return to vertical position and withdraw.

Copyright © 2005, 2008, 2011 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

A7799B