




# INSTALLATION INSTRUCTIONS

## 519 MONITORING SWITCH KIT JACKSON 1085 & 1095 SERIES

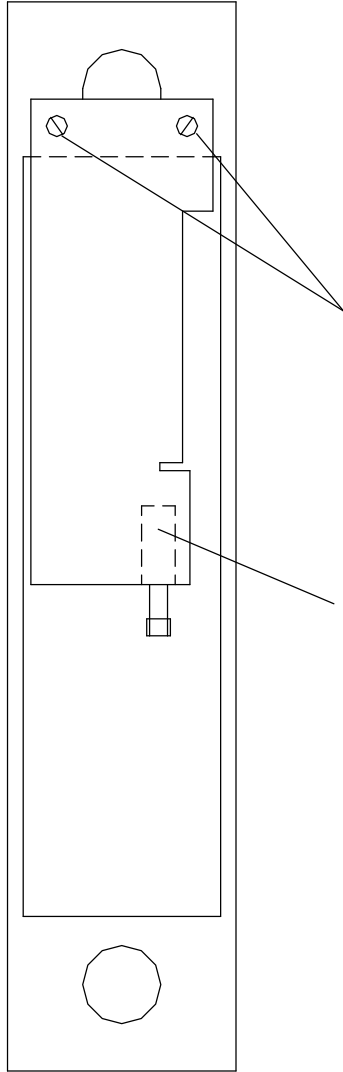

MOUNT SWITCH BRACKET AS SHOWN WITH 2 #8-32 MACHINE SCREWS PROVIDED. NO TAPPING REQUIRED.

### WIRING SPECIFICATION

WHT - COM  
YEL - N/O  
ORG - N/C  
  
5 AMP MAX  
INDUCTIVE LOAD  
SPST

519-2  
CONTAINS TWO SWITCHES

### Applications

**Remote Latch Status Monitoring:** Retracting the latch by depressing the push pad provides an output signal for local or remote visual and audible annunciation indicating forced entry or unauthorized egress.

**Access Control REX:** When connected to the Request-To-Exit input of a keypad, card or biometric Access Controller, depressing the pushpad and retracting the latch actuates the Latch Status contact, shunting the control access control alarm to permit authorized egress and/or releases the magnetic door lock for uninhibited egress.

**Magnetic Lock Release:** Where Access Controller with REX input is unavailable, the N/C contact of the switch is wired in series between the power supply and fail safe magnetic lock. Depressing the exit device pushpad retracts the latch, causing the contact to open, thereby releasing the magnetic lock for uninhibited egress.

**Mantrap Logic:** Provides N/O and N/C contacts required for 2 or more communicating doors for Interlock and Mantrap applications.