

DOOR SHOE OUTLINE



**ADAEZ - PULL SIDE MOUNT
LEFT HAND
ZERO INCH REVEAL REQUIRED**


ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME


ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME

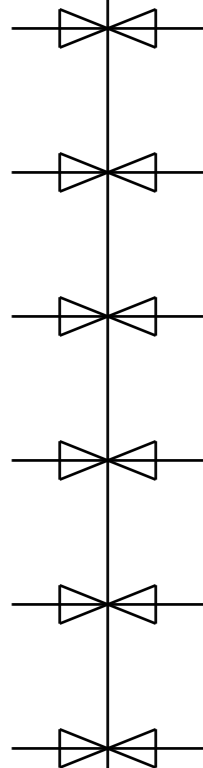

Centerline of Door Shoe

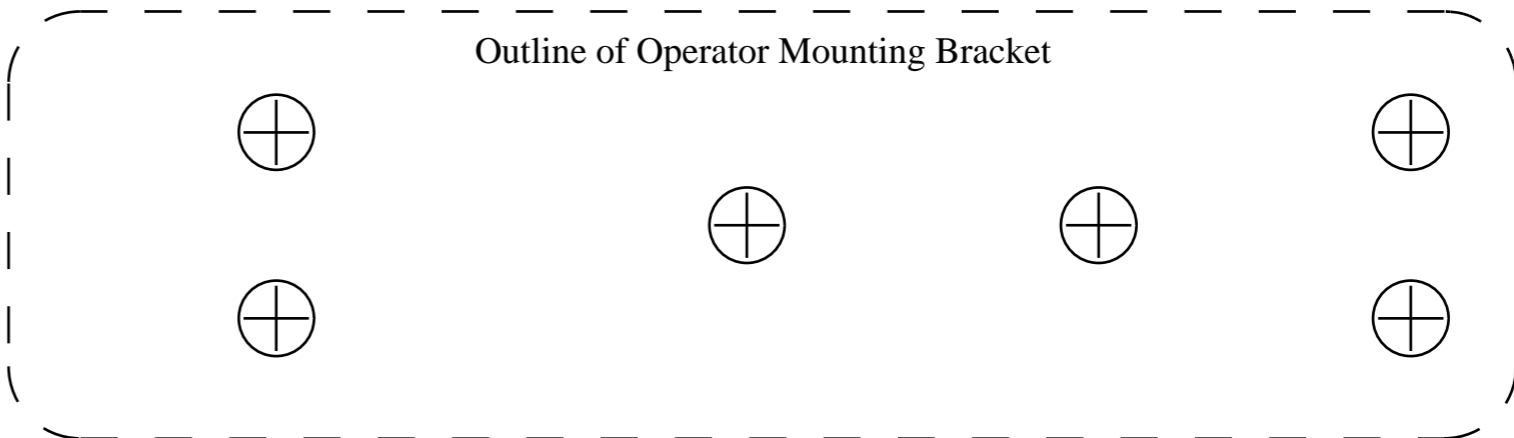

Outline of Operator Mounting Bracket

This device does not work with Swing Clear hinges
or Balanced Doors
0" Reveal Required

PROGRAMMING ADAEZ

1. PRESS SELECT and ENTER until 4 LEDs flash green
 2. CLOSE door PRESS ENTER
 3. OPEN door PRESS ENTER
 4. CLOSE door PRESS ENTER
 5. PRESS and HOLD ENTER until LEDs go out.
- ADAEZ IS NOW PROGRAMMED

PROGRAMMING TRANSMITTER

 
1. PRESS and HOLD LEARN until 4 LEDs flash green.
2. PUSH the RF activation switch LEDs shall flash green.

RESETTING THE CONTROLLER


1. PRESS and HOLD ENTER
2. PRESS and RELEASE RESET

Centerline of Door Hinge or Pivot
NOT Edge of Door

12" REFERENCE



ADAEZ - PULL SIDE MOUNT RIGHT HAND ZERO INCH REVEAL REQUIRED

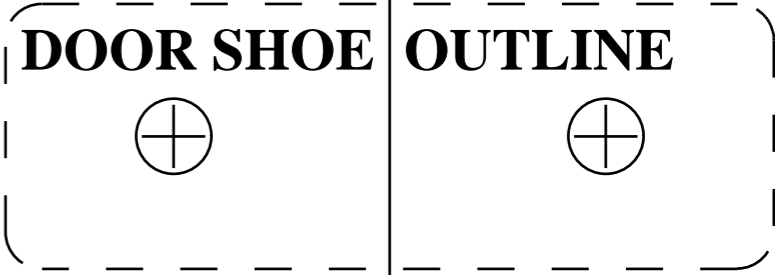


ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME

ALIGN WITH BOTTOM OF FRAME


ALIGN WITH BOTTOM OF FRAME

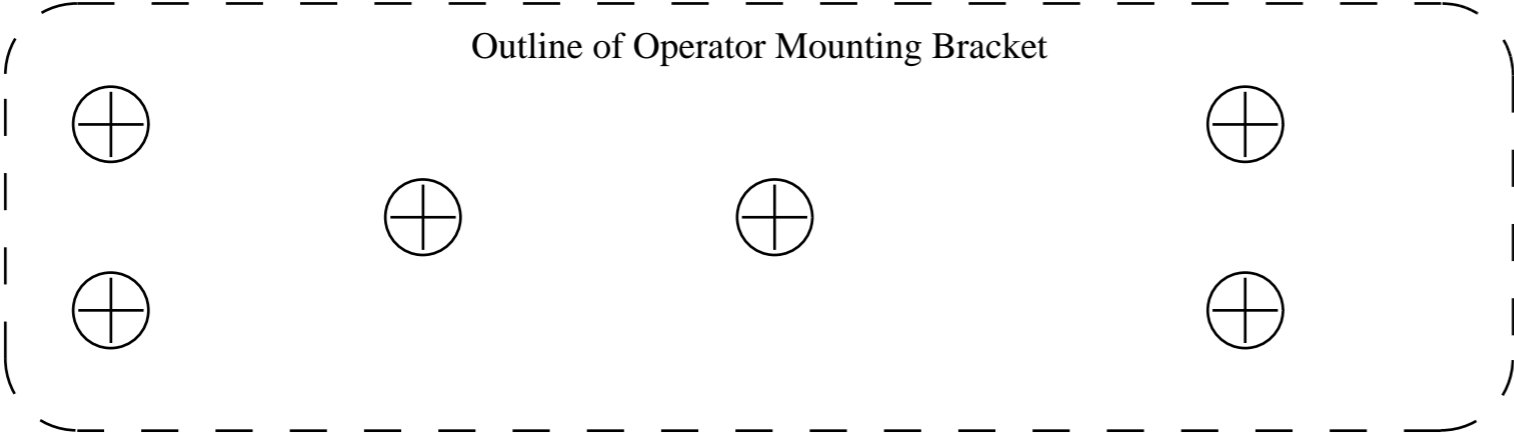

Centerline of Door Hinge or Pivot
NOT Edge of Door

<p>PROGRAMMING ADAEZ</p> <ol style="list-style-type: none"> 1. PRESS SELECT and ENTER until 4 LEDs flash green 2. CLOSE door PRESS ENTER 3. OPEN door PRESS ENTER 4. CLOSE door PRESS ENTER 5. PRESS and HOLD ENTER until LEDs go out. ADAEZ IS NOW PROGRAMMED 	<p>PROGRAMMING TRANSMITTER</p> <ol style="list-style-type: none"> 1. PRESS and HOLD LEARN until 4 LEDs flash green. 2. PUSH the RF activation switch LEDs shall flash green. <p>RESETTING THE CONTROLLER</p> <ol style="list-style-type: none"> 1. PRESS and HOLD ENTER 2. PRESS and RELEASE RESET
---	---

This device does not work with Swing Clear hinges or Balanced Doors
0" Reveal Required

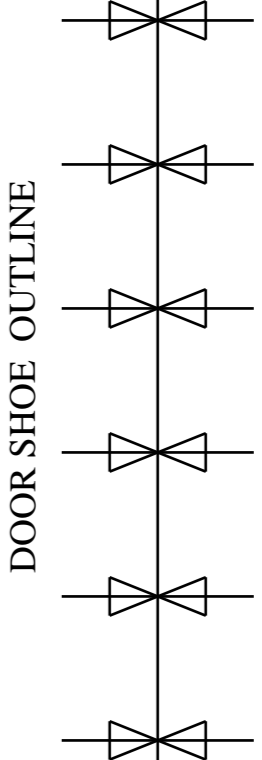

12" REFERENCE