

PAGE 4 **Closer Adjustment**

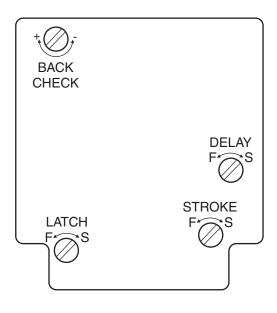

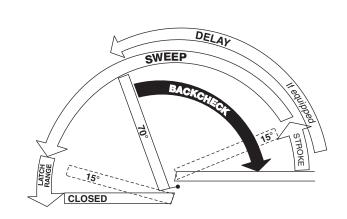

Closing speeds can be adjusted to suit local conditions and requirements. Label on closer face designates the purpose of each adjustment screw.

- A. The Stroke valve allows adjustment from open to 15°.
- B. The Latch valve allows adjustment from 15° to closed position.

Rixson Specialty Door Controls

- Important: Backcheck valve option must be adjusted to vary resistance from light to firm at 70° of door opening.
- D. The Delay valve option allows closing speed adjustment from open position to 65°

Repairs, parts replacement or internal adjustments must be done by a Rixson authorized repair agency. Consult a Rixson representative for an authorized repair agency in your area.

www.rixson.com



ASSA ABLOY is the global leader in door opening solutions, dedicated to satisfying end-user needs for security, safety and convenience. Copyright © 2003, 2009, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written sion of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited

866-474-9766 Technical Department

RIXSON

5040 Floor Closer


Center Hung Single Acting - Handed 74010 Top Pivot - Non Handed Patch Fitting Installation

with Finished Floor

ASSA ABLOY

Installation Instructions IS5040 (06-09)

Template

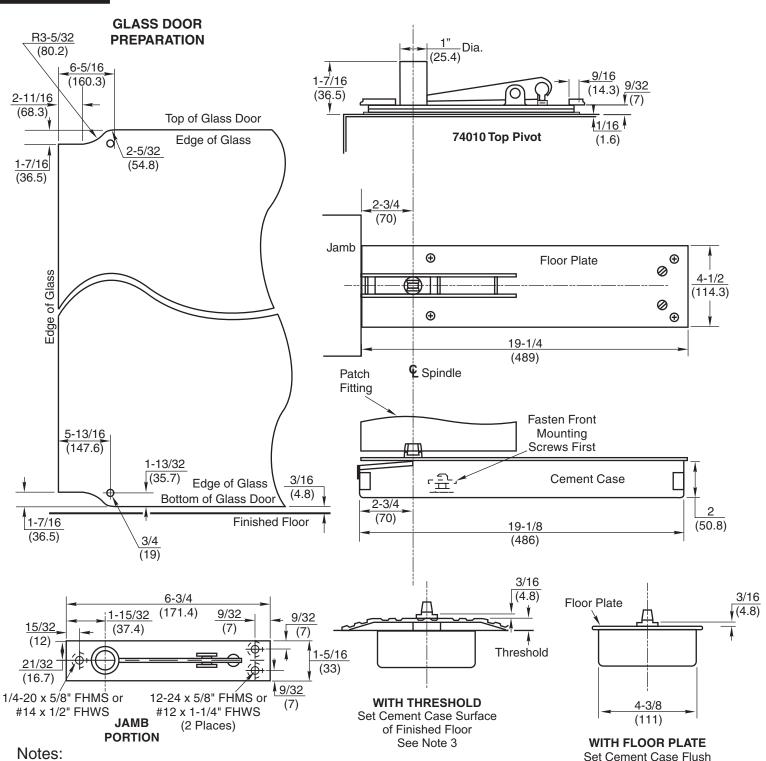

Notes:


- 1. Do not scale drawing.
- 2. Suitable reinforcing by others.
- 3. 1/2" Extended Spindle required.
- 4. Rixson design Threshold available on request.
- 5. All dimensions given in inches (mm).

Rixson Specialty Door Controls 847-671-5670 Technical Department www.rixson.com


PAGE 3

3. Install Pivot

How To Determine Hand of Door

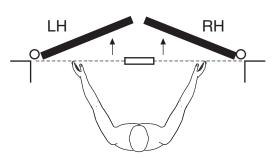

Face a door swinging open away from you. If it opens to the right, it is right hand. If it opens to the left, it is left hand.

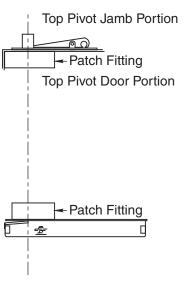

IMPORTANT:

Use plumb line to make sure that center line of top pivot pin lines up with center line of closer spindle.

Spindle

Patch Fitting

- A. Install patch fittings (top & bottom) into door per template.
- B. Install top pivot in jamb per template.
- C. Centerline of pivot pin should line up with centerline of spindle. Use plumb line to assure accuracy.

· ____A


Cement Case

DOOR

Installation Instructions


1. Locating Closer

PAGE 2

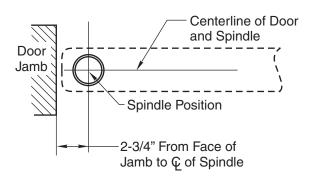


A. Measure 2-3/4" out from door jamb on centerline of door. This is the location of the spindle center.

2. Install Cement Case in Floor

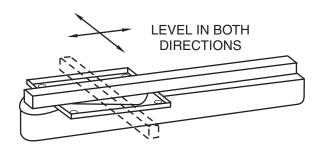


- A. For floor plate application: Cement case is set 1/8" (3.2mm) below floor level.
- B. For threshold application: Cement case is set flush with floor.
- C. Set cement case in floor and block in position.
- D. Case should be parallel with center line of door.
- E. CEMENT CASE SHOULD BE LEVEL. Place levels per Illustration.
- F. Grout in cement case with closer. Cement should not get between closer and case.

4. Hang Door

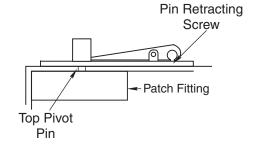

CAUTION: Closer is shipped with valve screws down. DO NOT FORCE VALVES DOWN.

- A. Retract top pivot pin by turning retracting pin screw counterclockwise. (see illustration)
- B. Using wrench, turn until arm is in 30° open position. (see illustration)
- C. Set door on spindle. DO NOT ATTEMPT TO CLOSE DOOR.
- D. Align jamb portion of the pivot with top patch and turn pin retracting screw clockwise.
- E. Open door to 60° or more and open "closing speed" and "latch" valves by turning screws counterclockwise. Door will then close.

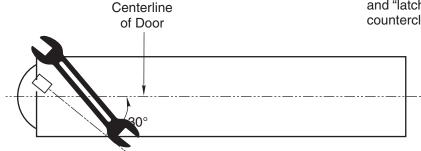

Rixson Specialty Door Controls www.rixson.com 866-474-9766 Technical Department Rixson Specialty Door Controls www.rixson.com 847-671-5670 Technical Department