
Model being	Mounted on Door	Installation
installed	Leaf width	Instruction
D6061-36 / D6071-36	38"	
D6061-42 / D6071-42	44"	80-9360-1031-020
D6061-48 / D6071-48	50"	
D6001DEL-36 / D6001DER-36	38"	80-9360-1035-020
D6001DEL-42 / D6001DER-42	44"	or
D6001DEL-48 / D6001DER-48	50"	80-9360-1037-030

Table B

LAP position	Dim "A"	Door Opening
on Back Plate		Angle
6061/6071@ 95DEG	13" (330)	85 degrees
6061/6071 @ 100DEG	12-3/8"(314)	90 degrees
6061/6071 @ 105DEG	11-3/4" (298)	95 degrees
6061/6071 @ 110DEG	11-1/8" (283)	100 degrees

Pivot

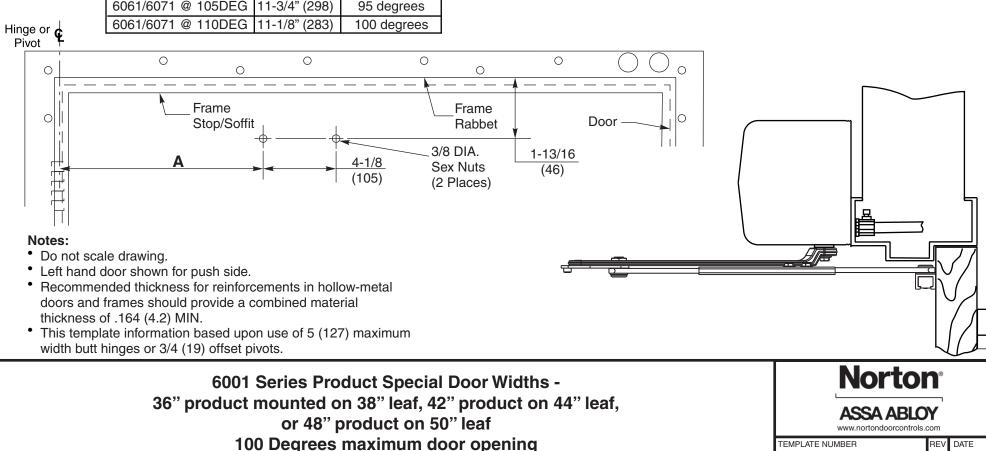

Installation Sequence:

Experience a safer

and more open world

- 2. Prep frame based on installation instructions supplied with product. See Table A for instructions.
- 3. Determine desired degree of door opening (100 degrees is max door opening with this template).
- 4. Prep door for push side heavy duty arm based on template and Table B below.

80-7360-1035-020

03/20

- 5. When installing Push Side LAP to heavy duty arms, use Table B below for correct LAP position based on door opening desired.
- 6. Continue installation using installation instructions supplied with product.