CLP7570/CLP7770 or CPS7570/CPS7770 Series CloserPlus® Security Door Closer

Non Hold Open or Hold Open Parallel Arm Installation Instructions





/ WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadiustment.

Note: For Special Applications a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.

> • For closers with or without "T" suffix Hold Open Control "T" indicates Thumbturn actuated hold open control.

Series			
Sized* Closer	Multi-Sized ** Closer	Product Type	
CLP7770	CLP7570	Security Door Closer (Door Closer with both a Security Cover and Security Arm)	

- CLP7770 Series are sized door closers with 50% power increase capability. Power size 2 weakest power, power size 6 strongest.
- ** CLP7570 Series can be adjusted from power size 1 thru 6.

*For closers with or without "DA" suffix Delayed Action closing feature


**Note:




The closing force for series 7500 door closer is adjustable from a size 1 to a size 6, as outlined in ANSI Standard A156.4. When this series of door closer is installed and adjusted to conform to ADA reduced opening force requirements (5 lbs max.) for interior doors, it may not have adequate closing force to reliably close and latch the door. Power adjustments charted on pages 3,4 and 5 are recommended where possible, to ensure proper door control.

Push Side Installation

Closer mounts on opposite to hinge (push) side of door.

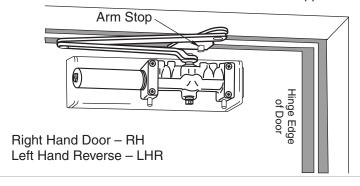

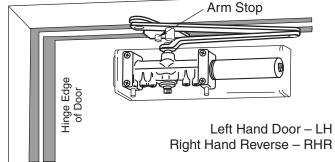


- Door closer cover is handed and cannot be reversed. All other components are non handed.
- It is recommended that the door, on which the door closer will be installed, be hung on ball bearing hinges or offset pivots. Door must swing freely.
- A separate door stop, supplied by others, is recommended to prevent damage to the door closer, closer arm, or to the door, frame or adjacent walls.
- Door and Frame must be properly reinforced, or use of special fasteners employed, to prevent the mounting screws from pulling out.
- All dimensions are given in inches with corresponding metric dimensions (mm) in parenthesis.
- Torx tamper resistant drive machine screws are normally supplied with this product.



CLP7570/CLP7770 Series CPS7570/CPS7770 Series

(Parallel Arm Mount)

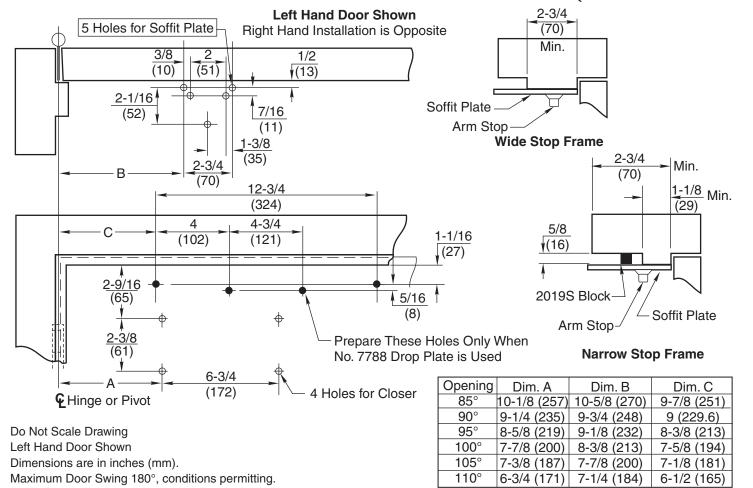

Preparation for Fasteners								
Fasteners		Door or Frame	Drill-Sizes					
Standard	1/4" - 20 Machine Screw	Metal	Drill: #7 (0.201" dia.) Tap: 1/4" - 20					
Optional	Sleeve Nuts and Bolts (SNB)	Hollow Metal	9/32" (7 mm); through 3/8" (9.5 mm) on door or transom-face opposite to closer					
		Aluminum or Wood	3/8" (9.5 mm) through					


For CLP7570 and CPS7570 MODELS ONLY set closer power for door size using chart below.

	<u> </u>									
Power Adjustment Chart										
DOOR	PARALLEL ARM INSTALLATION	*	MAXIMUM DOOR SIZE							
			32" (0.81 m)	36" (0.9 m)	42" (1.1 m)	48" (1.2 m)				
INT	CLP7570	TURNS FROM ZERO	0	3	5	8				
EXT	CLP7570		4	6	8	12				
INT	CPS7570		0	2	5	8				
EXT	CF3/5/0		2	5	8	11				
*16 -360° TURNS MAXIMUM AVAILABLE										

Install closer per instructions
with the proper pre-load
applied to the arm then
adjust spring power.
The power adjustment
will not work properly if
the closer spring is not
pre-loaded.

To increase power, use 11/16" wrench to turn power adjustment nut clockwise.
To decrease power, turn nut counter clockwise.

DO NOT use a power drill or driver to turn adjustment nut. This will

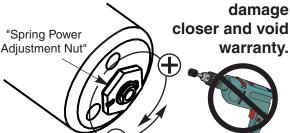


CLP7570/CLP7770 Series CPS7570/CPS7770 Series


(Parallel Arm Mount)

Installation Sequence


- Use template on page 2 to locate holes on door and frame: 4 on door for closer or drop plate. 5 on underside of frame stop for soffit plate.
- Prepare door and frame for fasteners using chart on page 2.
- Mount closer on door. (A drop plate is available for use on doors having narrow top rails) Power Adjustment Nut should be away from hinge. Valves are DOWN for Left Hand Door. Valves are UP for Right Hand Door.

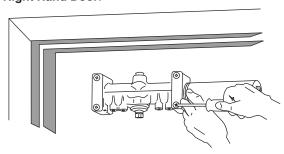

 Use 1/8" hex wrench to close valves. Turn Clockwise. For STANDARD CLOSER, close valves 'S/D' and 'L'. DELAYED ACTION CLOSER, close valves 'S' and 'L'.




 
- Set handing of "Arm Stop" on soffit plate. See illustration on Page 1 for positions. If required, rotate stop. Secure with 1/4-20 x 5/16 machine screw.
- With door closed, use wrench to rotate pinion shaft as illustrated below.
- Caution: Closer arm is under spring tension and may be difficult to rotate.



 Place main arm on shaft, aligning mark on arm with pinion flat on pinion shaft; "Z" for Left Hand Door; "Y" for Right Hand Door. Secure with 1/4-20 x 1/2" round head machine screw with hex head machine screw.



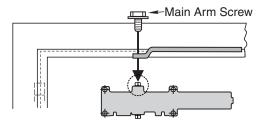






Right Hand Door




ASSA ABLOY

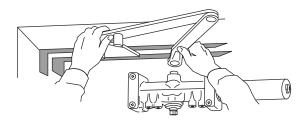


DO NOT BACK VALVES OUT OF CLOSER OR A LEAK WILL RESULT

- Reopen valves closed in Step 2. Turn Counterclockwise
- With door closed, align soffit plate with mounting holes in frame. Fasten soffit plate to frame with flat head screws provided.
- Adjust closer per instructions on page 4 before installing cover

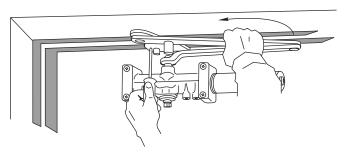


Install Cover:

· Screw standoffs into holes in closer.

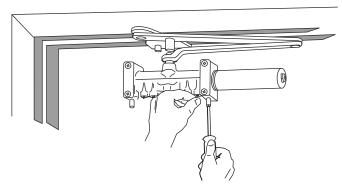

Fasten cover to closer and cover bracket with 4 #8-32x1/4 round head screws provided.

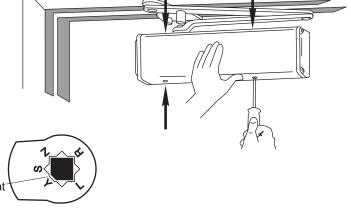

Copyright © 2002, 2014, 2022, ASSA ABLOY Accessories and Door Controls Group, Inc. All rights reserved. Reproduction in whole or in part without the express written permission of ASSA ABLOY Accessories and Door Controls Group, Inc. is prohibited.

The ASSA ABLOY Group is the global leader in access solutions. Every day we help people feel safe, secure and experience a more open world.



Adjustments


Closing Speed Controls (Figure 2A or 2B and 3.)

- Valve "S/D" Controls Sweep Range on Standard closer (or Delay Range on Delayed Action closer).
- · Valve "L" Controls Latch Range.
- Valve "S" Controls Sweep Range only on Delayed Action closer.

Closing Power Control Figure 1 For CLP7570 and CPS7570 Only Set closer to desired size. For recommended sizes, refer to the Power Adjustment Chart on page 2. Install closer per instructions with the proper pre-load applied to the arm then adjust spring power. The power adjustment will not work properly if the closer spring is not pre-loaded. To increase power, use 11/16" wrench to turn power adjustment nut clockwise. To decrease power, turn nut counter clockwise. DO NOT use a power drill or driver to turn adjustment nut. This will damage closer and void warranty. **Closing Speed Controls** Figure 2 Standard Delayed Action 2B 2A Closing Cycle Closing Cycle Closing Speed Controls Figure 3 "L" (Latch) " (Latch) S" (Sweep) "S/D" (Sweep) "S/D" (Delaved Action) **Standard Closer Delayed Action** Closer Slow Do not force valves **1/8**" counter-clockwise out


Opening Door Control (Figure 4.)

- Backcheck ("B") valve controls the hydraulic resistance to door opening. NEVER close this valve completely - it is not to provide a positive stop.
- Backcheck position ("P") valve controls the door angle where backcheck cushioning starts. Valve normally closed.

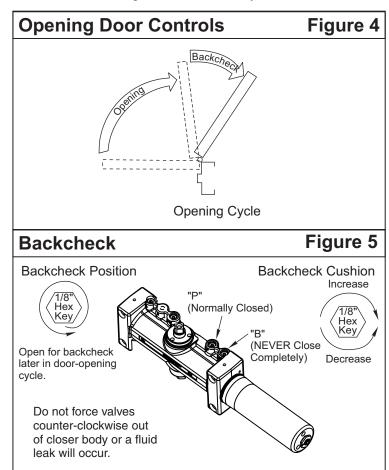

Door Holder Option

 The Hold-Open feature is controlled by the hex knob located on the arm of the unit.



Thumbturn Adjustment (Units suffixed "T")

Technical Product Support: Monroe, NC 28112 USA Phone: 877.974.2255 ext: 2

leak will occur.

of closer body or a fluid

Techsupport.NortonRixson@assaabloy.com

NortonRixson.com

Hey Key

Fast

All Valves