8000H

Non Handed Door Closer Regular Arm Top Jamb Mount Parallel Arm

With or without DA suffix (delayed action)

Hold Open Arm Models

Adjustable (Sizes 1-6) 8101H




ASSA ABLOY, the global leader in door opening solutions





/ WARNING


This product can expose you to lead which is known to the state of For more information go to www.P65warnings.ca.gov.


Ce produit peut vous exposer au plomb qui, dans l'état de la Californie, California to cause cancer and birth defects or other reproductive harm. est reconnu pour causer le cancer, des anomalies congénitales ou d'autres problèmes de reproduction. Pour plus d'informations, visitez: www.P65warnings.ca.gov.

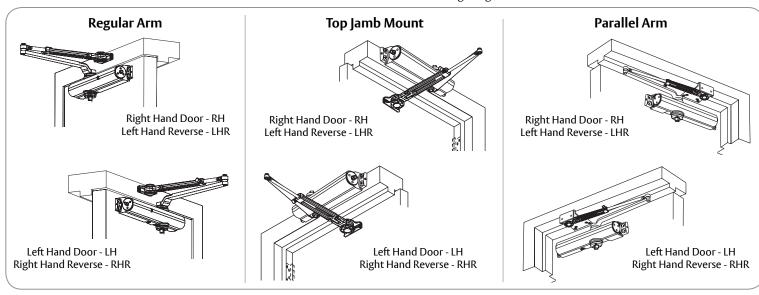

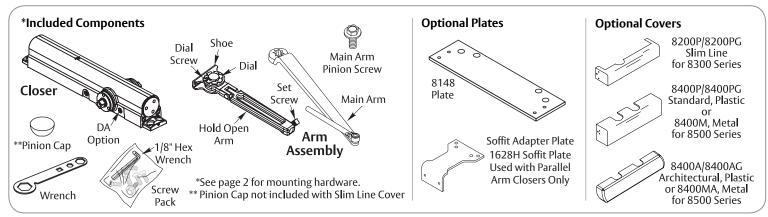

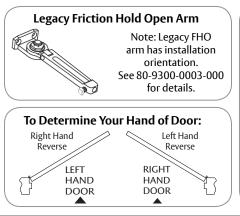

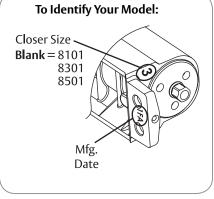

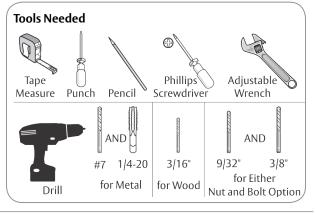

Before You Begin

ATTENTION:

An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These installation instructions should be followed to avoid the possibility of misapplication or misadjustment.

- "DA" suffix (Delayed Action) is an optional feature.
- For special applications, a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.
- Doors should be hung on ball bearing or anti-friction hinges.

- A separate door stop is recommended.
- Always consult door/frame manufacturer for fastener compatibility.
- Door and frame must be properly reinforced.
- Adjust closing time speed between 3 and 7 seconds from 90° to 0°.
 Greater closing times may be required for elderly or handicapped.
- These door closers should NOT be installed on exposed side (weather side) of exterior doors.
- Dimensions are given in inches (millimeters).


Mounting Hardware		Door or Frame	Drill	
	Closer, H/O Shoe or Optional PA Bracket: 1/4-14 x 1-1/2 Oval Flat Head Mach. Screw		3/16" (4.76mm)	
Dunnin	Closer, H/O Shoe or Optional PA Bracket: 1/4-20 x 3/4 Oval Flat Head Mach. Screw	Metal	Drill #7 (.201 dia. or 5.10mm)	
(Januar)	H/O Shoe to Optional PA Bracket: 1/4-20 x 1/2 Oval Flat Head Mach. Screw	Metal	Tap 1/4-20	
(Dinning)	Closer: Sleeve Nut and Bolt (SNB)	Hollow Metal	9/32" (7.00mm) thru 3/8" (9.50mm) door face opposite to closer	
	(optional)	Aluminum or Wood	3/8" (9.50mm) thru	
Consessed and a consessed and	Closer: Thru Bolt and Grommet Nut (TBGN) (optional)	All	9/32" (7.00mm) thru 3/8" (9.50mm) dia. x 3/8" (9.500mm) deep, door face opposite to closer	

Number of Turns

Closer Adjustments




 
Use provided hex wrench to turn valves. NEVER force valves out of closer. NEVER completely close backcheck valve.



Door must be open to adjust spring closing power. Refer to chart. **Do not use a power drill. Warranty will be void.**

	Spring Closing Power			Number of Turns Required				
		⊈ TYPE		MAXIMUM DOOR SIZE				
		DOOR	OF INST.	*	34" (0.85M)	36" (0.90M)	42" (1.05M)	48" (1.20M)
	200	00, 8500 INTERIOR	Regular Arm Top Jamb	° TURNS	5	8	11	13
_	8300, 8		Parallel Arm		7	10	13	16
		EXTERIOR	Regular Arm Top Jamb		7	10	13	16
	8100,	810 EXTE	Parallel Arm		9	12	15	18
	*20	20 FULL (360°) TURNS MAX. AVAILAB			ABLE = 10 TURNS AS SHIPPED			

 

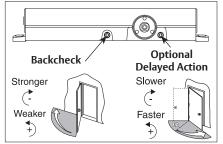



Pinion Cap and Cover




Do not over tighten cap or cover screws.

Architectural ("A") covers cannot be used on parallel mounted closers with doors swinging over 120°.

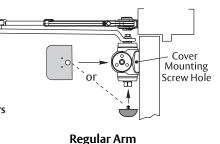

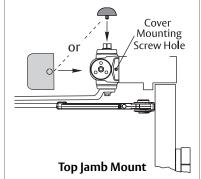


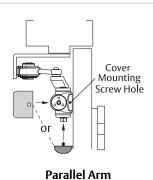



8000H Regular Arm Installation (Right Hand Shown)


1. Prepare door and frame.

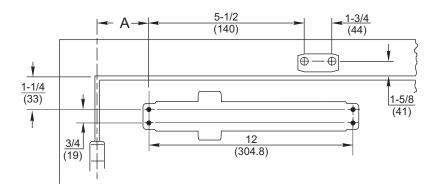


Opening	Dimension "A"
To 100°	7-1/2 (191)
101° to 130°	<u>6</u> (152)
131° to *180°	4-1/2 (114)

^{*}Door/Wall/Hardware/Jamb conditions permitting


2. Mount closer to door.

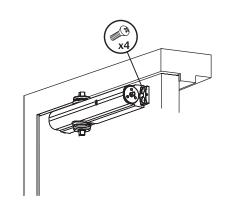


3a. Remove dial from Hold Open arm.

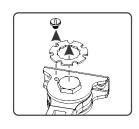


3b. Install separate arms.

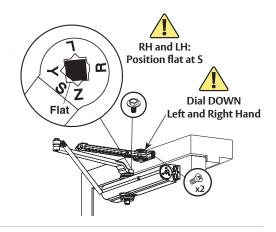



4. Connect arms, preload spring and tighten set screw.

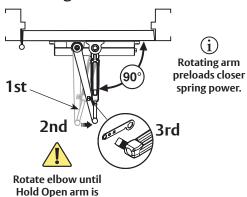

 5. Set Hold Open.

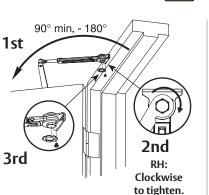



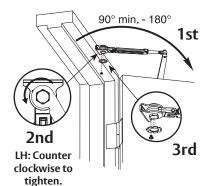

You've installed the 8000H Hold Open Closer - Regular Arm.


Go to page 2 for closer adjustments and decorative cap or cover installation.



perpendicular to frame.

8000H Top Jamb Mount Installation (Right Hand Shown)


1. Prepare door and frame.

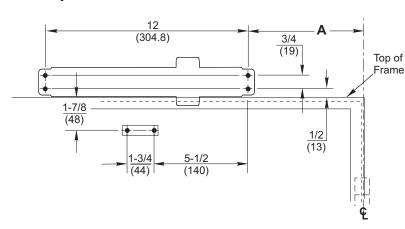


Opening	Dimension "A"	
To 100°	<u>7-1/2</u> (191)	
101° to 130°	<u>6</u> (152)	
131° to *180°	4-1/2 (114)	

Door/Wall/Hardware/Jamb conditions permitting

 A longer connecting rod is required for reveals greater than 3" (76)




2. Mount closer to frame.

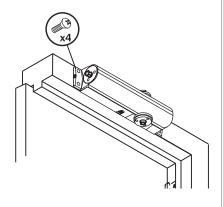


3a. Remove dial from Hold Open arm.




3b. Install separate arms.

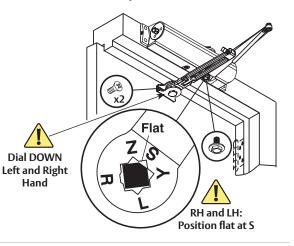


4. Connect arms, preload spring and tighten set screw.

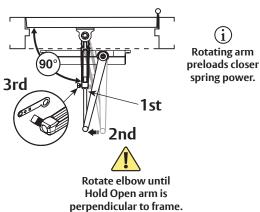

5. Set Hold Open.

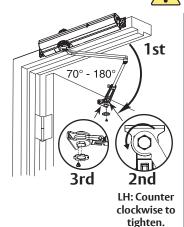

Keep door open in position until dial screw secures dial.

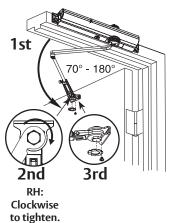


You've now installed the 8000H Hold Open Closer - Top Jamb Mount.

Go to page 2 for closer adjustments and decorative cap or cover installation.



8000H Parallel Arm Installation (Right Hand Shown)


1. Prepare door and frame.

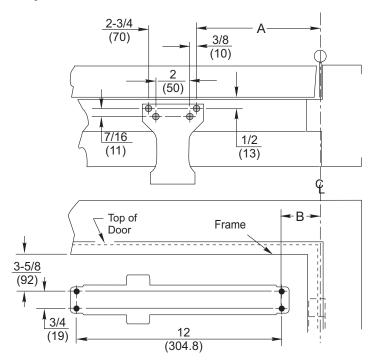

Door Opening	A	ВФ
To 120°	9-1/2 (241)	3-3/4 (95)
*121° to 180°	7 (178)	1-1/4 (32)

* Door/Wall/Hardware/Jamb conditions permitting


2. Close latch and sweep valves.

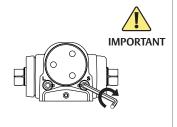


3. Remove dial from Hold Open arm.




4. Install soffit plate and mount closer.

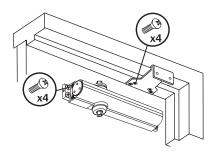

5. Install Hold Open arm to plate.

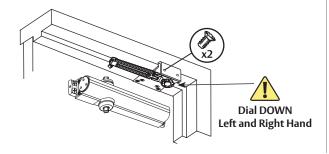

6. Place main arm on closer spindle and rotate.

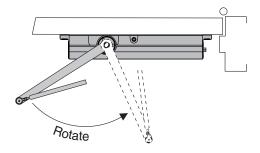







8000H Parallel Arm Installation (Right Hand Shown) continued


7. Remove arm and attach as shown.

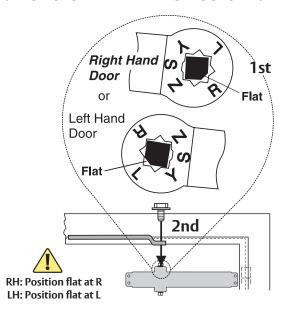


8. Open latch and sweep valves.

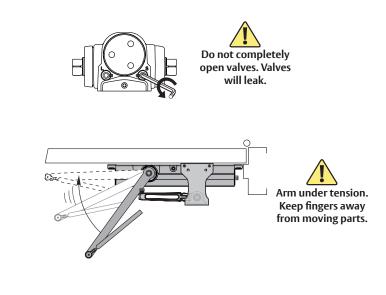

9. Connect arms, preload spring and tighten set screw.

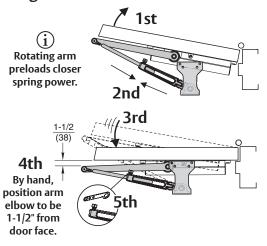

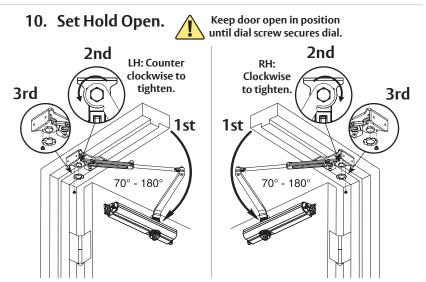

You've now installed the 8000H Hold Open Closer - Parallel Arm.

Go to page 2 for closer adjustments and decorative cap or cover installation.

www.nortondoorcontrols.com

Norton Technical Product Support: Monroe, NC 28112 USA Phone: 800.438.1951 ext: 6030 TechSupport.Norton@assaabloy.com