## 8000 Series Door Closer

# Regular, Top Jamb, or Parallel Arms Non-Hold Open Installation Instructions








This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm.


For more information go to: www.P65warnings.ca.gov.


**Non-Hold Open Arm Models** 8101, 8301, 8501


READ AND FOLLOW ALL INSTRUCTIONS. SAVE THESE INSTRUCTIONS.

> An incorrectly installed or improperly adjusted door closer can cause property damage or personal injury. These instructions should be followed to avoid the possibility of misapplication or misadjustment.

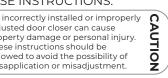


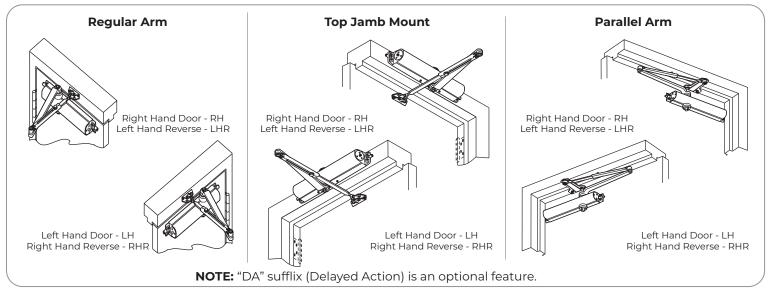

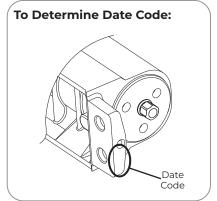

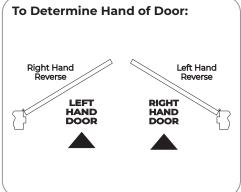



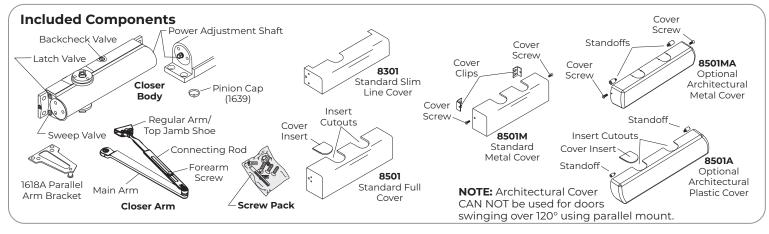



# 8000 Series Non-Hold Open Closer

**NOTES:** For special applications a separate door and frame preparation template is packed with these instructions. Use this instruction sheet for installation sequence and closer adjustments only.

- Doors should be hung on ball bearing or anti-friction hinges.
- A separate door stop is recommended.
- Door and frame must be properly reinforced.
- Always adjust spring power before adjusting control.
- Adjust closing time speed between 3 and 7 seconds from 90° to 0°. Greater closing times may be required for elderly or handicapped.
- These door closers should NOT be installed on the exposed side (weather side) of exterior doors.

## **Supplied Hardware**

	Mounting Hardware	Door or Frame	Drill	
	Closer, PA Bracket: 1/4-14 x 1-1/2 Oval Flat Head Self Drilling Screw		3/16" (4.8mm) for wood	
	Closer, PA Bracket: 1/4-20 x 3/4 Oval Flat Head Mach. Screw	Matal	Drill #7 (.201 dia. or 5.1mm)	
	Arm Shoe to Jamb or Door: 1/4-20 x 5/8 Round Head Mach. Screw	Metal	Tap 1/4-20	
	Arm Shoe to Jamb or Door: 1/4-14 x 1-1/2 Round Head Self Drilling Screw	Wood/Metal 3/16" (4.8mm) for wood		
	<b>Closer:</b> Sleeve Nut and Bolt (SNB) (optional)	Hollow Metal	9/32" (7.0mm) thru 3/8" (9.5mm) door face opposite to closer	
	with 1/4-20 x 3/4 Oval Flat Head Mach. Screw (recommended)	Aluminum or Wood	3/8" (9.5mm) thru	
December of the state of the sta	Closer: Thru Bolt and Grommet Nut (TBGN) (optional)		9/32" (7.0mm) thru 3/8" (9.5mm) dia. x 3/8" (9.5mm) deep, door face opposite to closer	


## **Closer Adjustments**



By law the Americans with Disabilities Act (ADA) may require that door closer installation comply with accessibility guidelines.



The closing force for series 8301 & 8501 door closers is adjustable from a size 1 to a size 6, as outlined in ANSI Standard A156.4. When these series of door closers are installed and adjusted to conform to ADA reduced opening force requirements (5 lbs max.) for interior doors, they may not have adequate closing force to reliably close and latch the door. Power adjustments charted on this page are recommended where possible, to ensure proper door control.

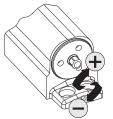

**Spring Power Adjustment** 

(Use 5/16" socket or adjustable

wrench for this adjustment)

	Door	Type of Installation		Maximum Door Size			
			*	34" (86cm)	36" (91cm)	40" (102cm)	48" (122cm)
8101/8301/8501	Interior	Regular Arm Top Jamb	Full 360° Turns	5	8	11	13
		Parallel Arm		7	10	13	16
	Exterior	Regular Arm Top Jamb		7	10	13	16
		Parallel Arm		9	12	15	18
*20 Full (360°) turns maximum available.							

**Number of Turns Required** 


Closer is shipped set at mid range setting = 10 turns


**Spring Closing Power** 




Adjust Closing Speed Time to between 3 to 7 seconds from 90°. Use of the door by handicapped, elderly or small children may require greater closing time.



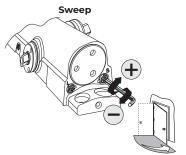

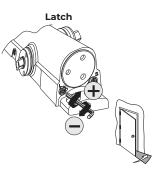

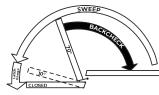

Backcheck




Experience a safer and more open world




## 8000 Regular Arm Installation (Right Hand Shown)

### A. Prepare door and frame.

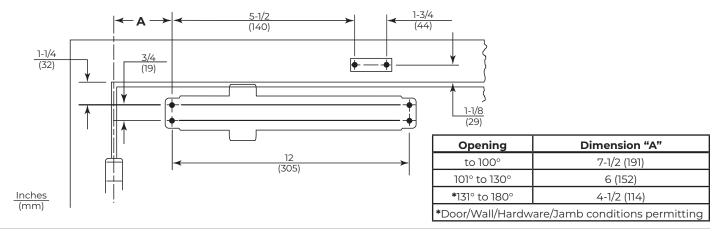


## B. Install Closer to Door, Choose arm placement in shoe, and install arms.

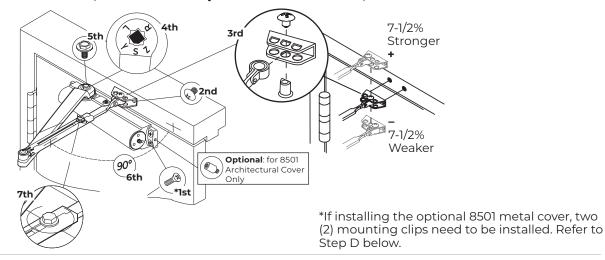


#### C. Adjust closer.

Refer to page 2 for Delayed Action, Sweep, Latch, and Backcheck closer adjustments.

#### D. Install Pinion Cap or Optional Cover

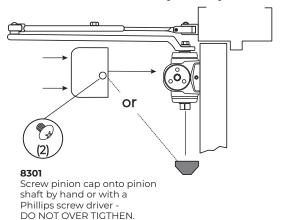

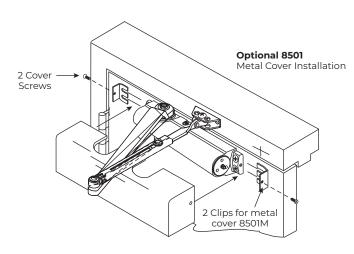


The 8000 Non-Hold Open Closer - Regular Arm has now been installed.




## 8000 Top Jamb Installation (Right Hand Shown)

#### A. Prepare door and frame.

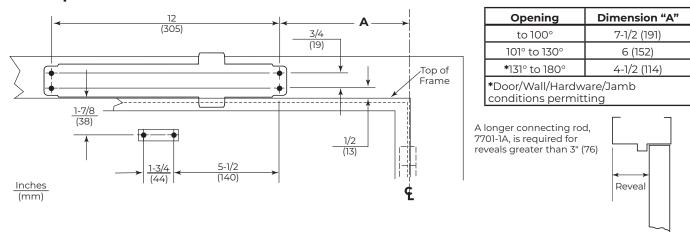


#### B. Install Closer to Door, Choose arm placement in shoe, and install arms.

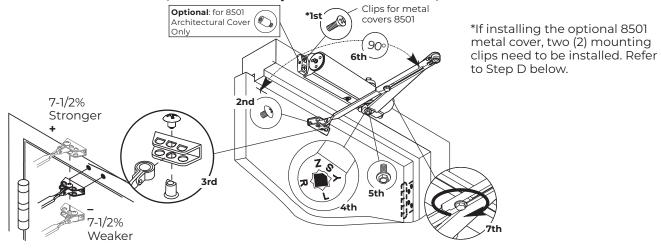

#### C. Adjust closer.

Refer to page 2 for Delayed Action, Sweep, Latch, and Backcheck closer adjustments.

## D. Install Pinion Cap or Optional Cover

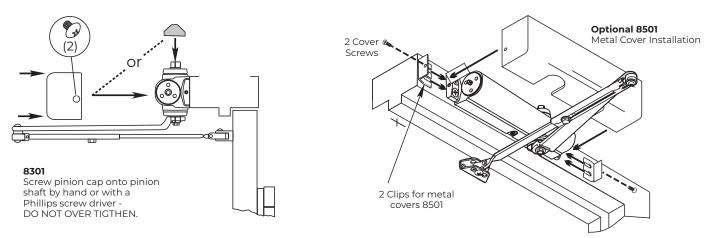


The **8000 Non-Hold Open Closer - Top Jamb** has now been installed.



## 8000 Parallel Arm Installation (Right Hand Shown)


#### A. Prepare door and frame.

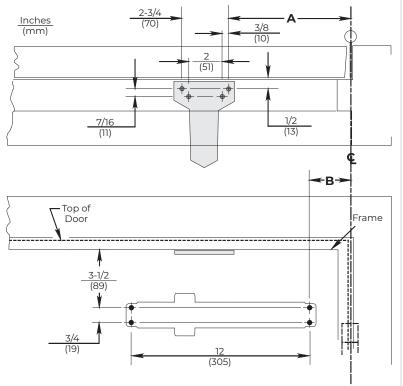


Opening	<b>A</b> ⊕	В.ф-	
to 120°	9-1/2 (241)	3-3/4 (95)	
*121° to 180°	7 (178)	1-1/4 (32)	

\*Door/Wall/Hardware/Jamb conditions permitting. 8501A and 8501MA Series cannot be installed for this door opening range.


# B. Install Closer to Door, Choose arm placement in shoe, and install arms.

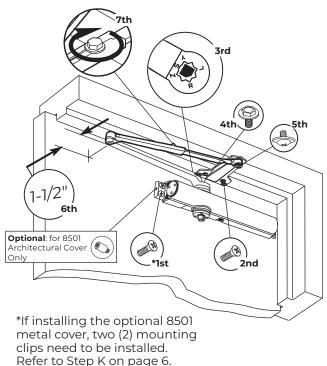


## C. Close Valves.

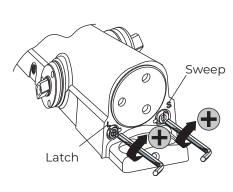

## D. Install Closer and Bracket.

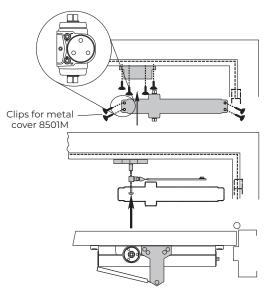

#### E. Preload Closer.

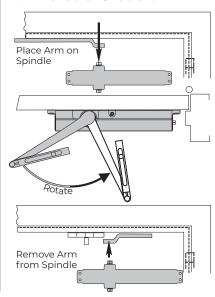


Continued on next page...

The ASSA ABLOY Group is the global leader in access solutions. Every day we help people feel safe, secure and experience a more open world.




## 8000 Parallel Arm Installation (Right Hand Shown)-cont.


# F. Install arms on Pinion Square.

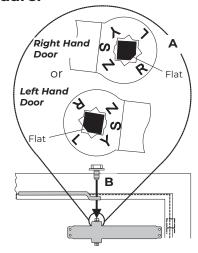


## G. Open Valves.

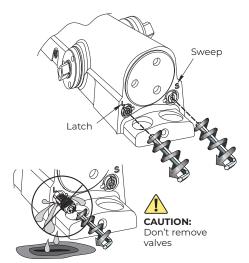

#### H. Assemble Arm.

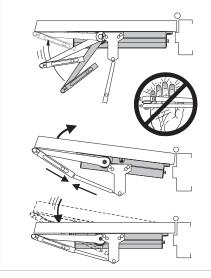


#### I. Install Arm Screw.

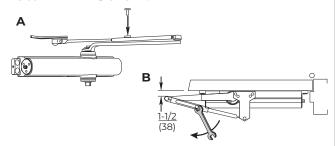


## J. Adjust closer.

Refer to page 2 for Delayed Action, Sweep, Latch, and Backcheck closer adjustments.

## K. Install Pinion Cap or Optional Cover

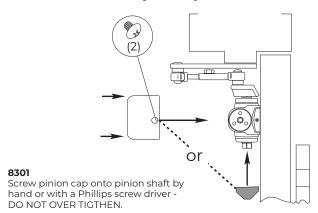

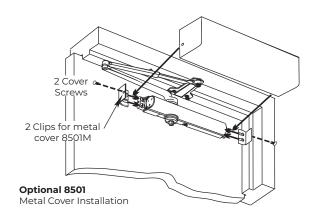

The **8000 Non-Hold Open Closer - Parallel Arm** has now been installed.

Technical Product Support: Monroe, NC 28112 USA

Phone: 877.974.2255 ext: 2

Techsupport.NortonRixson@assaabloy.com

NortonRixson.com