

100 / 500 200 / 600


KEY-RETAINING / NON-KEY-RETAINING CONVERSION INSTRUCTIONS

- 1. Remove both screws from front of lock face
- 2. Lift off front of lock face
- 3. Remove key-retaining cam disk (or regular cam disk)
- Replace with standard cam disk (or key-retaining cam disk)
- 5. Replace front of lock face
- 6. Secure with both screws

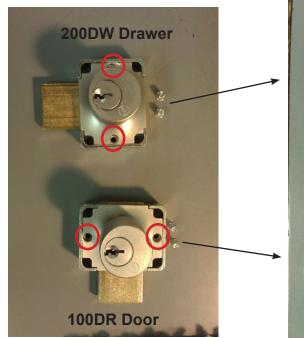

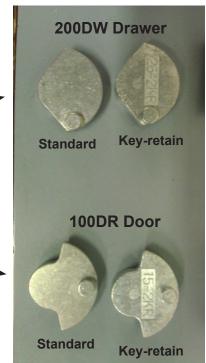


Remove key-retaining cam disks

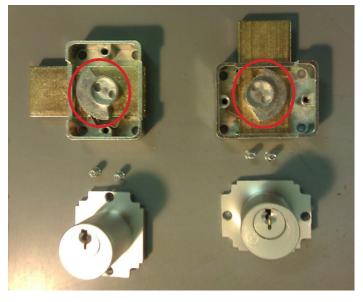

00

Key-retaining cam disks have two holes

Replace with standard cam disks

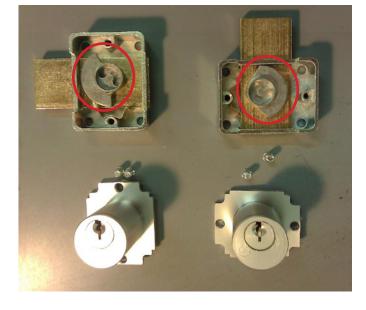



Standard cam disks have a curved slot

