

# Installation Instructions

For small format interchangeable core cylinders



Figure 1

**Step 1** Make sure the prongs inside the lock body are at the approximate angle indicated in Figure 1 and the lock is in the fully locked or unlocked position.



Figure 2

**Step 2** Insert key labeled CONTROL into cylinder and turn slightly clockwise to the 1:00 o'clock position (Figure 2). This will retract the locking bar (Figures 3 & 4).

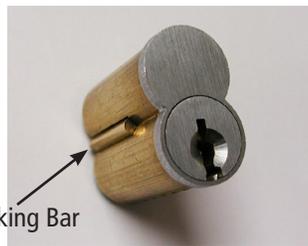


Figure 3



Control key  
will retract  
locking bar

Figure 4



Figure 5

**Step 4** With the CONTROL key in the 1:00 o'clock position, insert the cylinder all the way into the lock body (Figure 5).



Figure 6

**Step 5** Return the CONTROL key to the 12:00 o'clock position (Figure 6) and remove the key. The cylinder will now be locked into the lock body (Figure 7).



Figure 7

**Step 6** Reverse the above procedure to remove the cylinder from the lock body.