

**Electronic Digital Safe Lock Operating Instructions**

**See lower right for First Time Power Up instructions.**

**Electronic Digital Lock:**

Upon installing the batteries, the electronics will perform a self-check and emit a tone that the batteries are good.

**To OPEN (Main User 1<sup>st</sup> code):**

Press “ENTER”, then **7777** (Factory code) then “ENTER”. After the musical tone and “Green” light, turn the knob to the right (within 4 seconds) to open the door.

**To Change The Personal Code:**

Two separate codes (1<sup>st</sup> & 2<sup>nd</sup>) may be used with (2 to 6 digits in length). Proceed as stated below for 1<sup>st</sup> or 2<sup>nd</sup> User code change instructions.

**(1<sup>st</sup> User Code set as the factory code of 7777)**

On the back of the door, press the change button  located through the hole in the back cover. On the front keypad, enter the new personal code (2-6 digits), then press “ENTER”. A “Green” light and a musical tone indicate the new code has been accepted. Try the new code! Press “ENTER”, the new code and “ENTER”. A “Green” light, a musical tone, and a “click” will result. Turn the door knob to open.

**(2<sup>nd</sup> User Code, if desired)**

On the back of the door, press the change button  located through the hole in the back cover. On the front keypad press “ENTER” then enter the new personal code (2-6 digits), then press “ENTER”. A “Green” light and a musical tone indicate the new code has been accepted. Try the new code! Press “ENTER”, the new code and “ENTER”. A “Green” light, a musical tone, and a “click” will result. Turn the door knob to open.

**Caution!**


If a wrong number is entered, a tone is emitted and the “RED” light will be lit. If 3 wrong attempts, lock will power down for 5 minutes.

**Emergency Bypass Key:**

There is a key lock behind the battery compartment. Slide the battery cover to the left and remove. Remove the batteries. Remove two screws from the housing and carefully let it hang out of the way. Insert one of the keys provided with the safe and turn to the left a full rotation and hold, then turn the knob to the right and open the door.

Caution: Be sure and return the key back to the right until it stops before removing, or the lock will remain open and the door unlocked.

Note: If the keys are lost, the key number is stamped on the face of the cylinder.

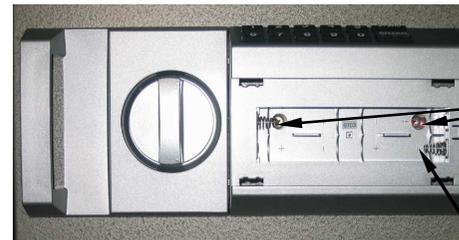

Battery cover and batteries removed. Remove the two housing screws. Carefully allow the housing to hang down and expose the key cylinder.



**First Time Power Up !**

Slide the battery cover to the left and remove. Remove the protective battery tag. The system should power up. Replace the battery cover.

**Low Battery:**

If any irregular response is experienced while entering your code, replace the batteries. Replacing batteries will not affect existing personal codes. Slide the battery cover to the left and remove. Replace the batteries with a good brand of Alkaline battery. Be sure and place the (+) end of the battery in each position of the base as indicated by the symbol.