



## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*

# ALARM LOCK Tech Support

## TECH TIP



**Date:** Thursday, July 16, 2015

**Subject:** Programming the **NETWORXPANEL** Wireless Remote Release Buttons

**Models:** **NETWORXPANEL**

Whether the **NETWORXPANEL** is wired with one or two keypads or is configured for a single door or for "Two Door Mode", the pairing of a wireless remote release button to the **NETWORXPANEL** is the same. If the **NETWORXPANEL** is wired with two keypads, the pairing of the remote release button can be performed at either keypad. Up to 10 wireless remote release buttons can be paired to the **NETWORXPANEL**.

**1. At the locking device keypad**, enter Program Mode (press the Master Code followed by .

**2. To pair the first remote release button**, press:



Verify keypad sounds "**beep-beep-beep**" continuously. (The "**beep-beep-beep**" indicates the **NETWORXPANEL** is ready to pair a remote release button; the **NETWORXPANEL** will wait about 30 seconds for the next step).

**3. With the wireless remote in hand**, observe its LED as you perform the next steps:

- Press and hold** one of the four buttons.
- The red LED **lights**...keep holding the button...
- When the LED **flashes green**, release the button...
- Wait a few seconds...observe the LED as follows:

LED **solid green** = Pairing successful. Go to step 4 to pair another remote release button.

LED **solid red** = Pairing unsuccessful. Start again at step 2.

**4. To pair another wireless remote release button**, you must start again at step 2, but with a slight change, as follows:

As previously stated, up to 10 wireless remote release buttons may be paired to the



## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • [info@alarmlock.com](mailto:info@alarmlock.com)

*Note: Technical Service is for security professionals only*

**NETWORKPANEL.** Each button added occupies a "slot" (numbered 1-10); therefore, increment the "slot" number of the new button in step 2. For example, when pairing the first remote in step 2, you pressed:



To pair a second remote, you will need to press:



To pair a third remote, you will need to press:



...and so on. Therefore, to enroll another wireless remote release button, go to step 2, but use the incremented button "slot" number.