




SCHREXKIT-ML



INSERT INSTRUCTIONS

FIELD INSTALLABLE REQUEST TO EXIT (REX) OR REX-BY-PASS SWITCH FOR SCHLAGE L9000 SERIES MORTISE LOCKS. THE KIT'S EASY "DROP-IN" INSTALLATION ADDS A SIGNAL TO ALERT THE CONTROL PANEL THAT THE DOOR IS ABOUT TO BE OPENED BY SOMEONE EXITING FROM WITHIN THE SECURED AREA. THIS SWITCH IS SPDT (SINGLE PULL, DOUBLE THROW).

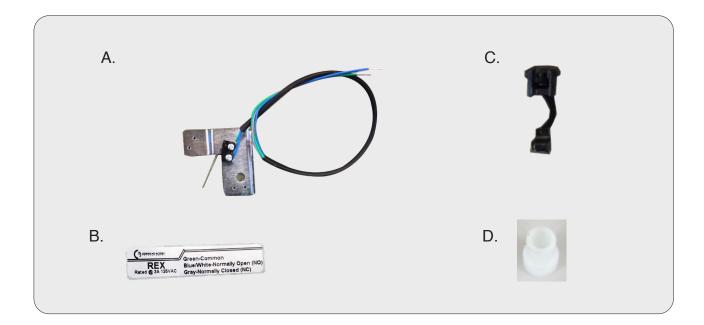

KIT INCLUDES

- A. 1- REX BRACKET
- B. 1- REX STICKER
- **C.** 1- 40243 STRAIN REFLIEF
- **D.** 1- FIRE DOOR FUSE



WORKS WITH:

- SCHLAGE L9000
- SCHLAGE L909X
- CAT ML80/480/485

REX/REX-BY-PASS

- SPDT RATED .5A @24V
- GREEN= COMMON (C)
- BLUE = NORMALLY OPEN (NO)
- GREY = NORMALLY CLOSED (NC)

1

INSTALLATION INSTRUCTIONS




A REMOVE COVER PLATE (4 SCREWS).



C. REMOVE THE FOLLOWING ITEMS: FOR REXBYPASS ONLY TRIM HUB CENTER SPRING ASSEMBLY - 3/16"



E. PLACE REX BRACKET OVER POST & REPLACE MOUNTING TAB (3) TO SECURE BRACKET.

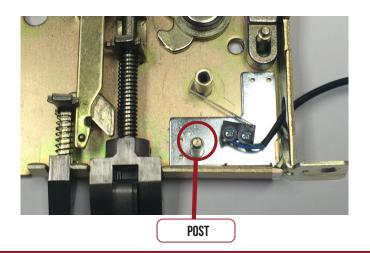


B. REFERENCE FOR FULLY ASSEMBLED LOCK.



D. FISH WIRES THROUGH THE BOTTOM HOLE IN THE LOCK BODY.




F. REPLACE HUB CENTER SPRING ASSEMBLY (5). LINE UP & PLACE OVER POSTS SO (5) LIGHTLY RESTS ON SWITCH.

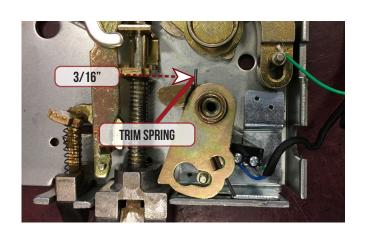

INSTALLATION INSTRUCTIONS



COMBINE FIRE LINK & NEW FIRE DOOR FUSE (B) TOGETHER LINE UP & PLACE OVER POSTS SO IT LIGHTLY REST ON SWITCH ROTATE FIRE LINK BY PUSHING TAB CLOCKWISE

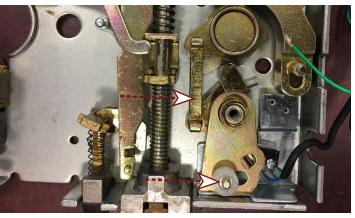


FUNCTION




REPLACE COVER. IF NEEDED PULL ON ANTI-PIC & PUSH LATCHBOLT TO HELP CASE SLIP TOGETHER. TEST THAT LATCHBOLT & ANTI-PICK



PULL SLACK OUT OF THE SWITCH WIRES AND INSTALL STRAIN RELIEF.

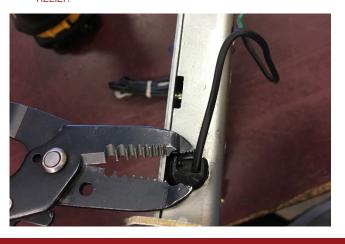

H. ADD RETRACTOR HUB (1)

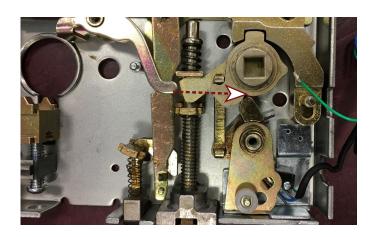

RE-INSTALL COVER & TIGHTEN 4 SCREWS. PLEASE WIRING CODE STICKER ON CASE.

