


### Surface Mount Reader, Side View (Typical)

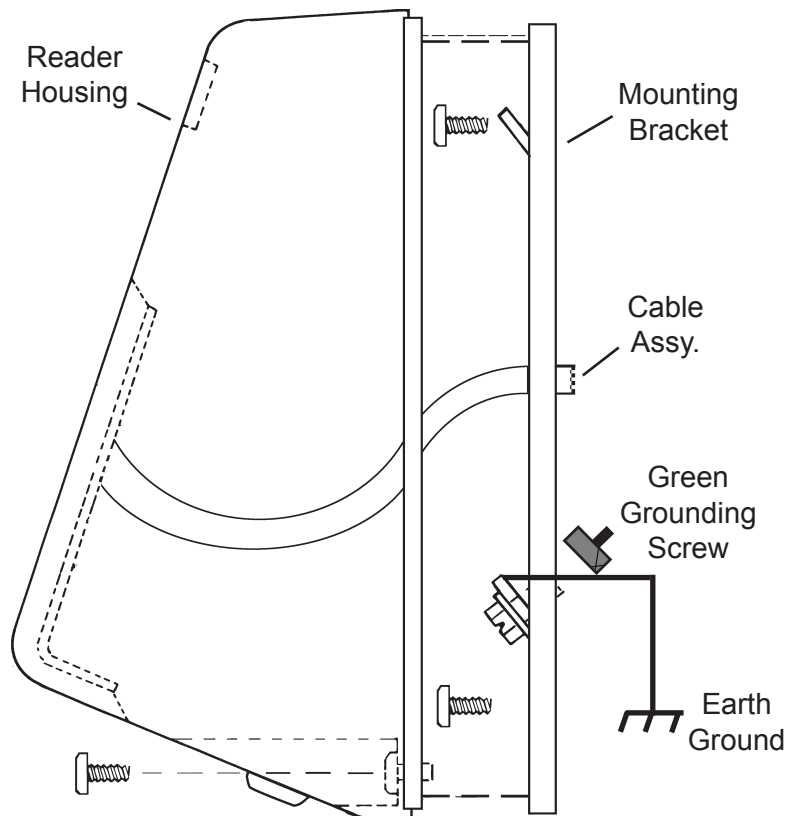

## Grounding Connections:

All Models: You **MUST** connect the Green Ground Screw on the Reader Mounting Plate to a Good Earth Ground. Use 18AWG or heavier wire, and make the connection as short as possible. Failure to do so may result in improper operation or damage to the reader.

(Also applies to MH, FM, models)