


- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.


**For 83" SD  
Models SL11, SL14,  
SL18, SL24**

**ATW LOCATIONS**

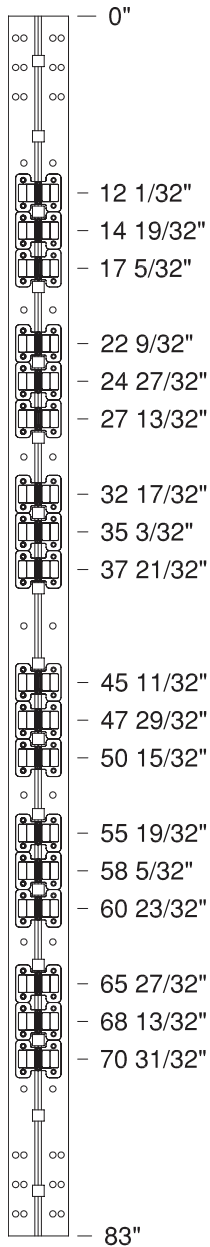

**For 83" HD  
Models SL11, SL14, SL18, SL24,  
SL31, SL44, SL48, SL84**



**ATW LOCATIONS**

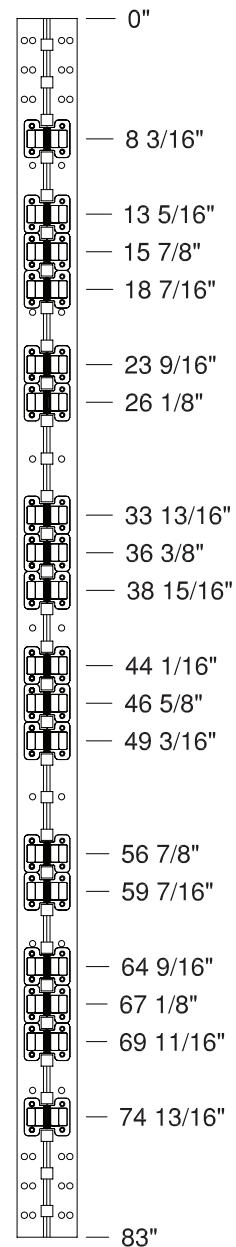



# Concealed Geared Hinges



- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.

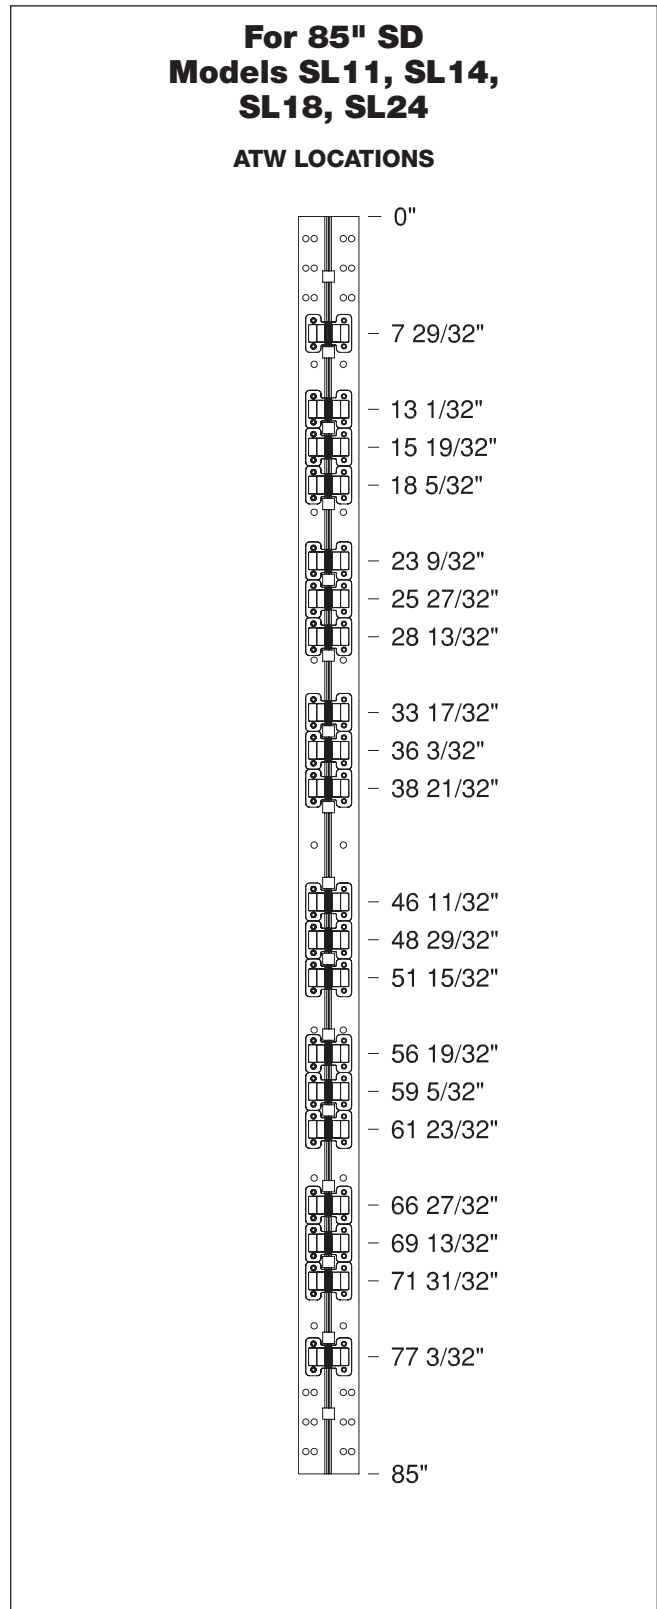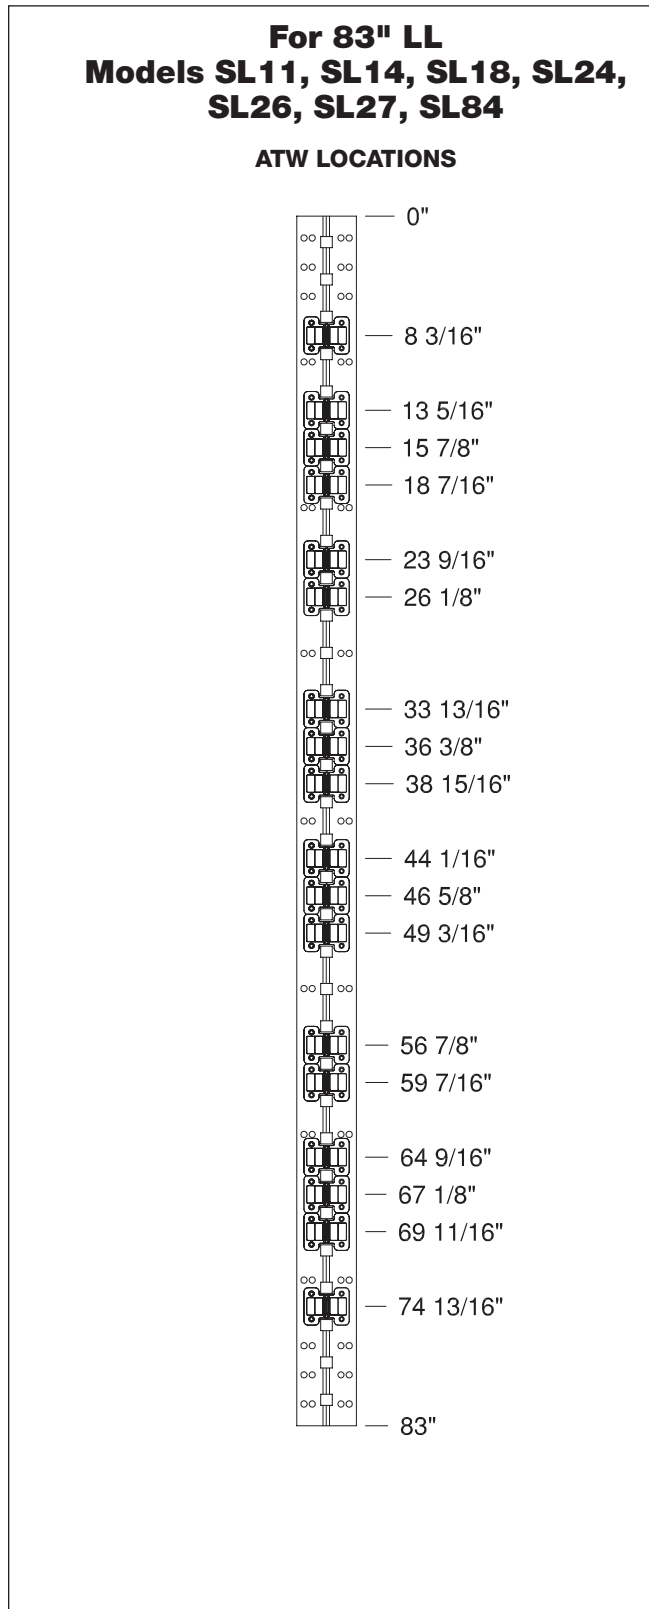



- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.

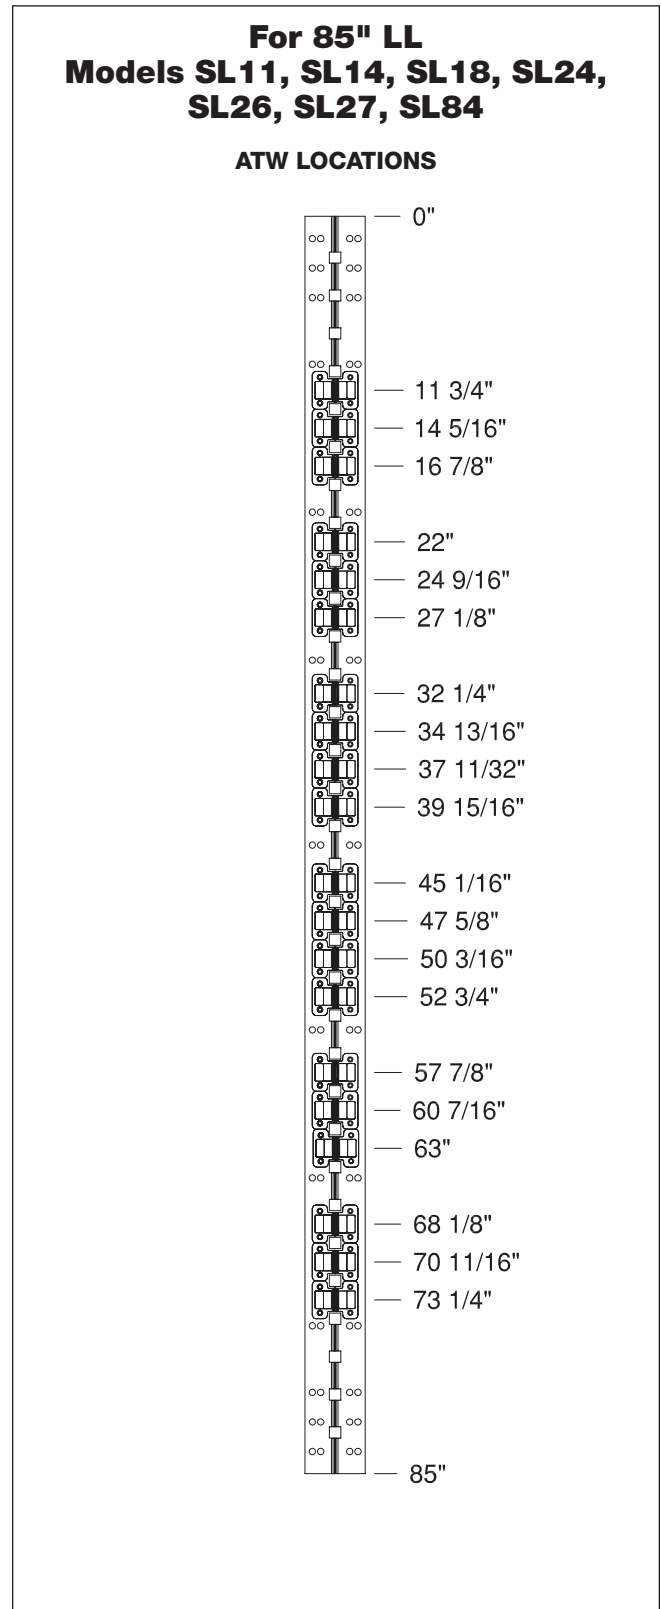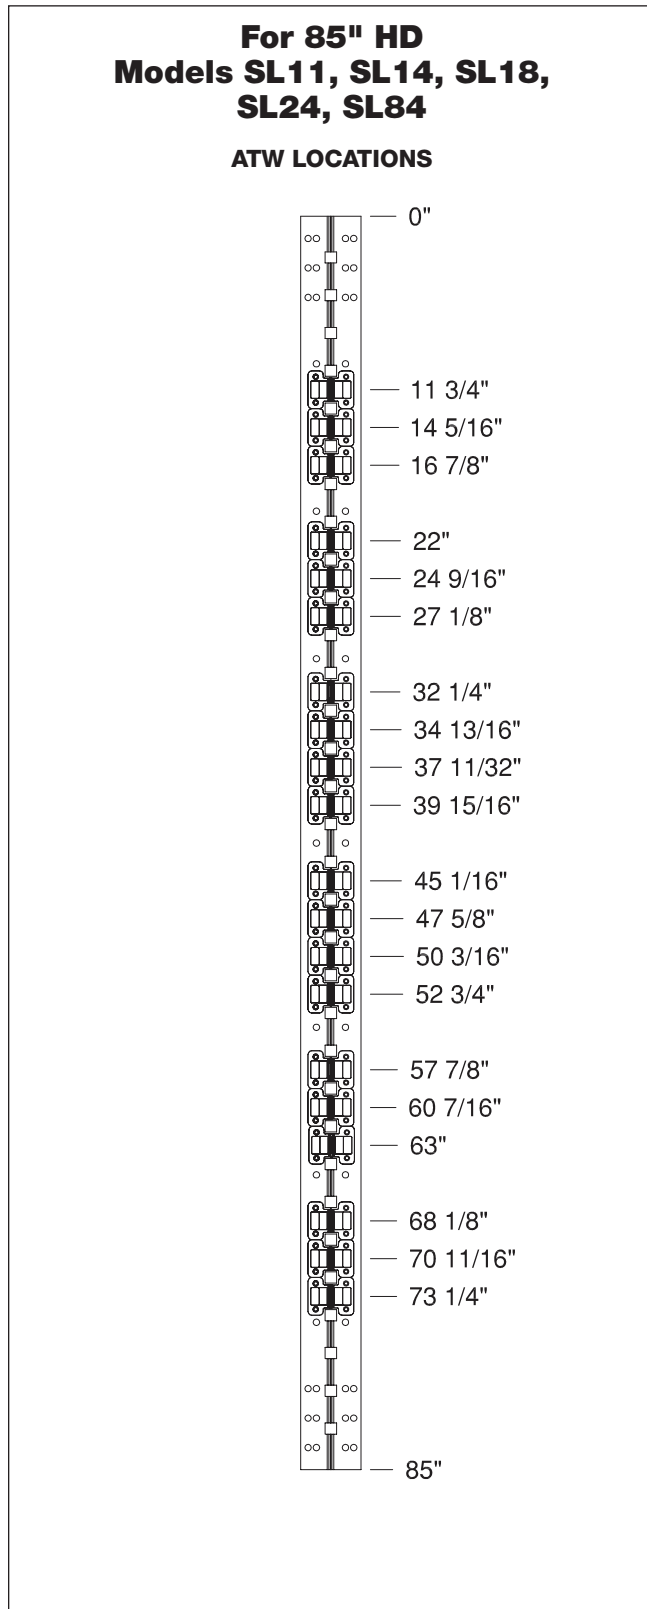

# Concealed Geared Hinges




- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.

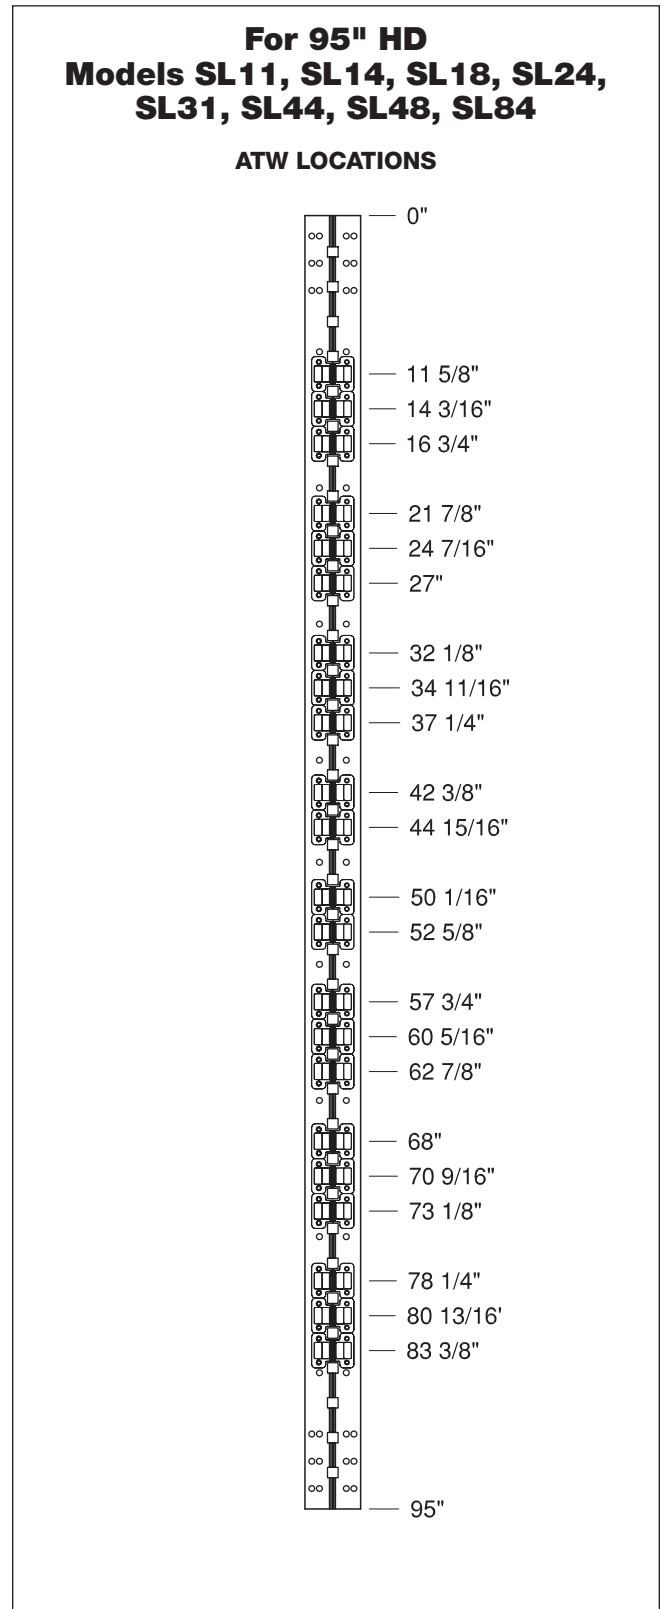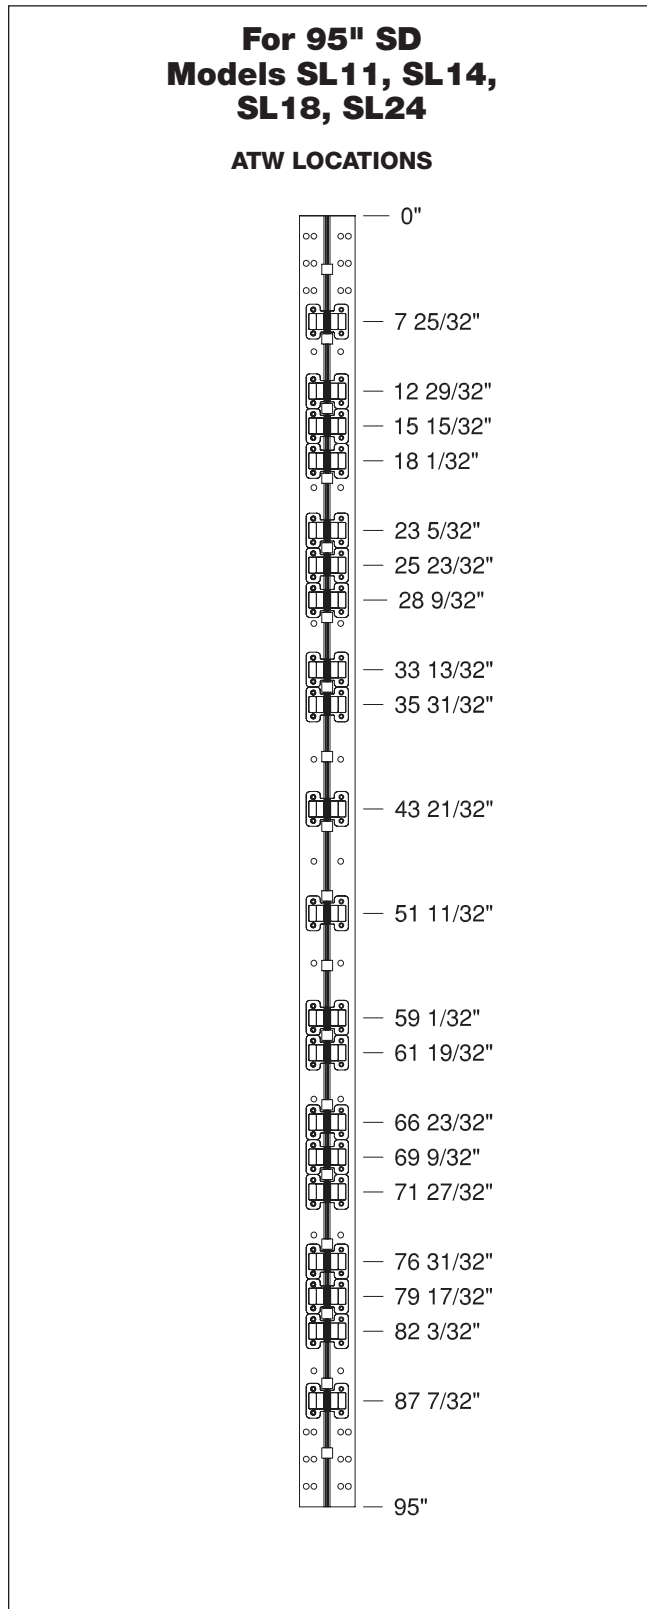

- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.


**For 95" LL**  
**Models SL11, SL14, SL18, SL24,**  
**SL26, SL27, SL84**

**ATW LOCATIONS**

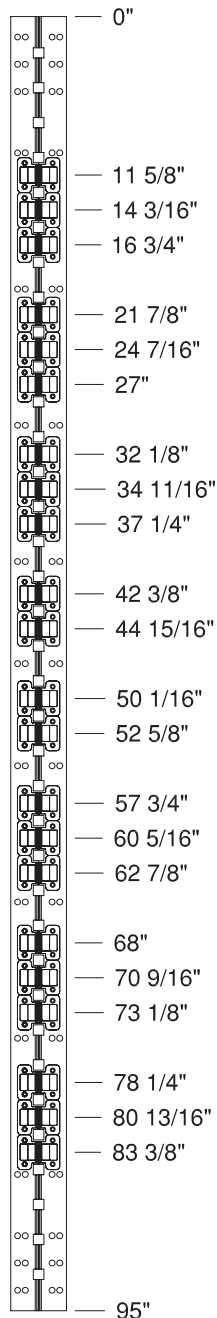

**For 120" HD**  
**Models SL11, SL14, SL18,**  
**SL24, SL84**

**ATW LOCATIONS**

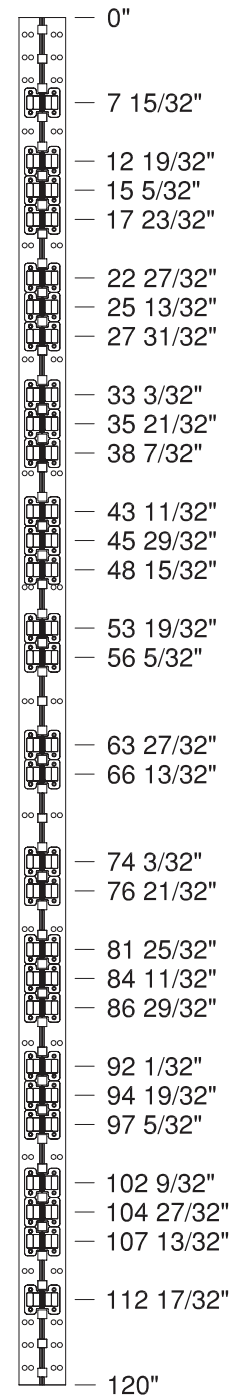

# Concealed Geared Hinges



- All dimensions are measured in inches from the top of the door to the centerline of the ATW panels.
- Choose location for ATW prep. ATW4 = 1 location; ATW8 = 1 location; ATW12 = 1 location.
- **NOTE:** For 90-degree openings, please specify at time of order for no upcharge.  
There will be an upcharge for 90-degree ATW cover plates when ordered separately and clear or bronze must be specified.

**For 120 LL  
Models SL11, SL14, SL18, SL24,  
SL26, SL27, SL84**

**ATW LOCATIONS**

