




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

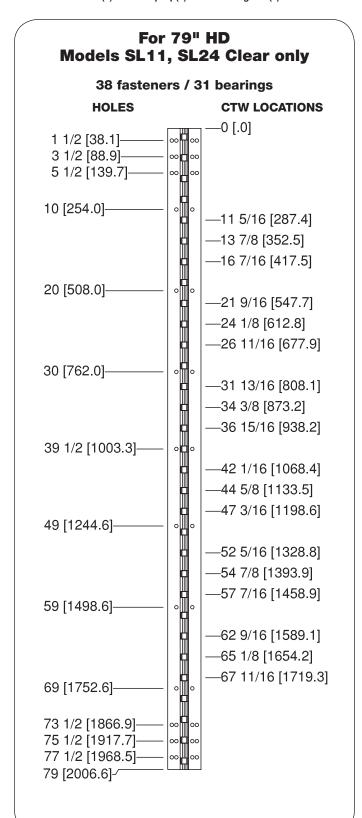


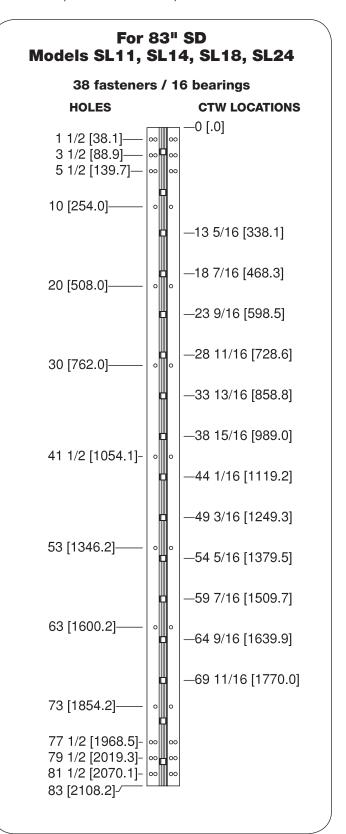




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

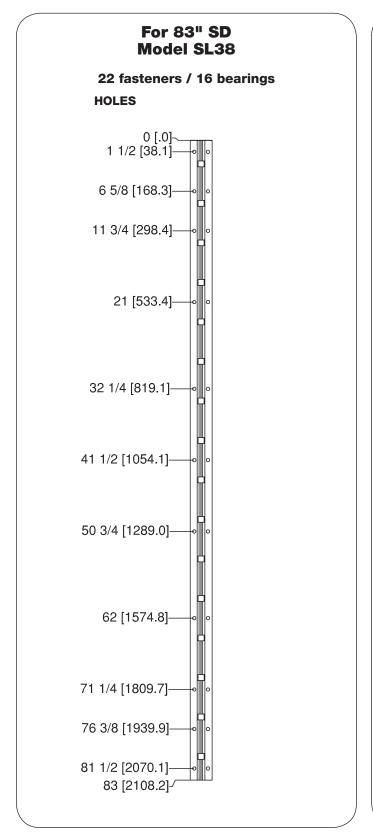


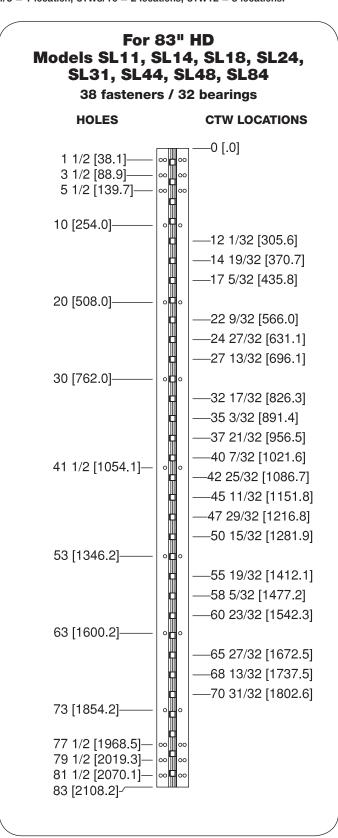




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

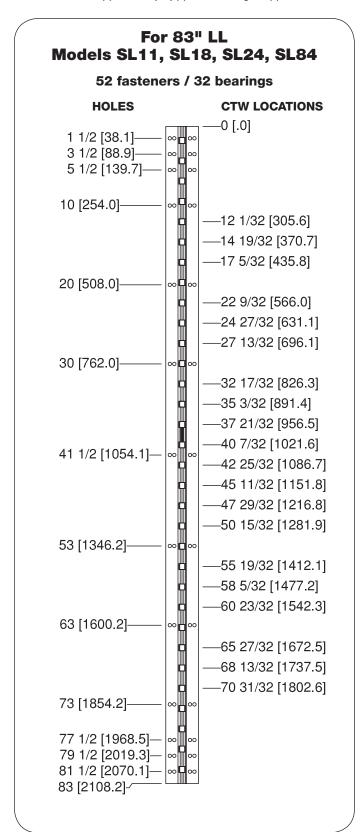


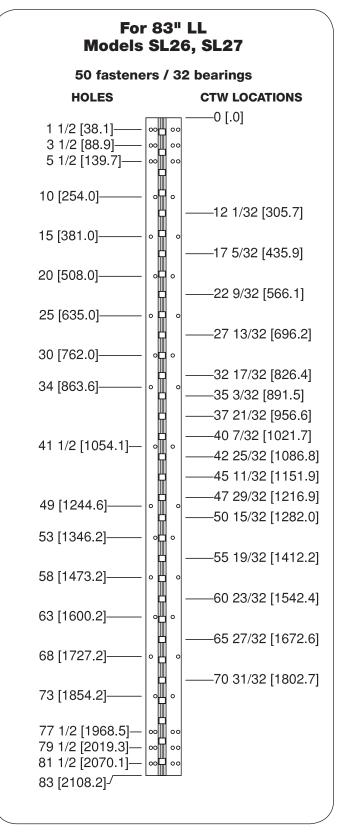




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

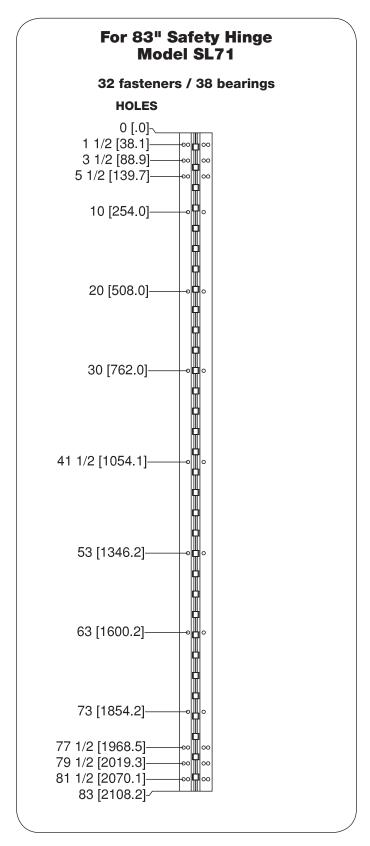


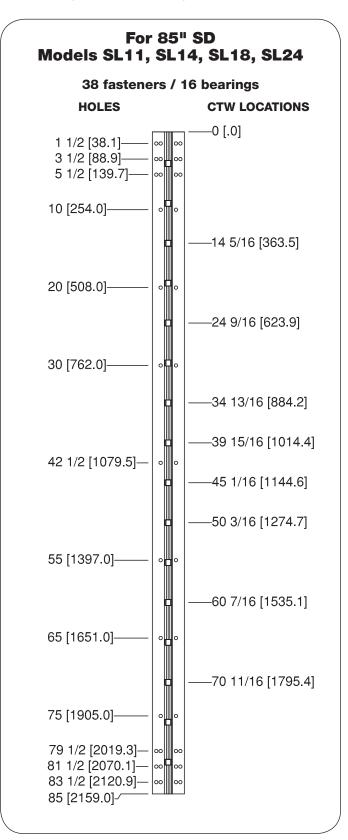



- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

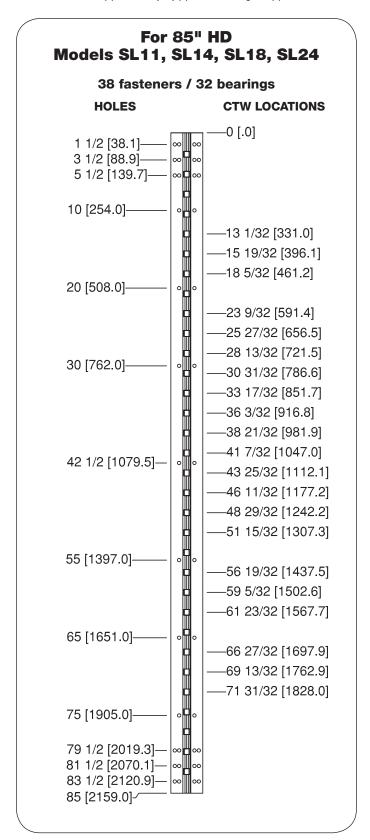


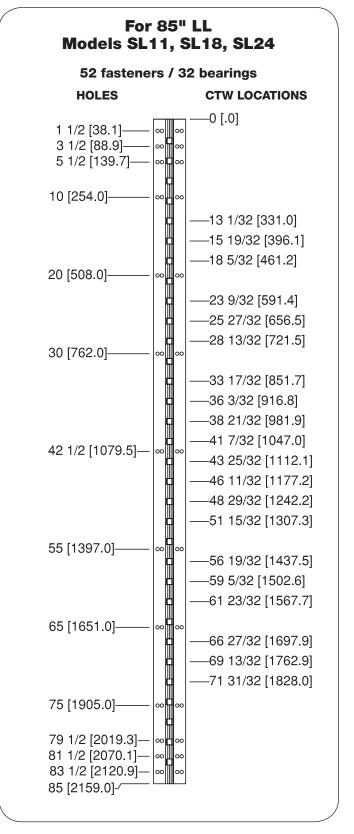




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


#### For 85" LL Models SL26, SL27 50 fasteners / 32 bearings **HOLES CTW LOCATIONS** [0.] 0-1 1/2 [38.1]-3 1/2 [88.9]-5 1/2 [139.7] 10 [254.0]--13 1/32 [331.1] 15 [381.0]--18 5/32 [461.3] 20 [508.0]--23 9/32 [591.5] 25 [635.0]--28 13/32 [721.6] 30 [762.0] -33 17/32 [851.8] 35 [889.0]--36 3/32 [916.9] -38 21/32 [982.0] -41 7/32 [1047.1] 42 1/2 [1079.5]--43 25/32 [1112.2] -46 11/32 [1177.3] -48 29/32 [1242.3] 50 [1270.0]--51 15/32 [1307.4] 55 [1397.0]--56 19/32 [1437.6] 60 [1524.0]-61 23/32 [1567.8] 65 [1651.0]-66 27/32 [1698.0] 70 [1778.0]--71 31/32 [1828.1] 75 [1905.0]-79 1/2 [2019.3]-81 1/2 [2070.1]-83 1/2 [2120.9] 85 [2159.0]

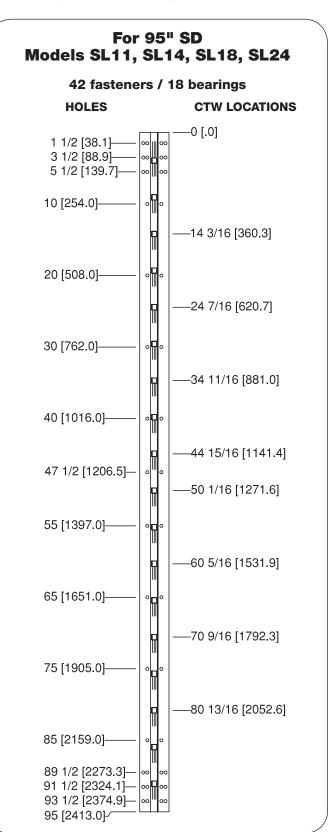




- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

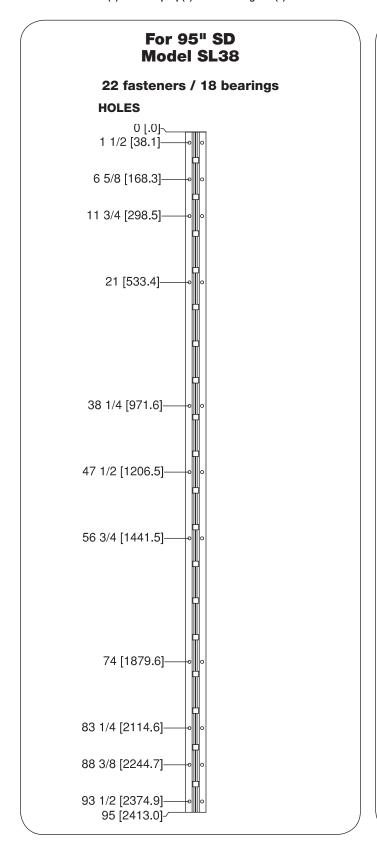


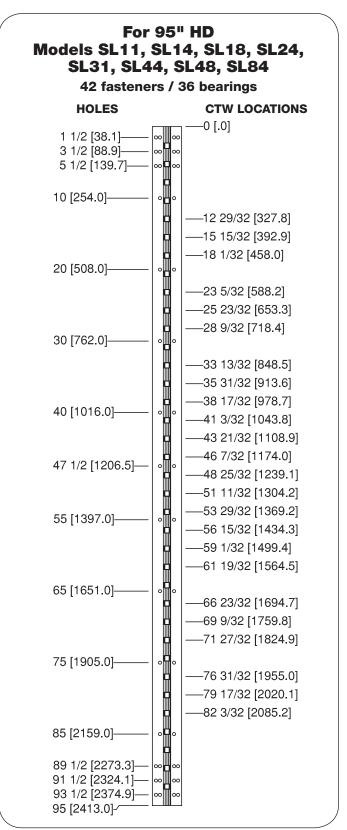



- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

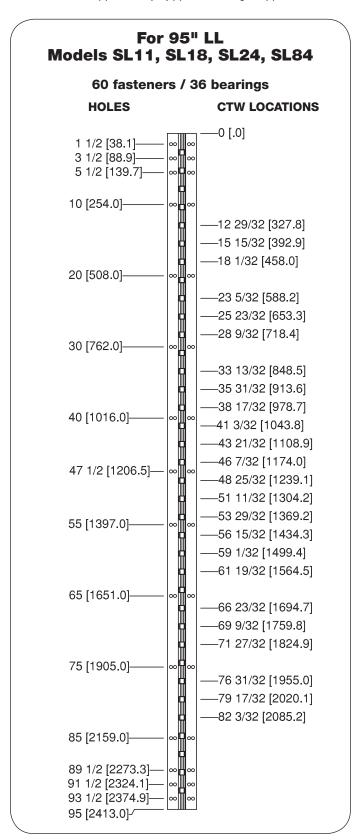


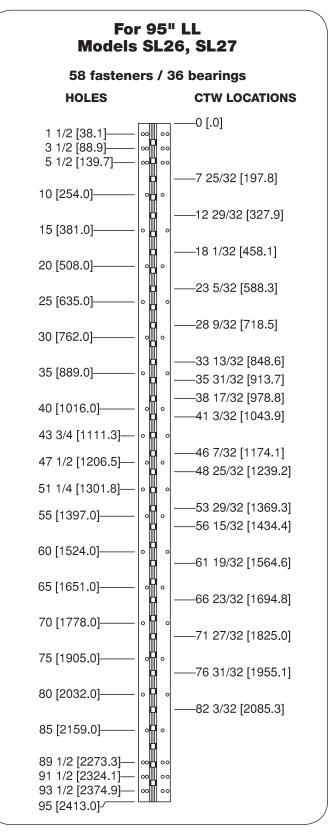



- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.


#### For 95" Safety Hinge **Model SL71** 36 fasteners / 40 bearings **HOLES** 0[.0]1 1/2 [38.1] 3 1/2 [88.9] 5 1/2 [139.7]-10 [254.0]-20 [508.0]-30 [762.0]-40 [1016.0]-47 1/2 [1206.5]-55 [1397.0]-65 [1651.0]-75 [1905.0]-85 [2159.0]-89 1/2 [2273.3]-91 1/2 [2324.1]-93 1/2 [2374.9] 95 [2413.0]-

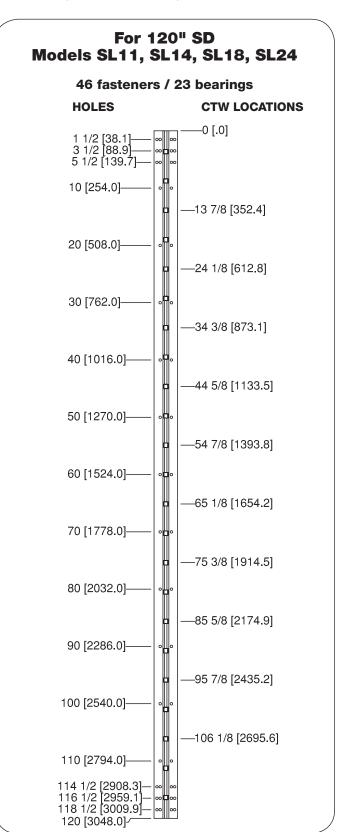



- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

#### For 120" HD Models SL11, SL14, SL18, SL24 46 fasteners / 47 bearings **HOLES CTW LOCATIONS** [0.] 0-1 1/2 [38.1]– 3 1/2 [88.9]– 5 1/2 [139.7] 10 [254.0]--11 5/16 [287.3] **—13** 7/8 [352.4] —16 7/16 [417.5] 20 [508.0]-**—21 9/16 [547.7]** -24 1/8 [612.8] -26 11/16 [677.9] 30 [762.0]--31 13/16 [808.0] -34 3/8 [873.1] -36 15/16 [938.2] 40 [1016.0]--42 1/16 [1068.4] -44 5/8 [1133.5] -47 3/16 [1198.6] 50 [1270.0]--52 5/16 [1328.7] -54 7/8 [1393.8] -57 7/16 [1458.9] 60 [1524.0]--62 9/16 [1589.1] -65 1/8 [1654.2] -67 11/16 [1719.3] 70 [1778.0]--72 13/16 [1849.4] **--75 3/8 [1914.5]** —77 15/16 [1979.6] 80 [2032.0] -83 1/16 [2109.8] -85 5/8 [2174.9] -88 3/16 [2240.0] 90 [2286.0] -93 5/16 [2370.1] **--95** 7/8 **[2435.2]** -98 7/16 [2500.3] 100 [2540.0]--103 9/16 [2630.5] -106 1/8 [2695.6] -108 11/16 [2760.7] 110 [2794.0]-114 1/2 [2908.3] 116 1/2 [2959.1] 118 1/2 [3009.9] 120 [3048.0]

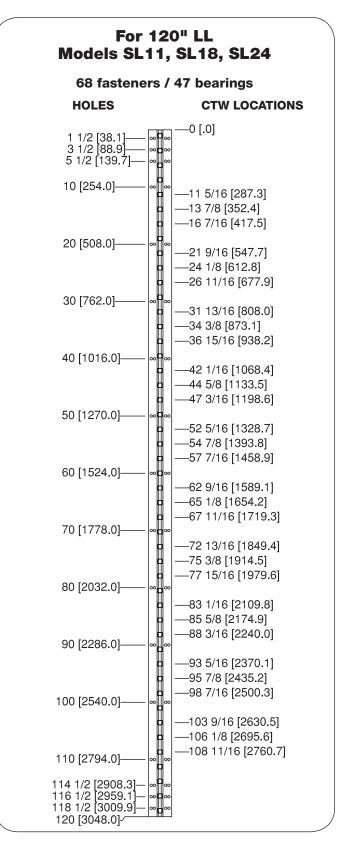



- All dimensions are measured in inches and [millimeters] from the top of the door to the centerline of the holes and bearings.
- Choose location(s) for CTW prep(s) from bearing slot(s) dimensioned. CTW4/5 = 1 location; CTW8/10 = 2 locations; CTW12 = 3 locations.

