



## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701  
For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440  
Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*

# ALARM LOCK Tech Support

## TECH TIP



**Date:** Thursday, July 10, 2014

**Subject:** What's in the Box, General Dimensions, Basic Operation.

**Models:** Model 11A



### Main Lock Assembly

The main lock assembly is configured to be installed on a *right hand reverse* door (RHR). *Left hand reverse* (LHR) is shown on page 5. **NOTE:** The RIM cylinder shown is **not** included with the model 11A, but any standard RIM cylinder can be installed.



**ALARM LOCK**

345 Bayview Avenue, Amityville, New York, U.S.A. 11701  
 For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440  
 Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*



- A:** Alarm & Battery Box Keys
- B:** Alarm & Battery Box Cover Plate
- C:** "BP-6" Battery Pack
- D:** Alarm & Battery Box Assembly
- E:** Alarm Lock RIM Cylinder
- F:** Clapper Plate





## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*



**Bottom View**



**Side View (Deadbolt / Door Edge Side)**



### **Rim Cylinder (Sold Separately) Alarm Lock Part Number CER-KD**

One Rim Cylinder is required for the 11A sliding lock assembly; a second RIM Cylinder can be installed into the door to provide control of the deadbolt from the outside of the door.




## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*

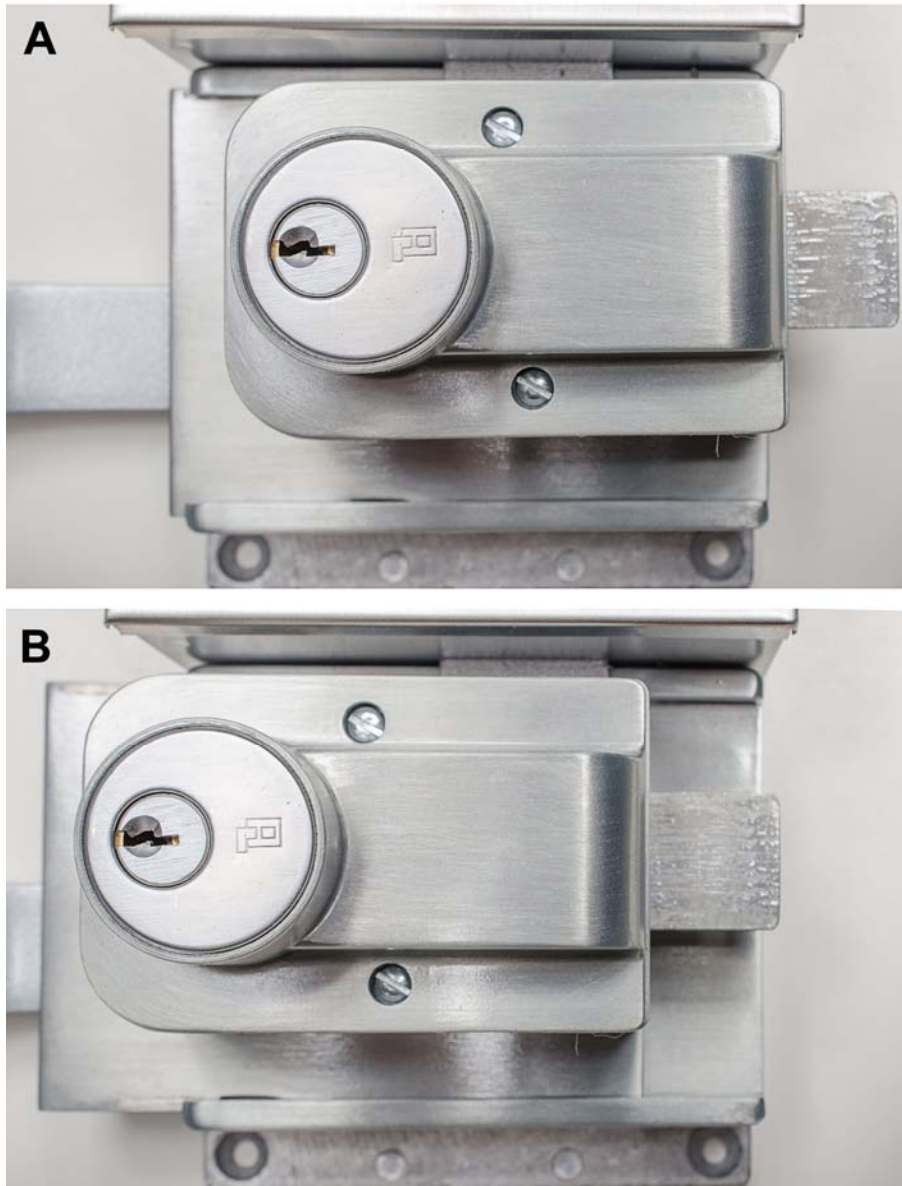

### **Sliding Lock Assembly Operation:**

**A=** When the deadbolt is extended, the device is locked and armed.

**B=** Pressing the clapper plate causes the deadbolt assembly to slide away from the keeper, releasing the door and triggering the integral alarm.





## ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • info@alarmlock.com

*Note: Technical Service is for security professionals only*



**For Left Hand Reverse (LHR) doors:** Simply remove the two screws on the clapper plate and reinstall as shown above.

**TO RESET - UNLOCK WITH KEY.  
PUSH LOCK TO EDGE OF DOOR.  
RELOCK AND REMOVE KEY.**

**TO RESET - UNLOCK WITH KEY.  
PUSH LOCK TO EDGE OF DOOR.  
RELOCK AND REMOVE KEY.**

**Two small self-sticking instruction labels are included.**

### Paperwork:

Instructions for assembling the standard rim cylinder lock cover: Part "P3193"

Installation template: Part "P5027A"

### Mounting Hardware:

Six (6) screws used to mount the main lock assembly to the door.

Three (3) screws used to mount the Keeper to the door jamb.

Two (2) machine screws to be installed on the edge of the sliding lock assembly.