



ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701

For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440

Fax: 631-789-3383 • info@alarmlock.com

Note: Technical Service is for security professionals only

ALARM LOCK Tech Support

TECH TIP



Date: Tuesday, November 04, 2014
Subject: **NETWORXPANEL:** What's in the Box?
Models: **NETDKPAK/26D, NETPDKPAK/26D, NETHIDNSPAK**

All **NETWORXPANEL** shipping boxes contain the following hardware:

- Metal enclosure with the **NETWORXPANEL** circuit board (Dimensions: 8³/₈"W x 10³/₈"H x 3"D). Supplied with a lock cylinder and two keys (key number N277)
- Sealed Lead Acid Battery: 12 Volt, 4 Amp-Hour (PS4-12)
- Plug-in Transformer: 16.5 Volt AC, 50VA (TRF14 / T125)
- Two (2) Transient Protection Devices (36 Volt MOV) (part number 9DKNMOV BAG)
- Documentation:
 - **NETWORXPANEL** Installation Instructions (WI1856)
 - **NETWORXPANEL** Programming Instructions (WI1855)
 - **NETWORXPANEL** Wiring Diagram (LA2992, shown below)
 - Lock ID Card (OI353)
 - Firmware Update Note (WI2006)

Model NETHIDNSPAK:

- Add 1 HID Prox Point Plus Mini Mullion Reader (part number HID1326; Dimensions: 1⁵/₈"W x 3¹/₈"H x ⁵/₈"D).

Model NETPDKPAK/26D:

- Add 1 NETPDK Keypad
- Add 1 NETPDK Keypad Mounting Plate (Dimensions: 3¹/₂"W x 4⁷/₈"H)
- Add Installation Screws, Anchors and Wire Nuts
- Add 1 NETDK & NETPDK Installation Instructions / Wiring Diagram (WI1881)



ALARM LOCK

345 Bayview Avenue, Amityville, New York, U.S.A. 11701
 For Sales and Repairs 1-800-ALA-LOCK • For Technical Service 1-800-645-9440
 Fax: 631-789-3383 • info@alarmlock.com

Note: Technical Service is for security professionals only

Model NETDKPAK/26D:

- Add 1 NETDK Keypad
- Add 1 NETDK Keypad Mounting Plate (Dimensions: 3½"W x 4⅞"H)
- Add Installation Screws, Anchors and Wire Nuts
- Add 1 NETDK & NETPDK Installation Instructions / Wiring Diagram (WI1881)

