CORRECT WAY TO REMOVE INSIDE HOUSING FROM SPINDLE

© ALARM LOCK 2010

WI1871 5/10
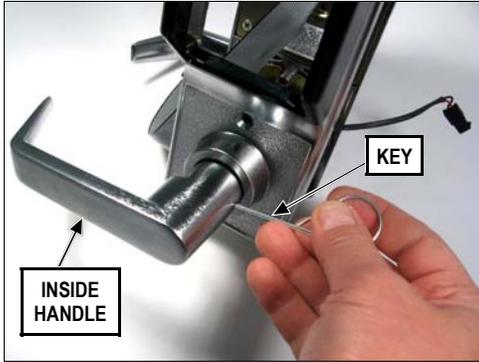
Use key to depress the lever catch pin, then remove the inside handle.

Do NOT insert a screwdriver or other tool into the spindle to release the catch pin, as the catch spring is easily damaged.
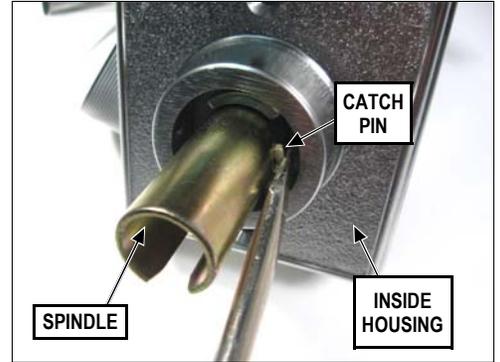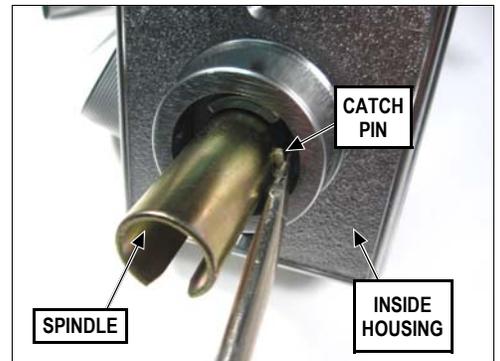
Press the catch pin as shown, then pull the inside housing off spindle.