


SARGENT Installation Instruction for the 12-HD980 Mullion Stabilizer

FOR ASSISTANCE CONTACT SARGENT AT 800-827-5477 OR www.sargentlock.com

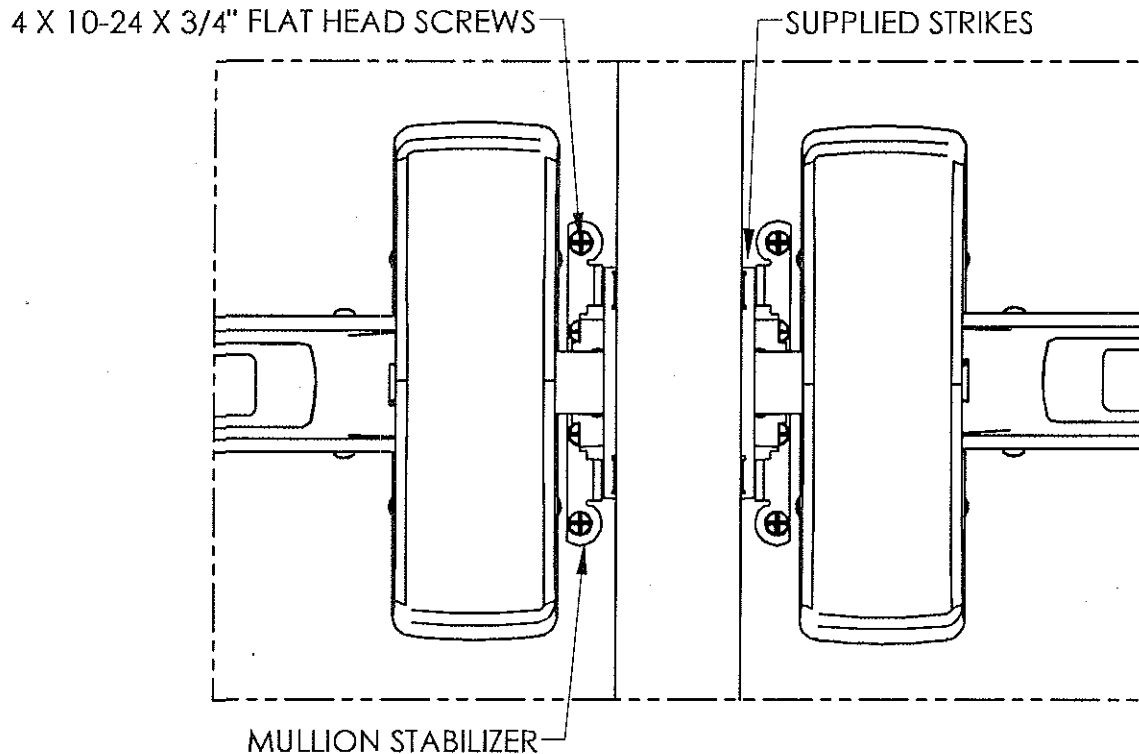

ATTENTION:

Before starting the mullion stabilizer installation, make sure that:

- You have all components required;
- Doors are properly installed, and hinge screws are tight;
- The Exit device is properly installed
- Strikes supplied with the MULLION are installed using (4) supplied screws.

To install the Mullion Stabilizer:

1. With the door opened, insert the middle "tooth" of the stabilizer into the strike opening positioned as shown;
2. Holding the stabilizer in place close and latch the door;
3. Locate the stabilizer on the door and mark the hole locations;
4. Open the door. Drill (Use #25 drill bit), and tap (4) #10-24 holes;
5. Install the stabilizer in place as shown;
6. Close the door and check the installation;
7. Repeat for other door.