

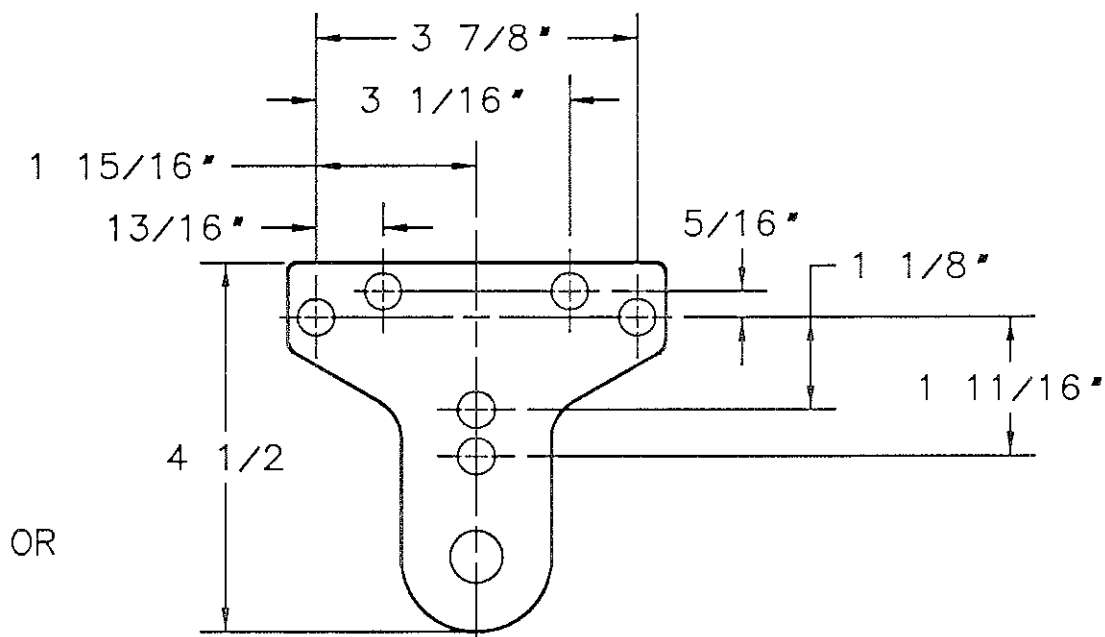


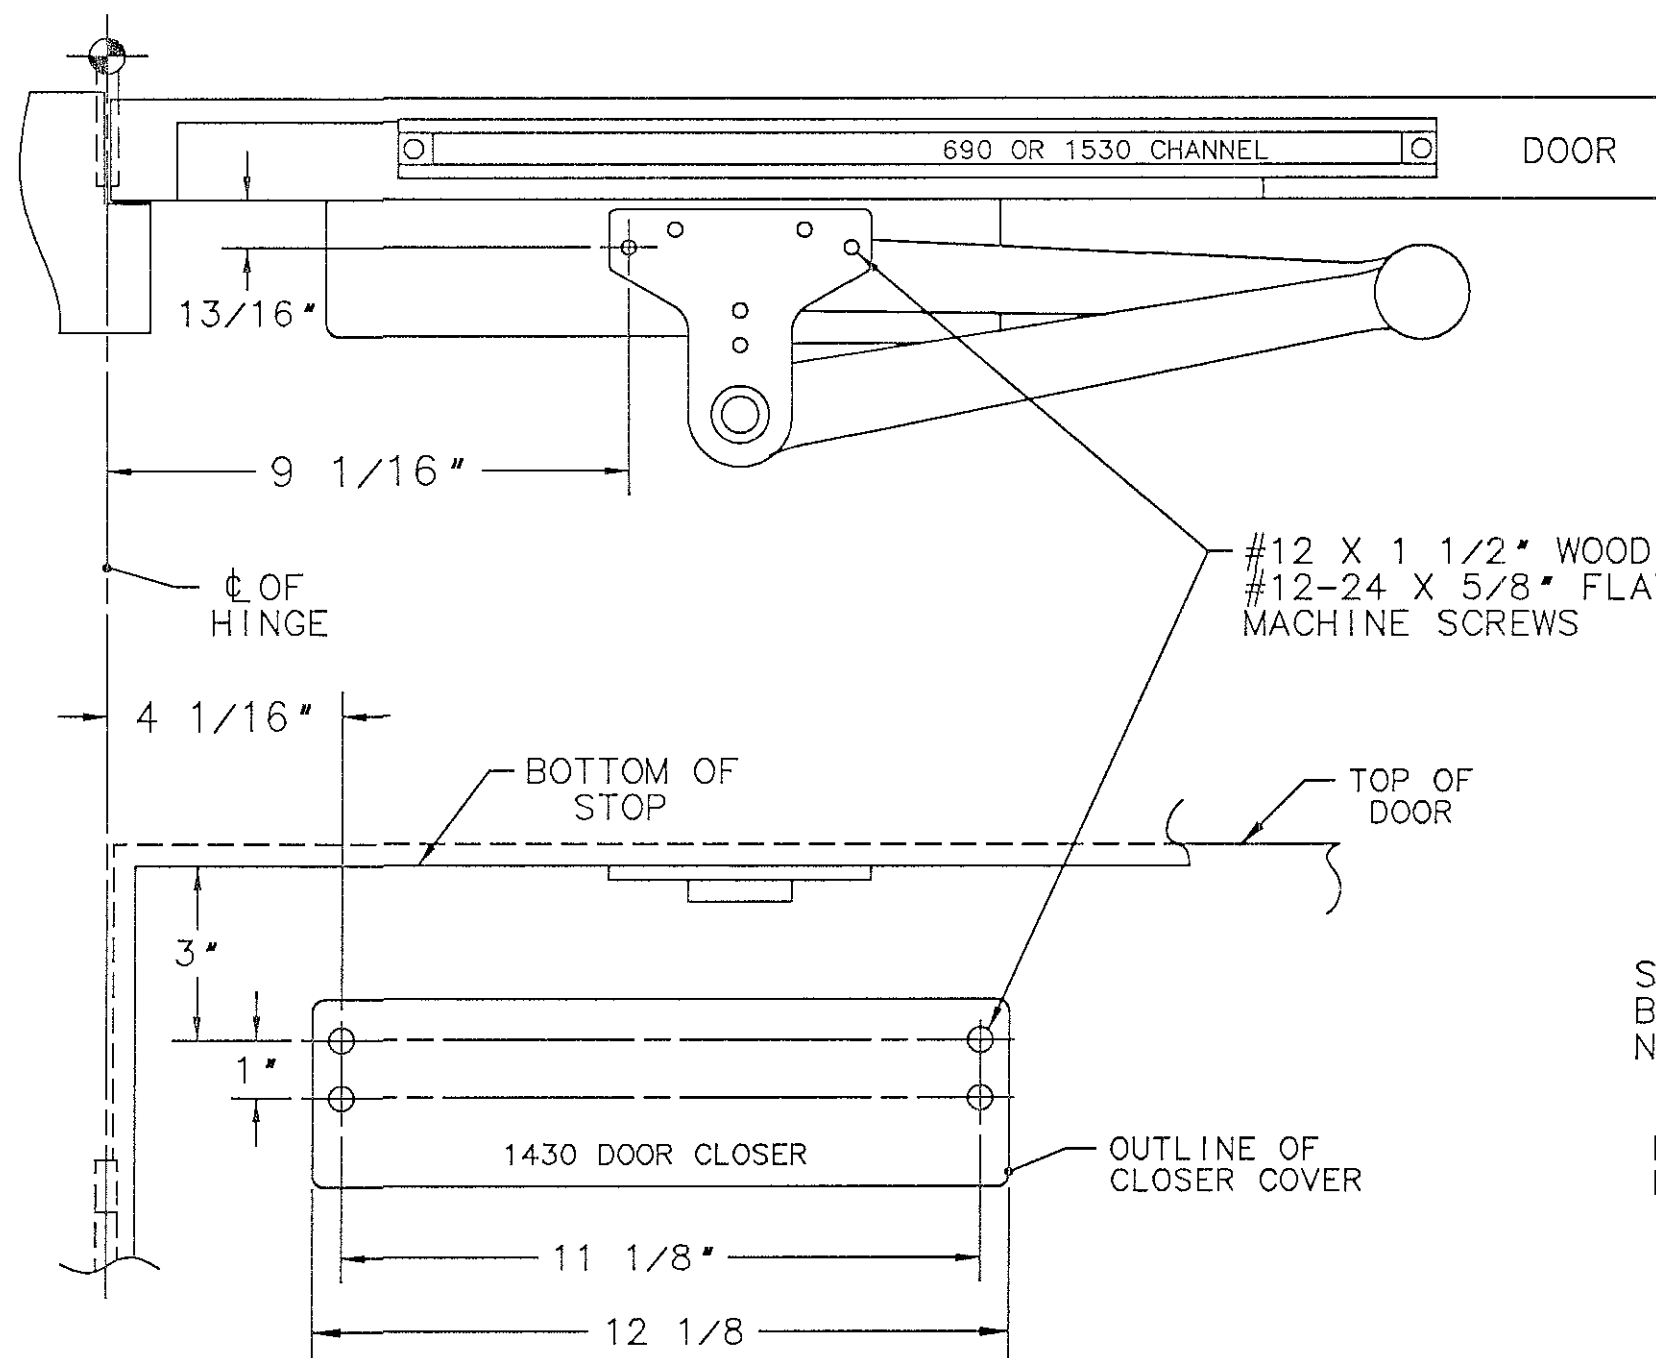

P10 FOOT BRACKET DETAIL

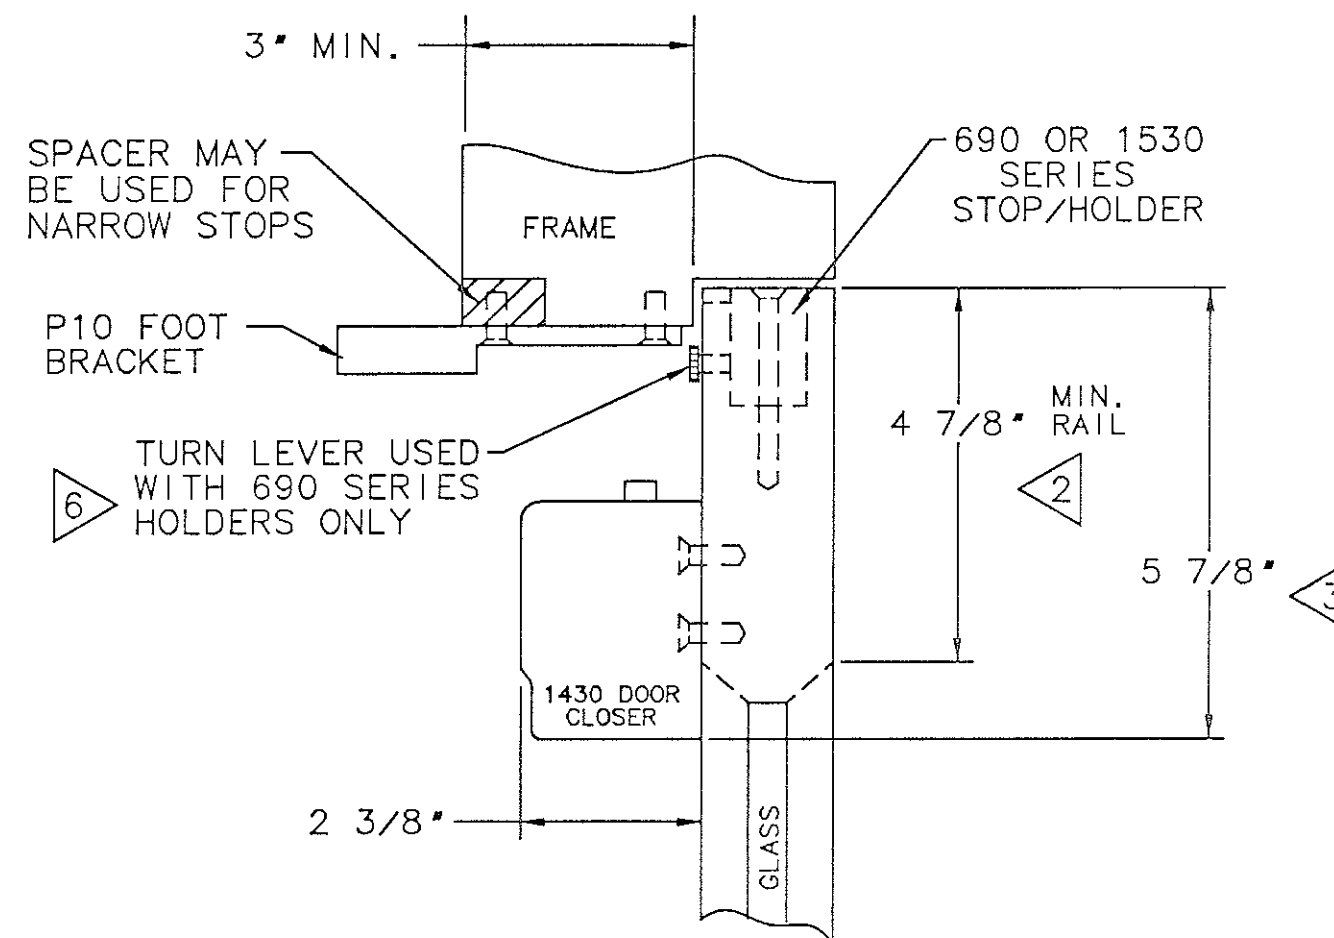

NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 AND SDI-100 STANDARDS, 12 GAUGE RECOMMENDED.

2. FOR THIN RAIL DOORS, USE 1430-D DROP PLATE, SEE TEMPLATE A7168

3. 1430-J COVER PLATE MAY BE USED WHEN CLOSER IS VISIBLE THROUGH GLASS.

4. FOR 1536-1539 INSTALLATION, SEE TEMPLATES A7485 - A7487

5. FOR 697-699 INSTALLATION, SEE TEMPLATES A7482 - A7484

6. THE 690 TURN LEVER MAY BE INSTALLED ON EITHER SIDE OF DOOR.

7. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 1430 SERIES CLOSER
WITH A P10 PARALLEL ARM &
697-699 OR 1536-1539 SERIES
HOLDER/STOP

RELEASE DATE
APRIL 02
TEMPLATE NO.
A7555 C