



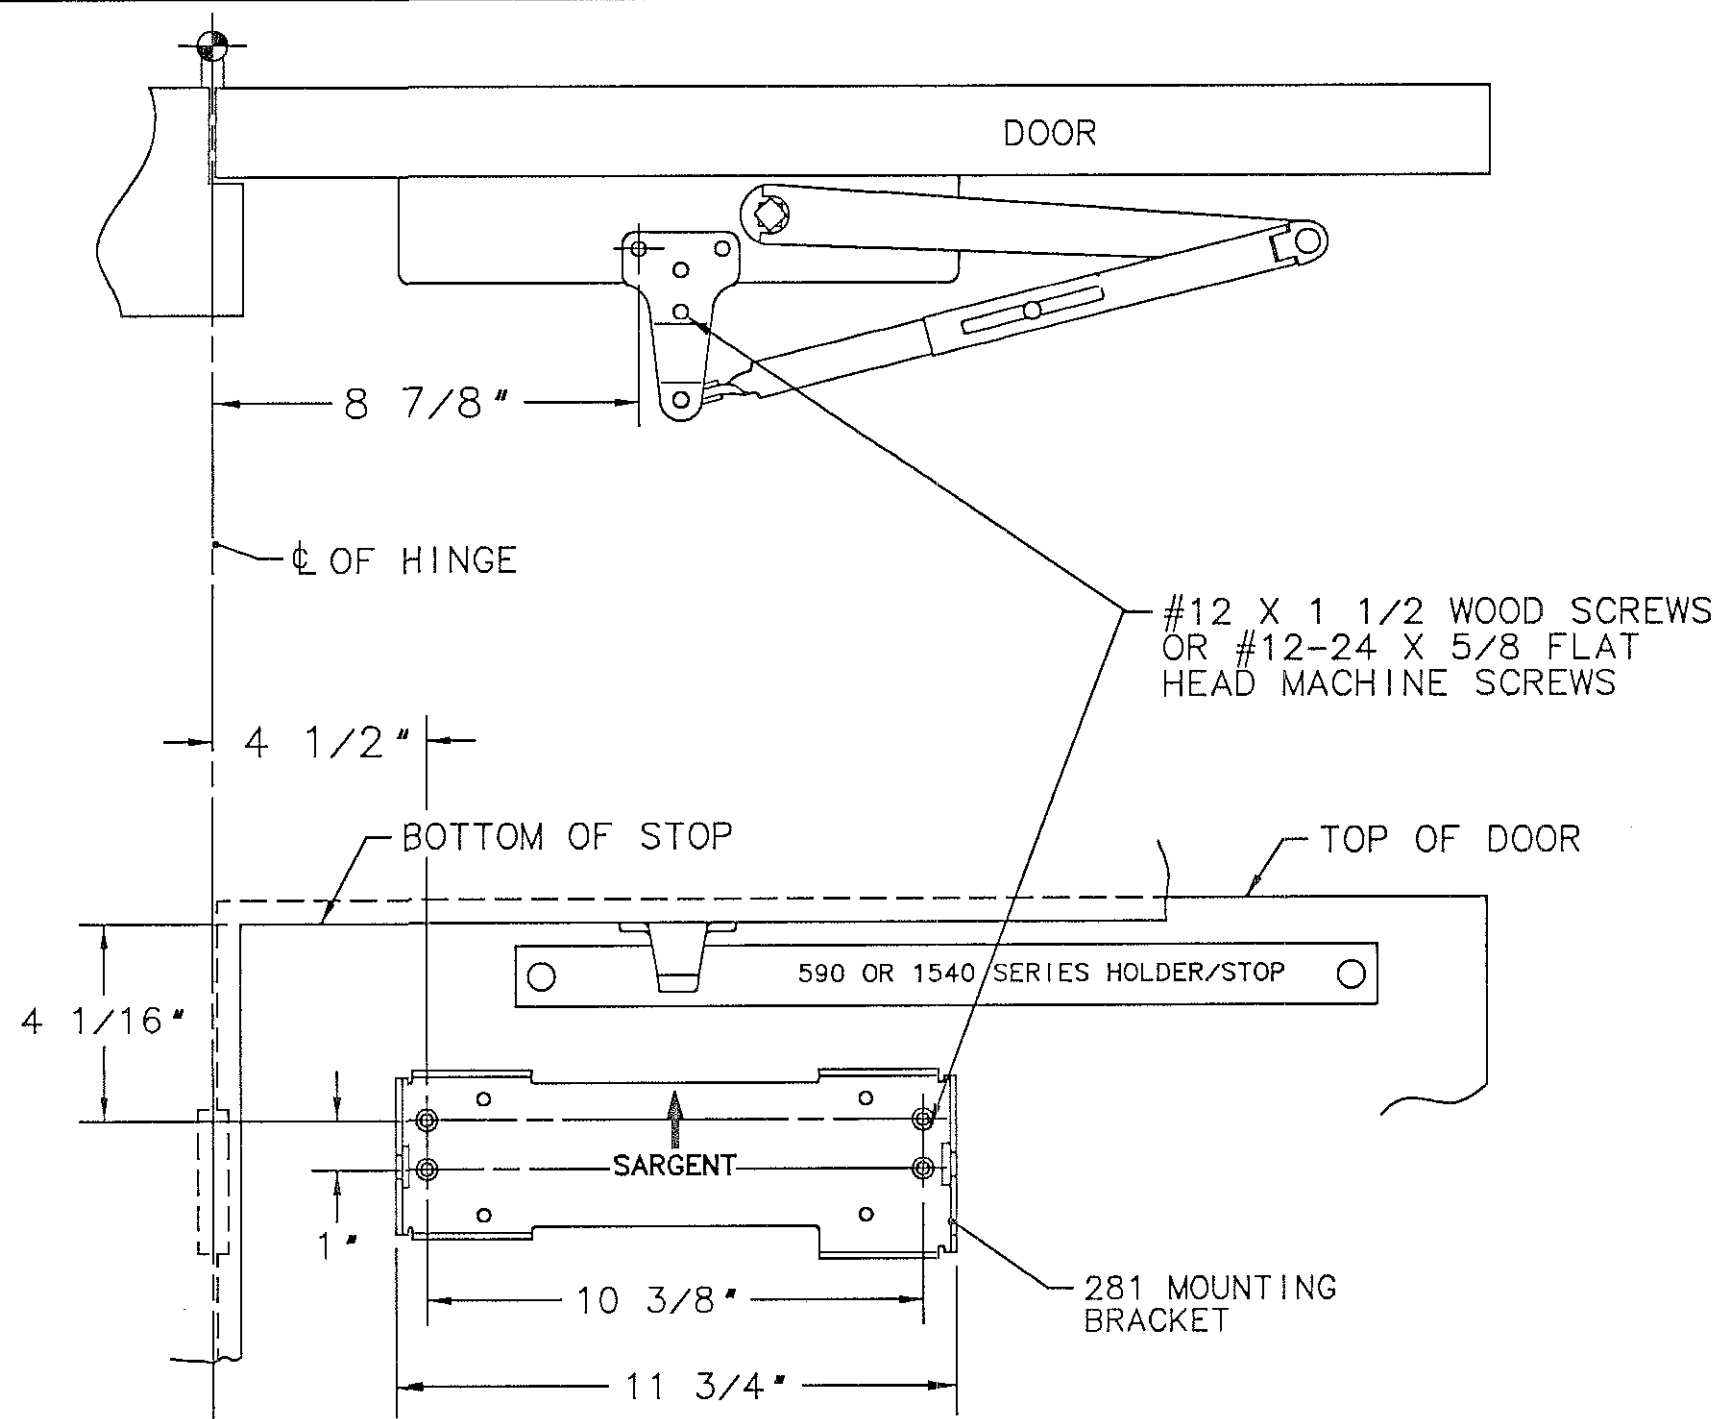


NOTES

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. FOR 597-599 INSTALLATION, SEE TEMPLATES A7479 - A7481
3. FOR 1546-1549 INSTALLATION, SEE TEMPLATES A7488 - A7490
4. FOR THIN RAIL DOORS, USE 281-D DROP PLATE, SEE TEMPLATE A7244
5. 281-J COVER PLATE MAY BE USED WHEN CLOSER IS VISIBLE THROUGH GLASS PANELS.
6. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.

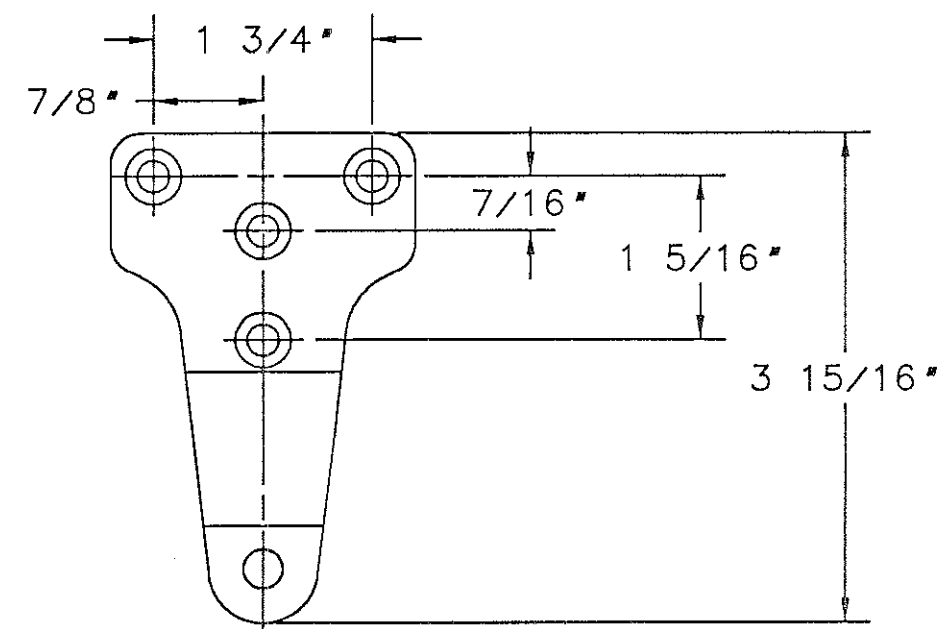

P3 BRACKET DETAIL

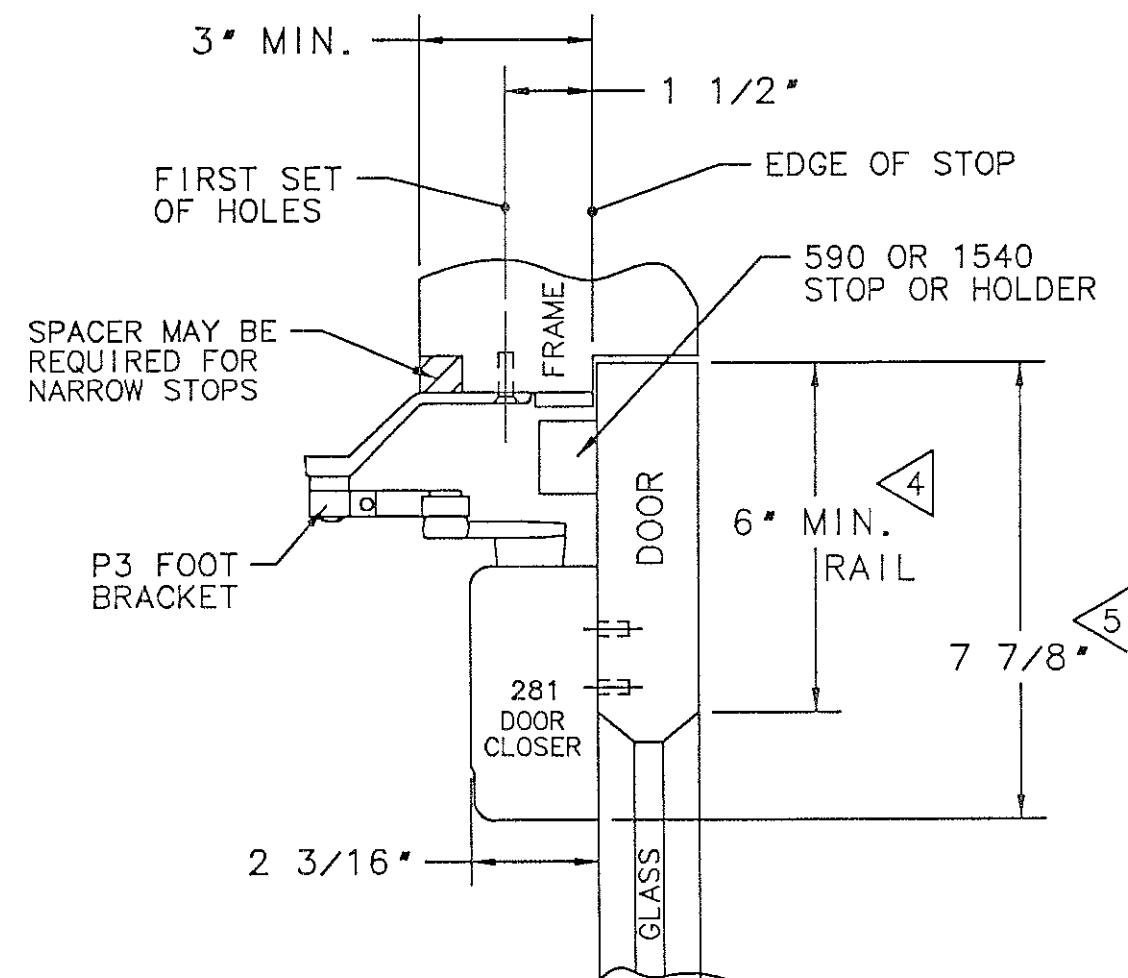

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET: 281 SERIES CLOSER WITH
A P3 PARALLEL ARM & 1546-1549 OR
597-599 SERIES HOLDER/STOP

RELEASE DATE
APRIL 02
TEMPLATE NO.
A7516 B