
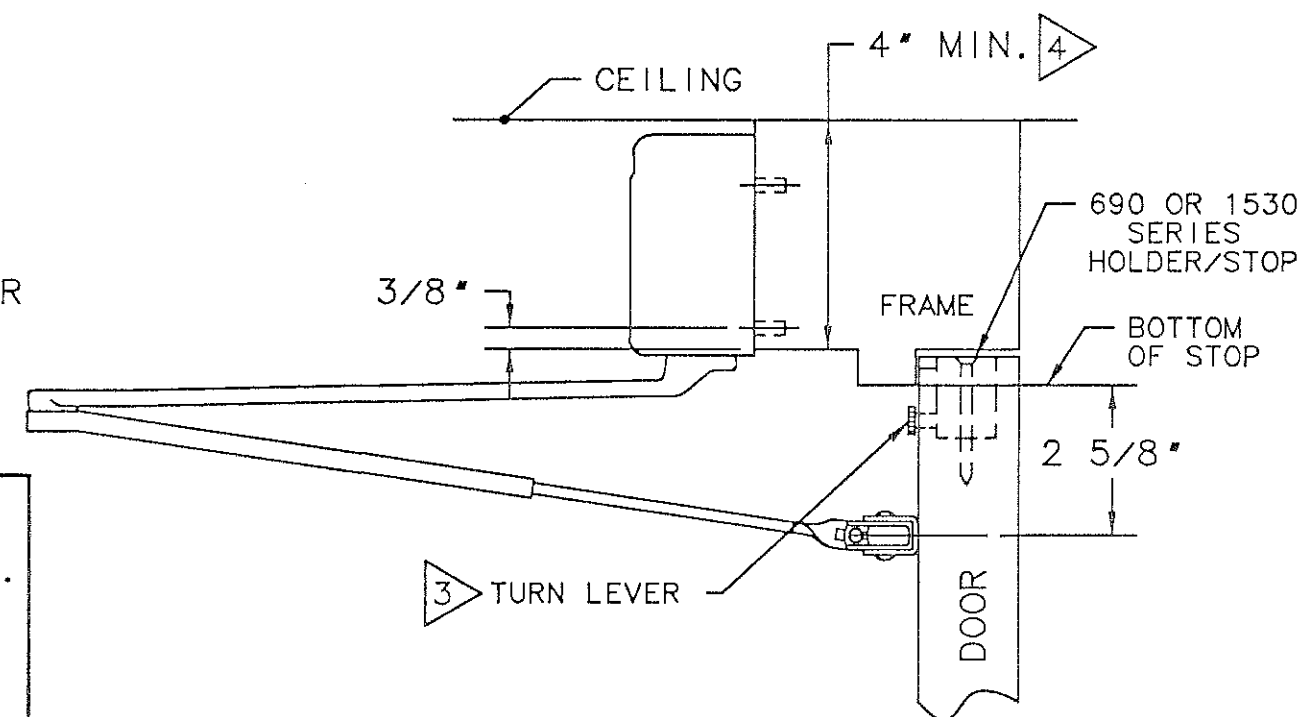
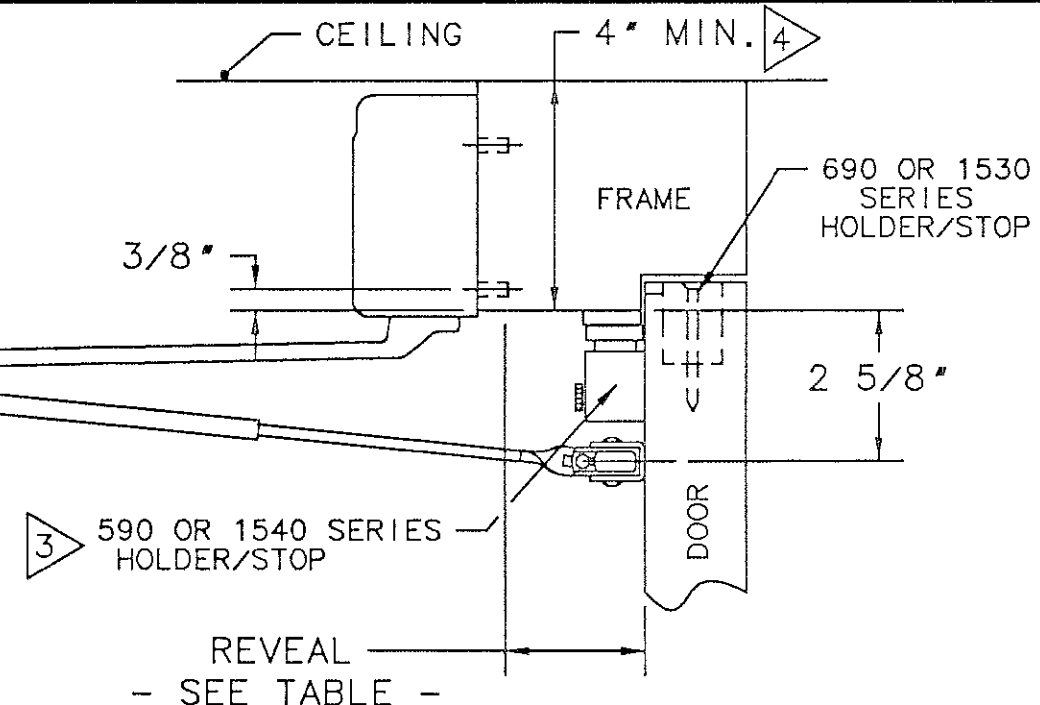


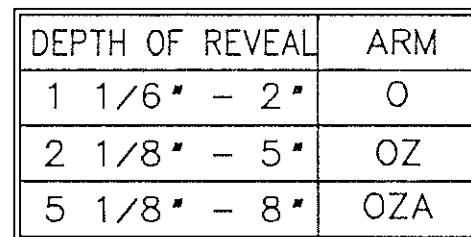

1. REINFORCE METAL DOORS AND FRAMES PER ANSI A250.8 & SDI-100, 12 GAUGE RECOMMENDED.
2. LEFT HAND DOOR SHOWN, RIGHT HAND OPPOSITE.
3. TURN LEVER USED ON 590 AND 690 HOLDERS ONLY. THE 690 TURN LEVER MAY BE INSTALLED ON EITHER SIDE OF DOOR.
4. FOR LOW CEILING APPLICATIONS AND OR 2" FRAME USE A 351-B MOUNTING PLATE, SEE TEMPLATE A7539.
5. FOR 1536 - 1539 INSTALLATION, SEE TEMPLATES A7485 - A7487.
6. FOR 1546 - 1549 INSTALLATION, SEE TEMPLATES A7488 - A7490.
7. FOR 697 - 699 INSTALLATION, SEE TEMPLATES A7482 - A7484.
8. FOR 597 - 599 INSTALLATION, SEE TEMPLATES A7479 - A7481.

DOUBLE RABBETED FRAME
(690 SHOWN)

SARGENT® Manufacturing Company
100 Sargent Drive New Haven, CT 06511

DATA SHEET:351 SERIES CLOSER (TOP JAMB APPLICATION) WITH O,OZ & OZA ARM AND A 1536-1539,1546-1549 OR 597-599,697-699 HOLDER OR STOP

RELEASE DATE	12 JULY 02
TEMPLATE NO.	A7538 A