


# Installation Instructions for the 541 Exit Device Security Shim Kit

FOR INSTALLATION ASSISTANCE,  
CALL SARGENT AT 1-800-810-WIRE (9473) • [www.sargentlock.com](http://www.sargentlock.com)

**SARGENT®**


**ASSA ABLOY**

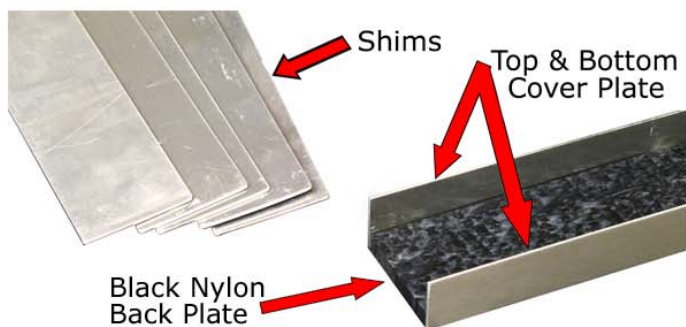

SARGENT 541 Security Shim Kit includes:  
Shims; Top & Bottom Cover Plates; Black Nylon Back Plate and Spanner Head Screws.



- 1) Measure door's recessed area. Cut Top & Bottom Covers to match/accommodate the contour of the recessed area or the shape of the window frame

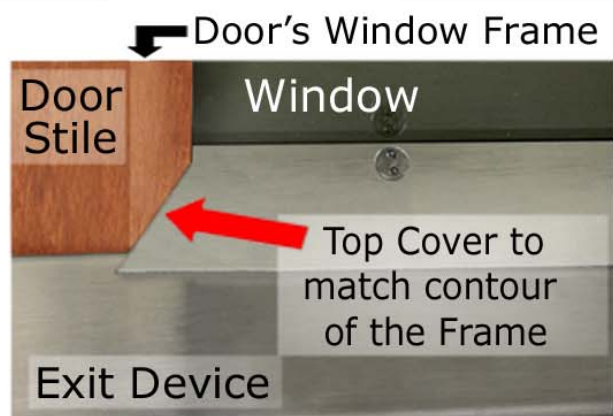

- 2) Cut the Black Nylon Back Plate and Shims to fit under the rail assembly; Match the contoured ends to the recessed area or the window frame. Remove all burrs



- 3) Attach finished Bottom Cover to Black Nylon Back Plate with supplied screws



- 4) Slide the assembled kit into position from the underside of the rail



- 5) Insert supplied shims to fill the gap between the backside of the rail and the Black Nylon Back Plate  
Note: Do not force fit shims



- 6) Attach the Top Cover with supplied screws to capture the shims and secure the Shim Kit Assembly