


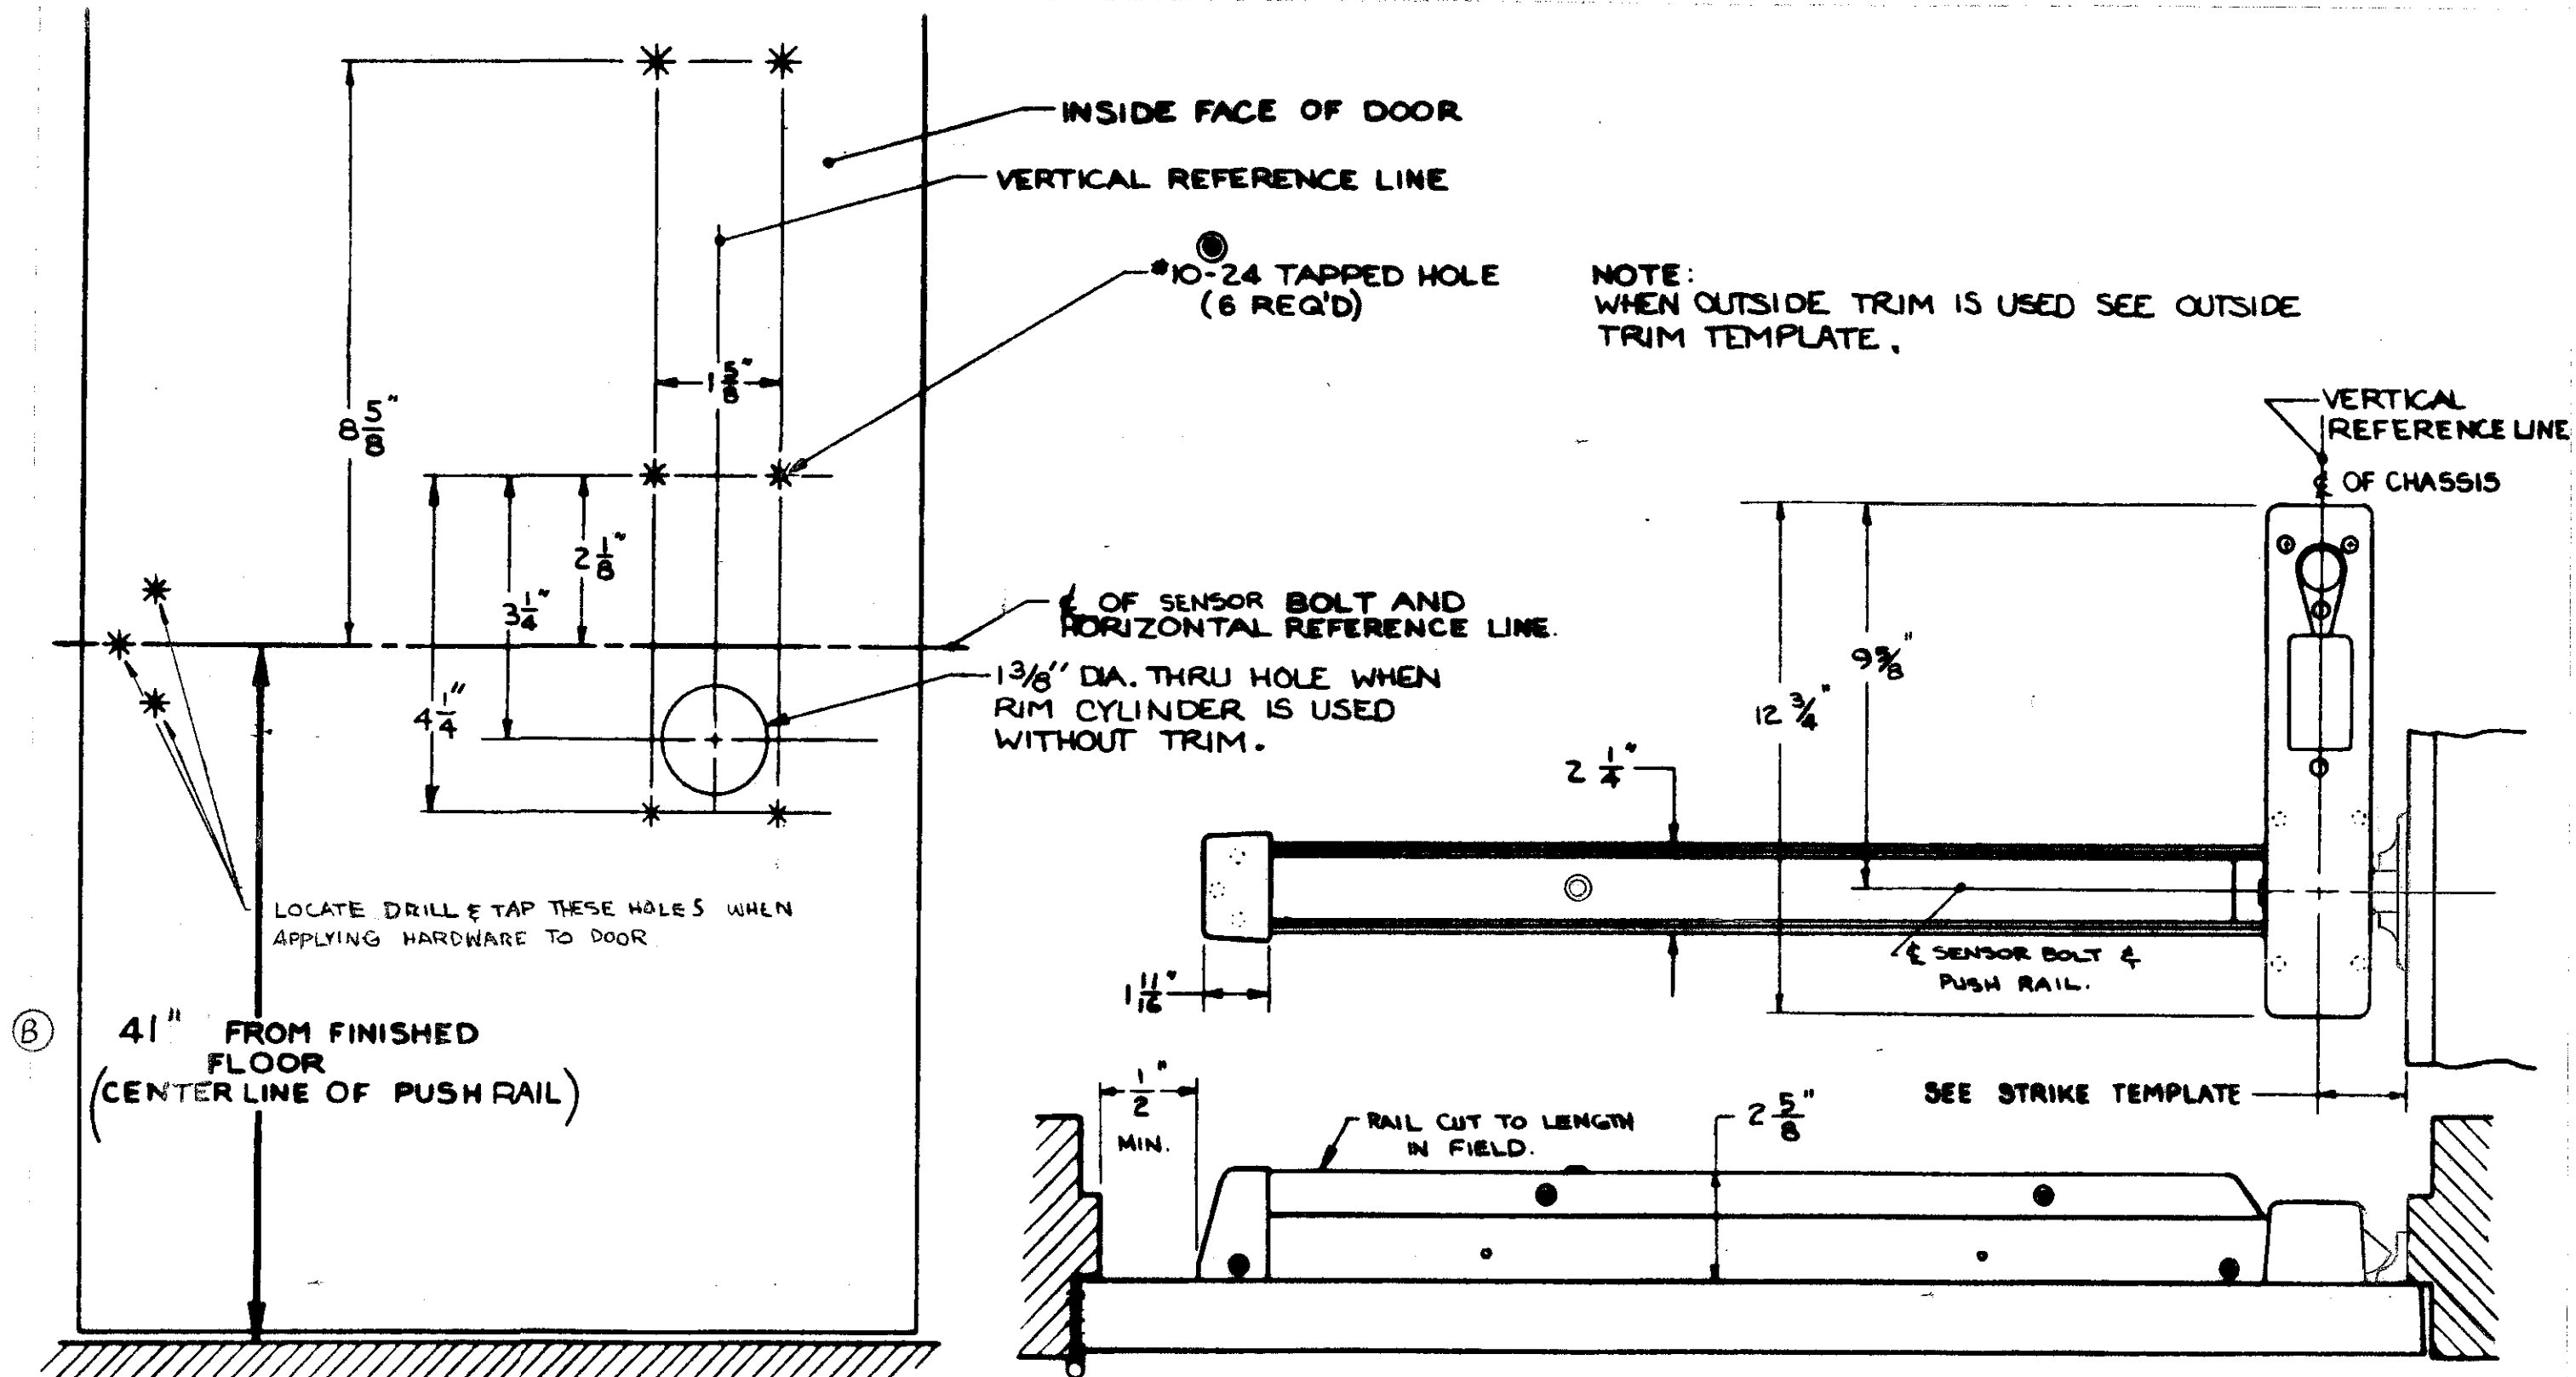

- ⑤—SURFACE OF DOOR WHERE EXIT DEVICE IS TO BE APPLIED, MUST BE FLUSH.
- ④—SEE TEMPLATE SHEET 4382 FOR AREAS REQUIRING REINFORCEMENTS.
- ③—SEE STRIKE TEMPLATE FOR MOUNTING LOCATION OF STRIKE.
- ②—●WE RECOMMEND THAT ALL HOLES BE DRILLED & TAPPED IN FIELD.
- ①—TOLERANCE ON ALL FRACTIONAL DIMENSIONS $\pm 1/64$ ".

SARGENT & COMPANY

NEW HAVEN, CONN. 06509

TEMPLATE:
5800 SERIES
ALARMED EXIT DEVICE

RELEASE DATE

16 JUNE 98

TEMPLATE NO.

4380 B