

6200R & 6200V RIM & SVR DEVICE MODELS ON DOUBLE DOORS (PAIRS)

FOR 6200 SERIES EXIT DEVICES WITH OPTIONAL 629019 DOUBLE DOOR STRIKE

TEMPLATE: 62930

REV. 2 2-7-'

MACHINE SCREWS:
USE #7 OR 13/64" [5.1] DRILL AND 1/4-20 TAP

WOOD DOOR/FRAME SCREWS:
USE 5/32" [4.0] DRILL

SEX NUTS:
USE 3/8" [9.5] DRILL


DRILL FOR ATTACHMENT OF DEVICE CHASSIS TO DOOR (4X) IF APPLICABLE. REQUIRED FOR SECTIONAL TRIM, EXIT ONLY OR CYLINDER ONLY. SEE NOTES # 4 AND # 5

THIS SIDE UP FOR LHR DOOR

DRILL FOR ATTACHMENT OF DEVICE CHASSIS TO DOOR (4X) IF APPLICABLE. REQUIRED FOR SECTIONAL TRIM, EXIT ONLY OR CYLINDER ONLY. SEE NOTES # 4 AND # 5

NOTES:

1. NOT FOR USE ON LABELED FIRE DOORS
2. VERIFY PRINTED TO SCALE.
3. DIMENSIONS IN **INCHES** [MM]
4. CAUTION: SEX NUTS MAY BE REQUIRED FOR UNREINFORCED DOORS OR COMPOSITE FIRE DOORS. CONSULT DOOR MANUFACTURE'S RECOMMENDATIONS.
5. SEE TRIM TEMPLATE (IF APPLICABLE) OR DEVICE TEMPLATE FOR RELATED MACHINING DETAILS.
6. RECOMMENDED DIMENSION FROM FINISHED FLOOR MAY VARY BY APPLICATION, CODES OR BUILDING SPECIFICATIONS.
7. USE COORDINATOR FOR SEQUENTIAL CLOSING.
8. LHR ACTIVE SHOWN. REVERSE IMAGE FOR RHR ACTIVE.
9. ALWAYS CHECK PDQ WEBSITE FOR MOST RECENT REVISION AT WWW.PDQLOCKS.COM

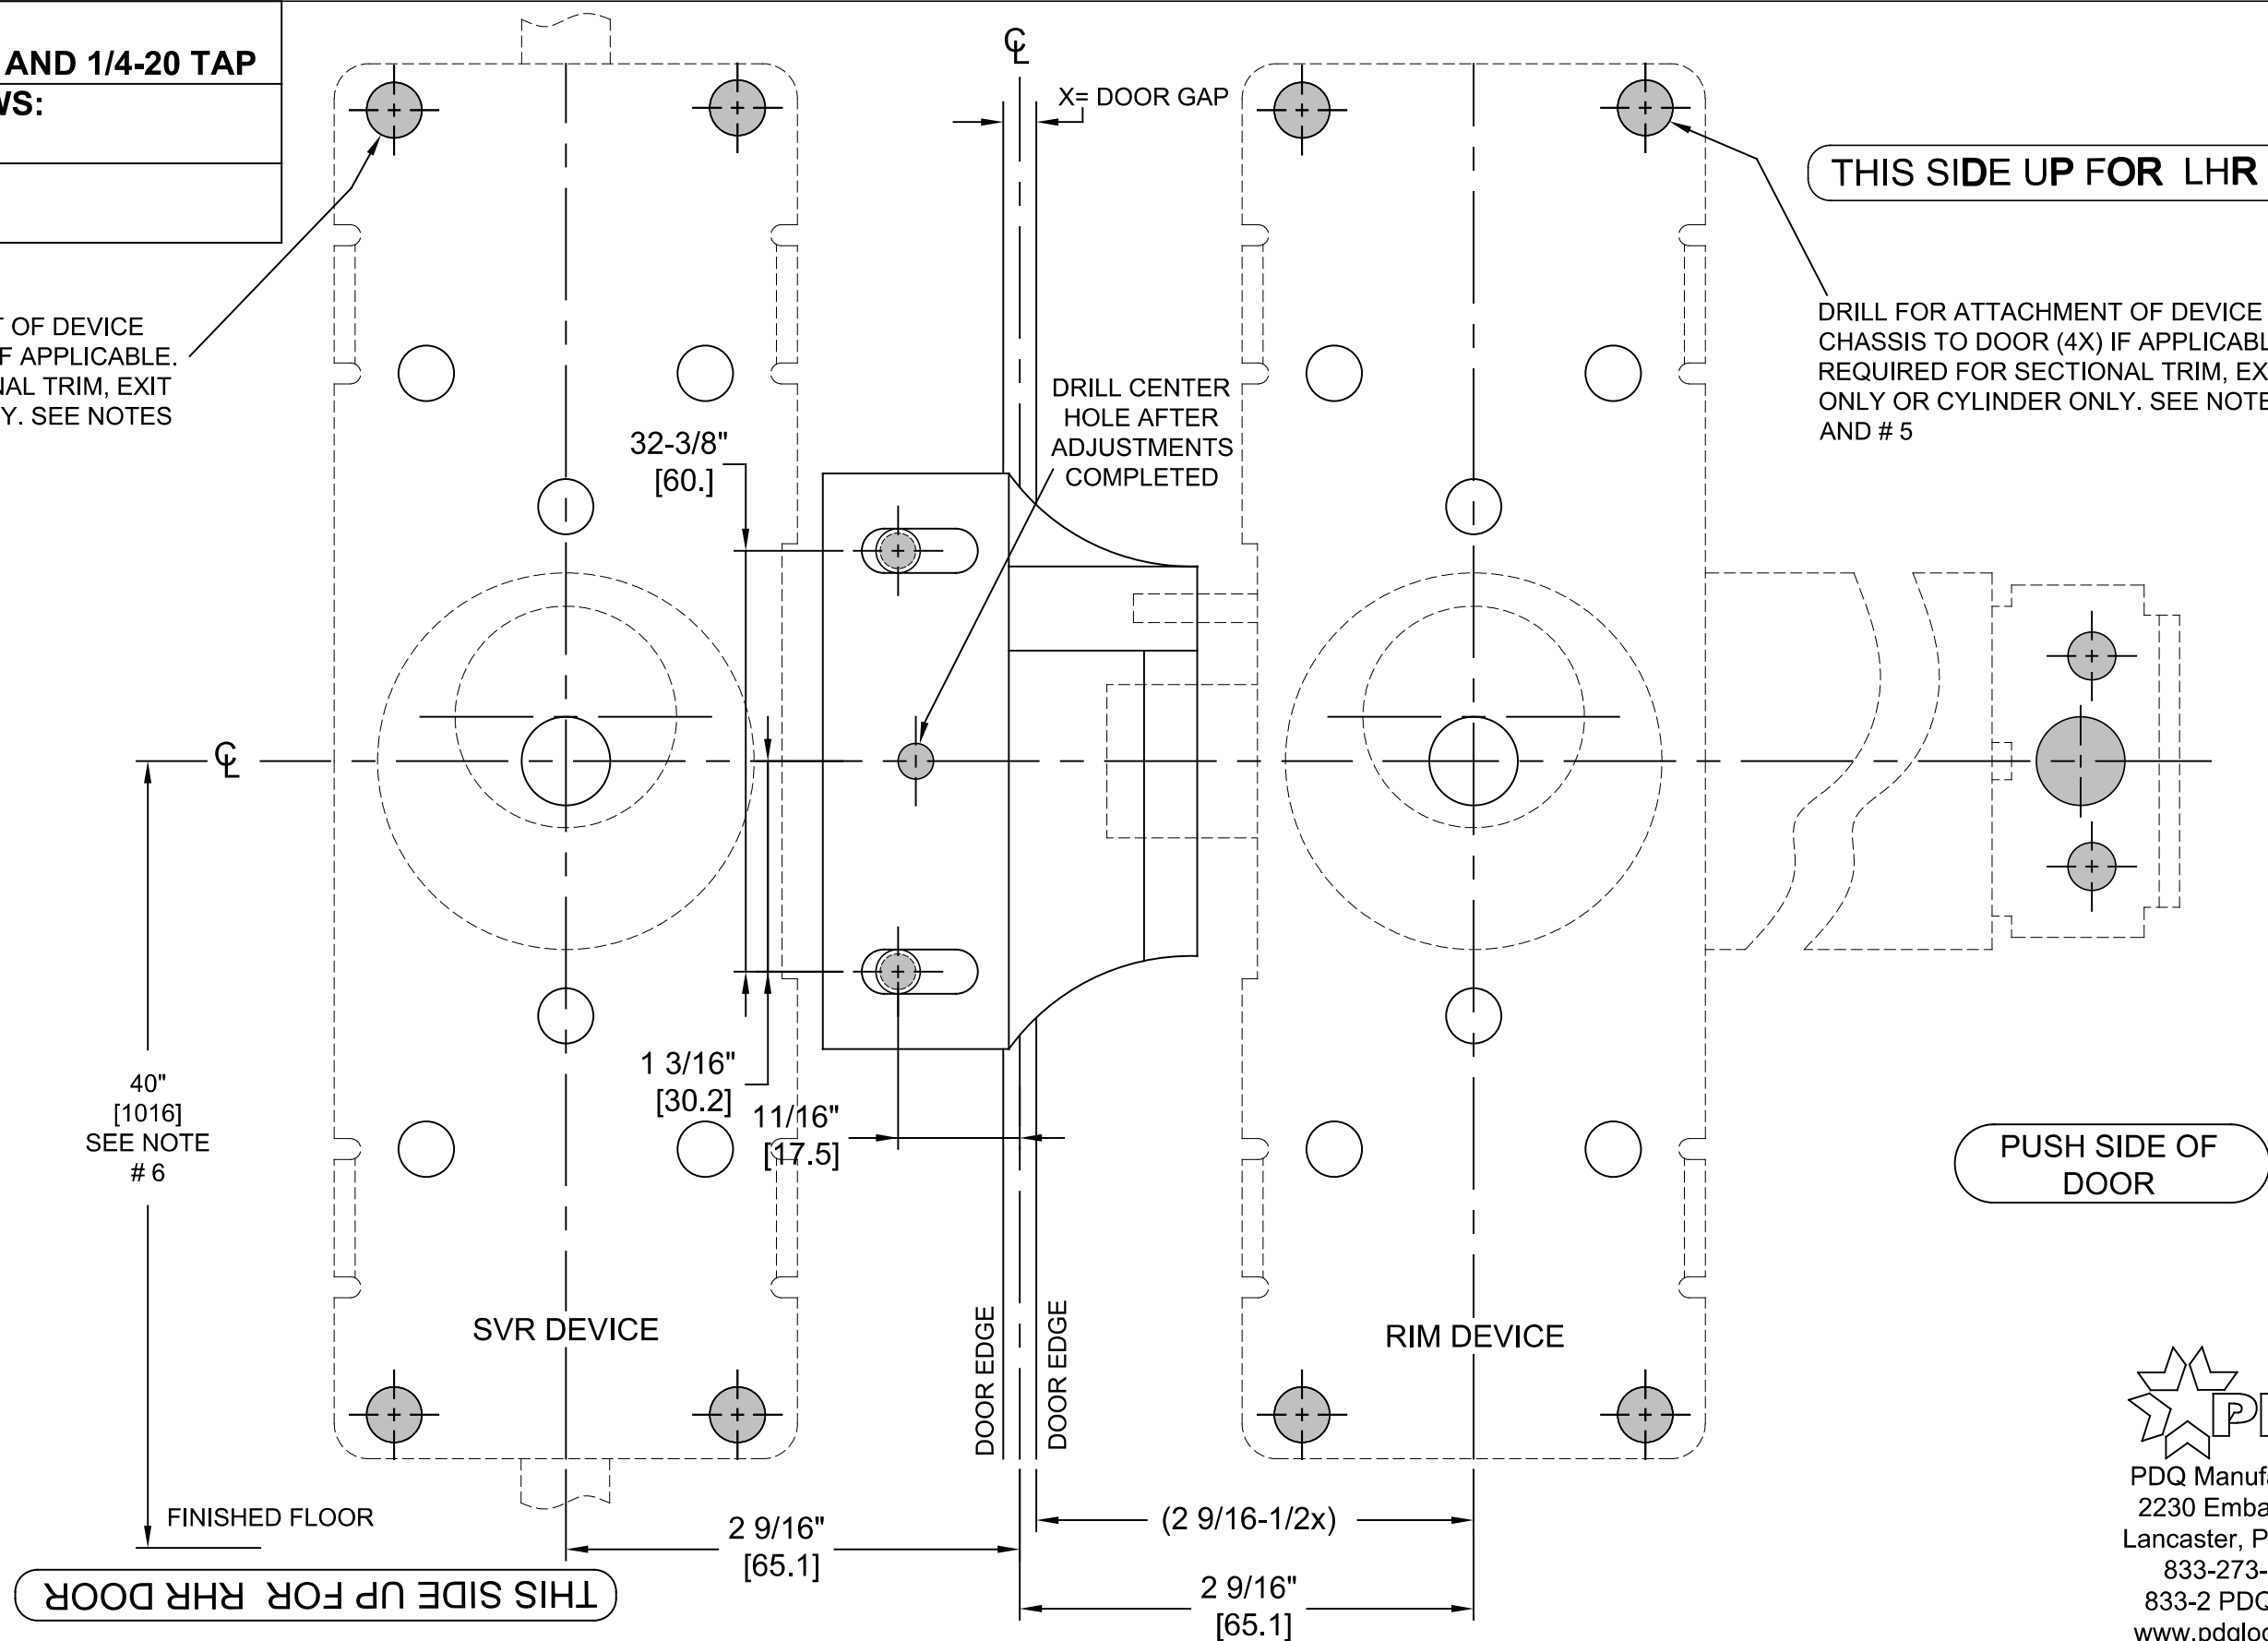

PDQ Manufacturing
2230 Embassy Dr.
Lancaster, PA 17603
833-273-7832
833-2 PDQTECH
www.pdqlocks.com