
6700 "C" SERIES, ASYLUM TRIM ANGLE KNOB INSTALLATION FOR MORTISE LOCK

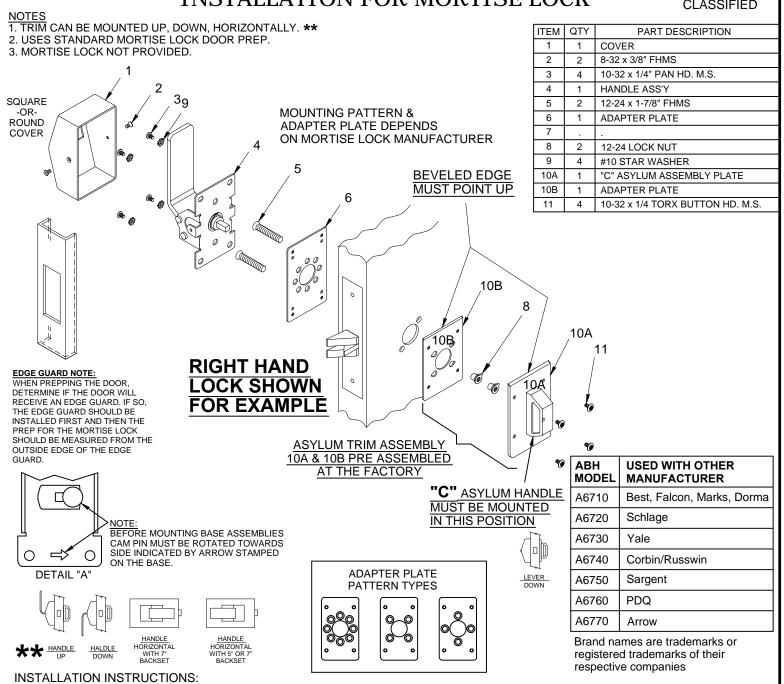



1. Prep for lock body according to mortise lock manufacturer installation.

2. A) Place the pre-assembled asylum trim assembly 10A & 10B on the appropriate side of door.

B) Then place adapter plate (item 6) on outside of door and attach with (2) 12-24 screws (item 5). Do not over tighten.

3. Assemble trim:

- A) With trim in hand. Rotate the cam assembly until the cam pin stops on the appropriate side (see Detail "A").
- B) Place pull side handle on pull side of the door so that spindle engages with the mortise lock and fasten with (4) 10-32 screws (item 3) with (4) star washer (item 9). Test handle ass'y (item 4) for latch retraction. If latch does not extend. Loosen both 12-24 screws (item 5) to adjust alignment.
- C) Test lock for proper operation.
- D) Place cover (item 1) over the trim and secure with (2) 8-32 screws (item 2) on each side.

PATENT No. 6,196,599 & 5,730,478



www.abhmfg.com
E-mail: abhinfo@abhmfg.com
Architectural Builders Hardware Mfg., Inc.
1222 Ardmore Ave., Itasca, IL 60143
630.875.9900; FAX 800.9FAXABH (932.9224)

© 2017 ABH Mfg., Inc. printed in USA

6700-C-00.DWG

6700-C

PAGE 1 OF 1

ISSUED 02-03-17