


6700 SERIES

INSTALLATION FOR MORTISE LOCK

C U L US
CLASSIFIED

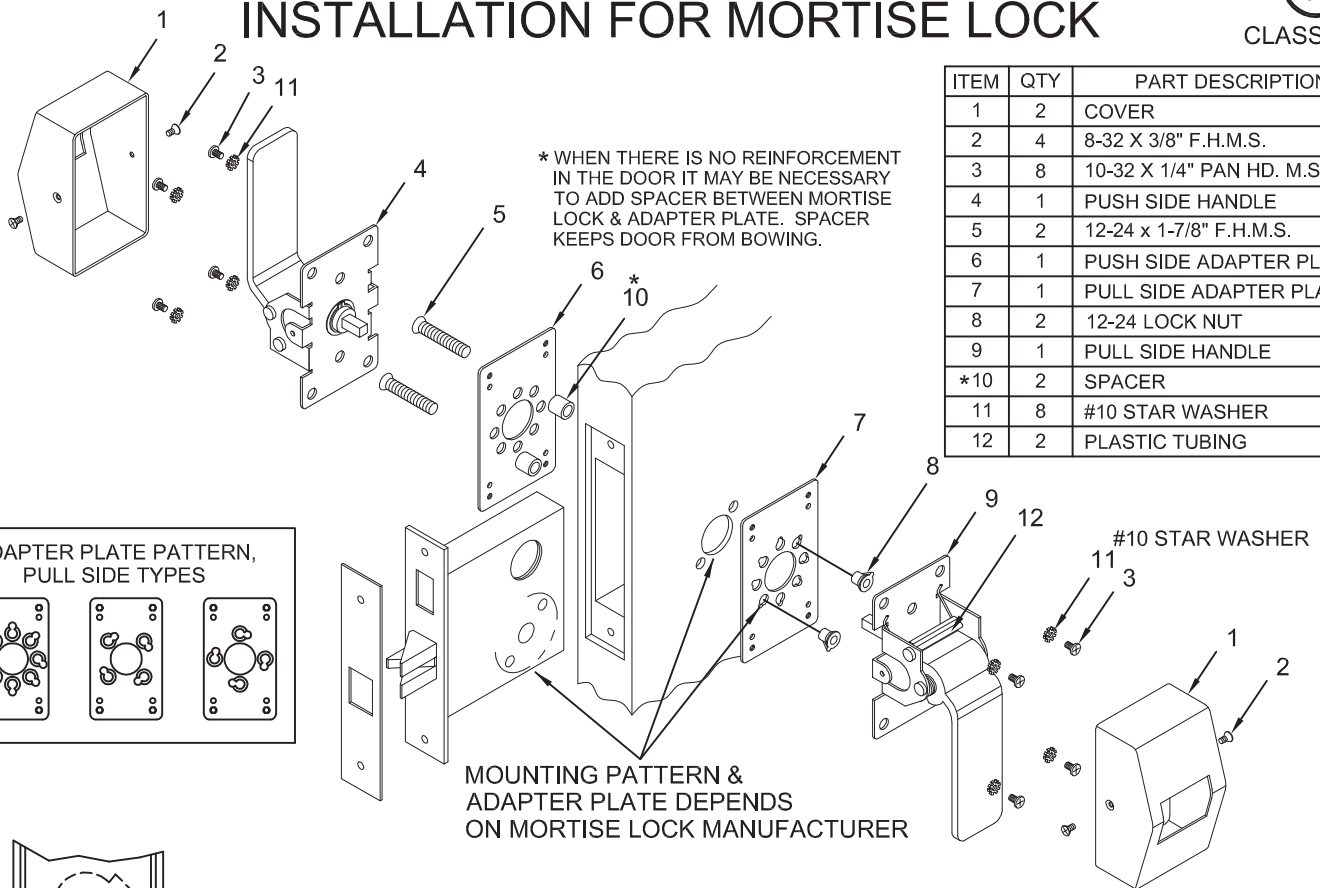

NOTES

1. TRIM CAN BE MOUNTED UP, DOWN, HORIZONTALLY OR IN ANY COMBINATION.
2. USES STANDARD MORTISE LOCK DOOR PREP.
3. MORTISE LOCK NOT PROVIDED.
4. FOR RETROFIT APPLICATION, VERIFY EXISTING TRIM IS THRU-BOLTED.

INSTALLATION INSTRUCTIONS:

1. INSTALL LOCKBODY ACCORDING TO MORTISE LOCK MANUFACTURER INSTALLATION.
2. INSTALL MOUNTING PLATES: DETERMINE IF TRIM IS TO BE MOUNTED HORIZONTAL OR VERTICAL. INSERT (2) LOCKNUTS (item 8) THRU PULL SIDE ADAPTER PLATE (item 7) TO MATCH HOLES ON DOOR FACE. THEN PLACE PUSH SIDE ADAPTER PLATE (item 6) ON OUTSIDE OF DOOR AND ATTACH WITH (2) FLAT HEAD SCREWS (item 5). DO NOT OVER TIGHTEN.
3. ASSEMBLE TRIM:
 - A) TEST BOTH HANDLES TO DETERMINE WHICH IS THE PUSH OR PULL TYPE.
 - B) SELECT THE PULL TRIM FIRST. WITH TRIM IN HAND, ROTATE THE CAM ASSEMBLY UNTIL THE CAM PIN STOPS ON THE APPROPRIATE SIDE (SEE DETAIL "A").
 - C) PLACE PULL SIDE HANDLE ON PULL SIDE OF THE DOOR SO THAT SPINDLE ENGAGES WITH THE MORTISE LOCK AND FASTEN WITH (4) PAN HEAD SCREWS (item 3) WITH (4) STAR WASHERS (item 11). TEST PULL SIDE HANDLE (item 9) FOR LATCH RETRACTION. IF LATCH DOES NOT EXTEND. LOOSEN BOTH FLAT HEAD SCREWS (item 5) TO ADJUST ALIGNMENT.
 - D) MOUNT THE PUSH SIDE HANDLE (item 4) USING THE SAME METHOD.
 - E) TEST LOCK FOR PROPER OPERATION.
 - F) PLACE COVER (item 1) OVER PUSH/PULL TRIMS AND SECURE WITH (2) FLAT HEAD SCREWS (item 2) ON EACH SIDE.

ABH MODEL #	USED WITH OTHER MANUFACTURER
6710	Best, Falcon, Marks
6720	Schlage
6730	Yale
6740	Corbin/Russwin
6750	Sargent
6760	PDQ
6770	Arrow

Brand names are trademarks or registered trademarks of their respective companies

PATENT No. 6,196,599 & 5,730,478

6700 INSTALLATION-04.DWG



www.intldoorclosers.com

East: 800-225-6737

West: 800-544-4422

6700

REVISED 05-17-11